

N₂O Wastewater Sensor Head replacement




1



Follow these steps when the N₂O Sensor Head needs to be replaced. **Handle the new N₂O sensor head with care as any impact can damage the sensor head!** Clean the sensor before proceeding!

Together with the N₂O sensor head replacement you will find a small pack of lubricant for the O-rings on the sensor and housing. You also need the plastic tube you received with the system to change the N₂O sensor head.

2

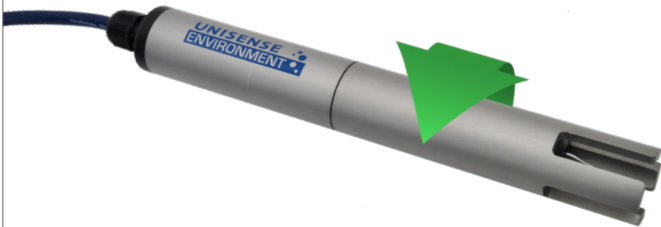

Unscrew the sensor body by holding on to the top (with the logo) and turn bottom part counterclockwise. Be careful when separating the two parts.

3



Use the plastic tube to push the old sensor head out of the sensor body. Next, apply grease to the two O-rings (one on the replacement sensor and one on the housing). You can now proceed to insert the new sensor in the housing!

4



After inserting the new N₂O sensor head, assemble the sensor and connect it to the control box. When the sensor is connected to the control box let it stabilize for a couple of hours before proceeding with the calibration procedure.

5



For the final part of the installation proceed with the N₂O Wastewater Sensor calibration manual!