

## Change interval for internal logging in the N<sub>2</sub>O Wastewater Controller

By default, the controller logs a datapoint every 30 seconds. In a configuration with 2 sensors, the internal data storage will be full after approximately 1 year, which is when the oldest data will be overwritten (First in – First out). The logging interval can be changed if desired e.g. to enhance the internal data storage capacity.

1. Logon and 'MASTER' using passkey 9200
2. Browse to the menu item 'CONFIGURATION'
3. Find the submenu called 'RECORDING'
4. Select the GROUP1
5. Select 'PARAMETER'
6. Select 'STORAGE CYCLE'
7. Enter the new logging interval in seconds
8. Select 'OK' and 'EXIT'



