

Modular Multichannel Measuring Device for Liquid Analysis with Integrated Controller and Paperless Recorder



Operating Manual

**Caution!**

If the device or a sensor connected to it fails abruptly, it is likely that a dangerous overdosage has occurred!
For this case, appropriate precautionary measures must be taken.

**NOTE!**

Read this operating manual before putting the device into service.
Keep the operating manual at a location that is readily accessible to all users.

1	Safety information	15
1.1	Warning symbols	15
1.2	Note symbols	15
1.3	Intended use	16
1.4	Qualification of personnel	16
2	Acceptance of goods, storage, and transport	17
2.1	Checking the delivery	17
2.2	Important information about storage and transport	17
2.3	Returning goods	17
2.3.1	Accompanying letter for repair	17
2.3.2	Protection against electrostatic discharge (ESD)	18
3	Device description	19
3.1	Brief description	19
3.2	Block diagram	21
3.3	Device setup	22
4	Identifying the device version	23
4.1	Nameplate	23
4.2	Order details	25
4.3	Scope of delivery	28
4.4	Accessories	29
5	Mounting	31
5.1	Important information	31
5.2	Dimensions	32
5.3	Surface mounting	33
5.4	Pipe mounting	36
5.5	Panel mounting	38
6	Electrical connection	41
6.1	Installation notes	41
6.2	Installing and connecting cables	43
6.2.1	Opening the terminal compartment on the device	43

Inhalt

6.2.2	Installing cables	44
6.2.3	Preparing coaxial cables for pH/redox electrodes	46
6.2.4	Conductor cross-sections for base unit and power supply unit	48
6.2.5	Conductor cross-sections for optional boards	49
6.3	Galvanic isolation	50
6.4	Connection diagram	51
6.4.1	Overview of connections	51
6.4.2	Analog inputs base unit	52
6.4.3	Analog inputs optional boards	53
6.4.4	Analog outputs	62
6.4.5	Binary inputs	63
6.4.6	Digital outputs, power supply unit board	65
6.4.7	Digital outputs, optional boards	66
6.4.8	Mains power connection	67
6.4.9	Voltage supply outputs	67
6.4.10	Interfaces for data and bus communication	69
7	Startup	75
7.1	Initial startup	75
7.2	Digital sensors	76
7.2.1	Initial startup	76
7.2.2	Restarting and replacing	80
7.3	Function test	81
7.3.1	Checking the optional boards	81
7.3.2	Checking sensors and inputs/outputs	81
8	Operation	83
8.1	Operating concept	83
8.1.1	Passwords and user rights	83
8.1.2	Display and control elements	85
8.1.3	Menu structure	86
8.1.4	Entry of text and numbers	92
8.2	Device menu	94

8.2.1	Log-on/Log-out	97
8.2.2	User levels	98
8.2.3	Functional level	99
8.2.4	Device information	101
8.2.5	Service	102
8.2.6	Calibrating the touchscreen	103
8.2.7	Digital sensors	103
8.3	Alarm/Event list	108
8.3.1	Alarm list	109
8.3.2	Event list	112
8.4	Memory Manager (USB flash drive)	116
8.5	Operating the controllers	119
8.5.1	Automatic control mode	120
8.5.2	Controller in the manual mode	122
8.5.3	Hold mode	123
8.5.4	Optimizing controllers	124
8.6	Operation of the data monitor/recording function	125
8.6.1	Data monitor/recording function control elements	126
8.6.2	History function	129
8.7	Online visualization	130
9	Parameterization	135
9.1	Date and time	135
9.2	Parameter Sets (Controller parameter)	136
9.3	Setpoint values	139
9.4	Manual values	139
10	Configuration	141
10.1	Notes	141
10.2	Basic settings	142
10.3	Display	143
10.3.1	General information	143
10.3.2	Screen	144

Inhalt

10.3.3	Colors	144
10.4	Operation loop	145
10.4.1	General screens	145
10.4.2	Detailed screens	146
10.5	Analog inputs	147
10.5.1	Base unit temperature inputs	147
10.5.2	Universal inputs of base unit and optional boards	149
10.5.3	Calibration timer	152
10.5.4	Analysis inputs pH/Redox/NH ₃	153
10.5.5	Calibration timer	154
10.5.6	CR/Ci analysis inputs (conductive/inductive conductivity)	156
10.5.7	Calibration timer	157
10.5.8	CR/Ci measuring ranges	158
10.6	Analog outputs of base unit and optional boards	161
10.7	Digital inputs of base unit and optional boards	162
10.8	Digital outputs of base unit and optional boards	163
10.9	Alias values	164
10.10	Salinity	166
10.11	Digital sensors	168
10.11.1	General settings for digital sensors	169
10.11.2	Configuration of digital sensors	170
10.11.3	Configuration for sensors with JUMO digiLine electronics	171
10.11.4	Configuration of JUMO ecoLine sensors	181
10.11.5	Configuration of JUMO techLine sensors	184
10.11.6	Sensor alarms	186
10.11.7	CIP/SIP definition (for JUMO digiLine pH and JUMO digiLine CR/Ci only)	190
10.11.8	Calibration timer	190
10.12	Limit monitoring and alarms	191
10.12.1	Limit value monitoring functions	191
10.12.2	Alarms for analog signals and digital sensors	191
10.12.3	Digital signal alarms	195

10.13	Calibration timer	196
10.13.1	Configuration of the calibration timers	196
10.14	Controller	197
10.14.1	Configuration of the controllers	197
10.14.2	Controller inputs	201
10.14.3	Disturbance feedforward control	202
10.14.4	Autotuning	203
10.15	Setpoint value configuration	204
10.16	Timer	205
10.16.1	Control timer	207
10.17	Washtimer	208
10.18	Counter	209
10.19	Ethernet	210
10.20	Serial interfaces	211
10.21	Formula	213
10.22	Logic formula	214
10.23	Manual values (configuration)	214
10.24	External analog inputs	215
10.25	External digital inputs	216
10.26	Flow	216
11	Retrofitting optional boards	219
11.1	Installing optional boards	219
11.2	Energy balance test	222
11.2.1	Monitoring the internal temperature	223
11.2.2	Performing the energy balance test	224
11.3	Ci base calibration	227
12	Calibration in general	233
12.1	Notes	233
12.2	General information	233
12.2.1	General procedure for calibration	233
12.3	Calibration logbook	235

Inhalt

13	Calibrating a pH measuring chain	239
13.1	Notes	239
13.2	General information	239
13.2.1	Calibration methods for pH sensors	239
13.2.2	Calibration default settings for pH sensors	240
13.3	pH Calibration routines	243
13.3.1	Zero-point calibration	243
13.3.2	Two-point and three-point calibration	245
14	Calibrating redox sensors	247
14.1	Notes	247
14.2	General information	247
14.2.1	Calibration methods for Redox sensors	247
14.2.2	Calibration default settings for Redox sensors	248
14.3	Redox calibration routines	249
14.3.1	Zero-point calibration	249
14.3.2	Two-point Calibration	251
15	Calibrating ammonia sensors	253
15.1	Important information	253
15.2	General information	253
15.2.1	Calibration methods for ammonia sensors	253
15.2.2	Calibration default settings for ammonia sensors	253
15.3	Ammonia calibration routines	254
15.3.1	Zero-point calibration	254
16	Calibrating CR conductivity sensors	255
16.1	Notes	255
16.2	General information	255
16.2.1	Calibration methods for CR conductivity sensors (conductive)	255
16.2.2	Calibration presets for CR conductivity sensors	257
16.3	CR calibration routines	259
16.3.1	Calibrating the relative cell constant	259
16.3.2	Calibrating the temperature coefficient	261

16.3.3	Calibrating the TC curve for JUMO digiLine CR	263
17	Calibrating Ci conductivity sensors	265
17.1	Notes	265
17.2	General information	265
17.2.1	Calibration methods for Ci conductivity sensors (inductive)	265
17.2.2	Calibration presets for Ci conductivity sensors	268
17.3	Ci calibration routines	271
17.3.1	Calibrating the relative cell constant	271
17.3.2	Calibrating the temperature coefficient (TC)	273
17.3.3	Calibrating the TC curve	275
18	Calibrating universal inputs	277
18.1	Important information	277
18.2	General information	277
18.2.1	Calibration methods for universal inputs	277
18.2.2	Universal inputs calibration default settings	279
18.3	Universal input calibration routines	281
18.3.1	Zero point/slope calibration (linear scaling)	282
18.3.2	Two-point calibration (linear scaling)	283
18.3.3	Slope calibration (free chlorine, pH/Temp.-compensated)	285
19	Calibrating O-DO sensors	287
19.1	Notes	287
19.2	General information	287
19.2.1	Calibration methods for O-DO sensors	288
19.2.2	Calibration default settings for O-DO sensors	290
19.3	O-DO calibration routine	292
19.3.1	Zero-point calibration for JUMO digiLine O-DO S10	292
19.3.2	End value calibration for JUMO digiLine O-DO S10	294
19.3.3	End value calibration for JUMO ecoLine O-DO	295
19.3.4	Two-point calibration for JUMO ecoLine O-DO	297

Inhalt

20	Calibrating turbidity sensors	299
20.1	Important information	299
20.2	General information	299
20.2.1	Calibration methods for turbidity sensors	299
20.2.2	Calibration presets for turbidity sensors	300
20.3	Calibration routines for turbidity sensors	301
20.3.1	Two-point calibration	301
21	Calibration during disinfection measurements	303
21.1	Important information	303
21.2	General information	303
21.2.1	Calibration methods for disinfection measurand sensors	304
21.2.2	Calibration default settings for disinfection measurand sensors	304
21.3	Calibration routine for disinfection measurands	306
21.3.1	End value calibration	306
21.3.2	306
21.3.3	Two-point Calibration	309
22	PC Setup Program	313
22.1	General information	313
22.2	Installing the JUMO PC setup program	314
22.2.1	Procedure	314
22.3	Logging onto the setup program	316
22.3.1	Rights in the setup program	317
22.4	QuickStart agent	318
22.5	User interface	320
22.5.1	Elements of the user interface	320
22.5.2	Display protection	322
22.5.3	Editing the setup file	325
22.6	Menu bar	327
22.6.1	File menu	327
22.6.2	Data Transfer menu	329
22.6.3	Extras	331

22.6.4	Windows	332
22.6.5	Info	333
22.7	Connection to device	334
22.7.1	Device connections list	334
22.7.2	Configuring the connection with the assistant	336
22.7.3	Configuring the connection without the assistant	343
22.7.4	Searching for a device in the network	345
22.8	Setting up the device with the JUMO PC setup program	347
22.8.1	Identification	347
22.8.2	Configuring and parameterizing	349
22.8.3	User list	349
22.8.4	Country settings	352
22.8.5	Device character set	358
22.8.6	User levels	360
22.8.7	Formula	361
22.8.8	Logic formula	362
22.8.9	Customer-specific linearization	363
22.8.10	Buffer set tables	366
22.8.11	Process screens	367
22.8.12	Email	381
22.8.13	Web server	386
22.9	Diagnostics	388
22.9.1	Calibration logbooks	388
22.9.2	Digital sensor calibration logbooks	388
22.9.3	Digital sensor connection list	388
22.10	Online parameters	390
22.10.1	Date and time	390
22.10.2	Screenshot	391
22.10.3	Ethernet	391
22.10.4	Approval of extra codes	392
22.10.5	Deleting internal measurement data	392
22.10.6	Adjusting / Testing	393

Inhalt

23	Technical data	399
23.1	Analog inputs base unit	399
23.1.1	Temperature measurement input (IN 4)	399
23.1.2	Temperature measurement input (IN 5)	400
23.1.3	Universal input (IN 6)	400
23.1.4	Measuring circuit monitoring base unit	400
23.2	Analog inputs optional boards	401
23.2.1	Universal input (IN 11, IN 12)	401
23.2.2	Analysis input: pH/Redox/NH ₃	401
23.2.3	Analysis input: CR (resistive conductivity)	402
23.2.4	Analysis input: Ci (conductivity, inductive)	403
23.2.5	Temperature compensations	404
23.2.6	Measuring circuit monitoring, optional boards	405
23.3	Analog outputs of base unit and optional boards	406
23.4	Digital inputs base unit	406
23.5	Digital inputs optional boards	406
23.6	Digital outputs, power supply unit board	406
23.7	Digital outputs, optional boards	407
23.8	Voltage supply outputs base unit	407
23.9	Voltage supply outputs, power supply unit board	408
23.10	Voltage supply outputs, optional board	408
23.11	Interfaces	409
23.11.1	Serial Interface RS422/485 (base unit and optional board)	409
23.11.2	PROFIBUS-DP (optional board)	409
23.11.3	Sampling rates for digital sensors	409
23.11.4	Ethernet optional board (10/100Base-T)	410
23.11.5	USB interfaces base unit	411
23.12	Electrical data	412
23.13	Screen Touchscreen	412
23.14	Housing	413
23.15	Functions	414
23.15.1	Controller channels	414

23.15.2	Recording function	415
23.15.3	Customized linearization	415
23.16	Approvals / approval marks	416
24	Annex	417
24.1	Troubleshooting and remedies for digital sensors	417
24.1.1	Possible faults on sensors with JUMO digiLine electronics	417
24.1.2	Possible faults on digital JUMO ecoLine and tecLine sensors	420
24.2	Planning the cabling for digital sensors	423
24.2.1	Introduction	423
24.2.2	Voltage supply to the bus with DC 5 V from a JUMO AQUIS touch S	423
24.2.3	Voltage supply to the bus with DC 5 V from a JUMO digiLine hub	426
24.2.4	Voltage supply to the bus with DC 24 V	428
24.2.5	Voltage supply of the bus for JUMO digiLine CR/Ci	429
24.2.6	Voltage drop calculation	430
24.3	China RoHS	433

Inhalt

1 Safety information

1.1 Warning symbols



DANGER!

This symbol indicates that personal injury from electrocution may occur if the appropriate precautionary measures are not taken.



WARNING!

In conjunction with the signal word "Warning", this symbol indicates that the risk of personal injury or death exists if the appropriate precautionary measures are not taken.



CAUTION!

In conjunction with the signal word "Caution", this symbol indicates that the risk of equipment damage or data loss exists if the appropriate precautionary measures are not taken.



CAUTION!

This symbol indicates that components of the device can be destroyed by electrostatic discharge (ESD = Electro Static Discharge) if the appropriate precautionary measures are not taken. When returning modules, assemblies, or components from the device, use only the ESD packaging provided.



READ THE DOCUMENTATION!

This symbol, which is attached to the device, indicates that the associated documentation for the device must be observed. This is necessary in order to recognize the nature of the potential danger and take the necessary measures to prevent it.



HOT SURFACE!

This symbol is used if burns can result from touching a hot surface.

1.2 Note symbols



NOTE!


This symbol refers to **important information** about the product, its handling, or additional benefits.



REFERENCE!

This symbol refers to **additional information** in other sections, chapters, or other manuals.

1 Safety information

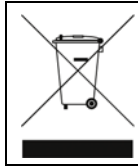

DISPOSAL!

At the end of its service life, the device and any batteries present do not belong in the trash! Please ensure that they are **disposed of** properly and in an **environmentally friendly** manner.

1.3 Intended use

The JUMO AQUIS touch S is designed for measurement, control, and automation tasks in industrial environments as specified in the technical data. Other uses beyond those defined are not viewed as intended uses.

⇒ Chapter 23 "Technical data", page 399

The device has been manufactured in compliance with applicable standards and directives as well as applicable safety regulations. Improper use can result in personal injury or property damage.

To avoid risks, the device may be used only as follows:

- For the intended use
- When in good order and condition
- When taking the technical documentation provided into account

Risks resulting from the application may arise, e.g. as the result of missing safety provisions or wrong settings, even when the device is used properly and as intended.

1.4 Qualification of personnel

This document contains the information required to ensure use of the device as intended. It is intended for technically qualified personnel who have received special training and have the appropriate knowledge in the field of automation technology (measuring and control technology).

Understanding and technically correct observance of the safety instructions and warnings contained in the supplied documentation are prerequisites for safe mounting, installation, and commissioning as well as safety during operation.

Only qualified individuals have the required technical knowledge to interpret and put into practice the safety instructions and warnings used in this documentation in any given situation.

2 Acceptance of goods, storage, and transport

2.1 Checking the delivery

- Ensure that the packaging and its contents are undamaged
- Check the delivery for completeness against the packing slip and order details
- Inform the supplier immediately if there is any damage
- retain damaged parts until the situation has been clarified with the supplier

2.2 Important information about storage and transport

- store the device in a dry, clean environment
- observe the permissible ambient conditions,
⇒ Chapter 23 "Technical data", page 399
- protect the device from shock during transport
- The original packaging offers optimal protection for storage and transport

2.3 Returning goods

- if repairs are needed, return the device in clean condition and in its entirety
- use the original packaging when returning the device

2.3.1 Accompanying letter for repair

Please include the completed accompanying letter for repair when returning goods. Do not forget to state the following:

- Description of the application
- Description of the error that has occurred

The letter of transmittal accompanying the product return can be downloaded from the Internet at www.jumo.de under Services > Repair service.

2 Acceptance of goods, storage, and transport

2.3.2 Protection against electrostatic discharge (ESD)

**CAUTION!**

Electrostatic charges occur in non-ESD-protected environments.
Electrostatic discharge can damage assemblies or components.
For transport purposes, use only the ESD packaging provided.

To prevent damage from ESD, electronic modules, or components with a high internal resistance must be handled, packaged, and stored in an environment that protects against ESD. Measures against electrostatic discharge and electrical fields are described in DIN EN 61340-5-1 and DIN EN 61340-5-2 "Protection of electronic devices from electrostatic phenomena".

When sending back electronic modules or components, please note the following:

- Pack sensitive components only in an environment providing protection against ESD. Workspaces such as this divert electrostatic charges to ground in a controlled manner and prevent static charges due to friction capacities.
- Use only packaging intended specifically for ESD-sensitive modules/components. These must consist of conductive plastics.

No liability is assumed for damage caused by electrostatic discharge (ESD).

3.1 Brief description

Measure

The JUMO AQUIS touch S provides a central platform for the display and processing of pH value, Redox voltage, electrolytic conductivity, resistance of high-purity water and temperature as well as quantities of disinfecting agents such as free chlorine, total chlorine, chlorine dioxide, ozone, hydrogen peroxide and peracetic acid or even flow rates. Pulse frequency inputs (counters) are available for flow measurement. Universal inputs can be used to measure almost any analog measurands using standard signals [0(4) to 20 mA or 0 to 10 V]. The unit can measure and manage up to 25 parameters simultaneously.

Control

In addition to numerous simple alarm, limit value or timed switching functions, up to 4 higher-level, simultaneous control loops can be defined in the JUMO AQUIS touch S. These make use of the time-tested JUMO control algorithms for P, PI, PD, and PID control.

Display

A 5.5" touch-sensitive color screen is responsible for display of all parameters as well as operation and device settings. The plain text operating philosophy simplifies operation of the device by the user. German, English and, on request, French are included in the device at the factory as selectable user interface languages.

⇒ Chapter 4.2 "Order details", page 25

Using the PC setup program, the language library of the unit can be expanded to as many as 15 languages. It is also possible to display languages that use Chinese and Cyrillic characters. As a result, the device is predestined for global use.

Record

A paperless recorder is incorporated to record data. Up to 16 analog measurands and 12 binary signals are recorded and displayed on the screen in their chronological sequence. Storage is tamperproof and facilitates compliance with governmental recording obligations. The data can be extracted via JUMO-PCC software or USB flash drive and evaluated using the PC evaluation software JUMO PCA3000.

3 Device description

Application examples

The modular setup and open structure of the device permits a host of potential applications:


- Municipal and industrial water treatment in wastewater treatment plants
- Process systems
- Drinking and bathing water monitoring
- Pharmaceutical water
- Food and beverage production (CIP/SIP plants)
- Gas scrubbers / air washers
- Cooling tower control
- Ion exchangers
- RO units (reverse osmosis)
- Power stations and energy plants
- Fish breeding
- Desalination of seawater

**NOTE!**

The device is not suitable for use in a potentially explosive atmosphere.


3 Device description

3.2 Block diagram

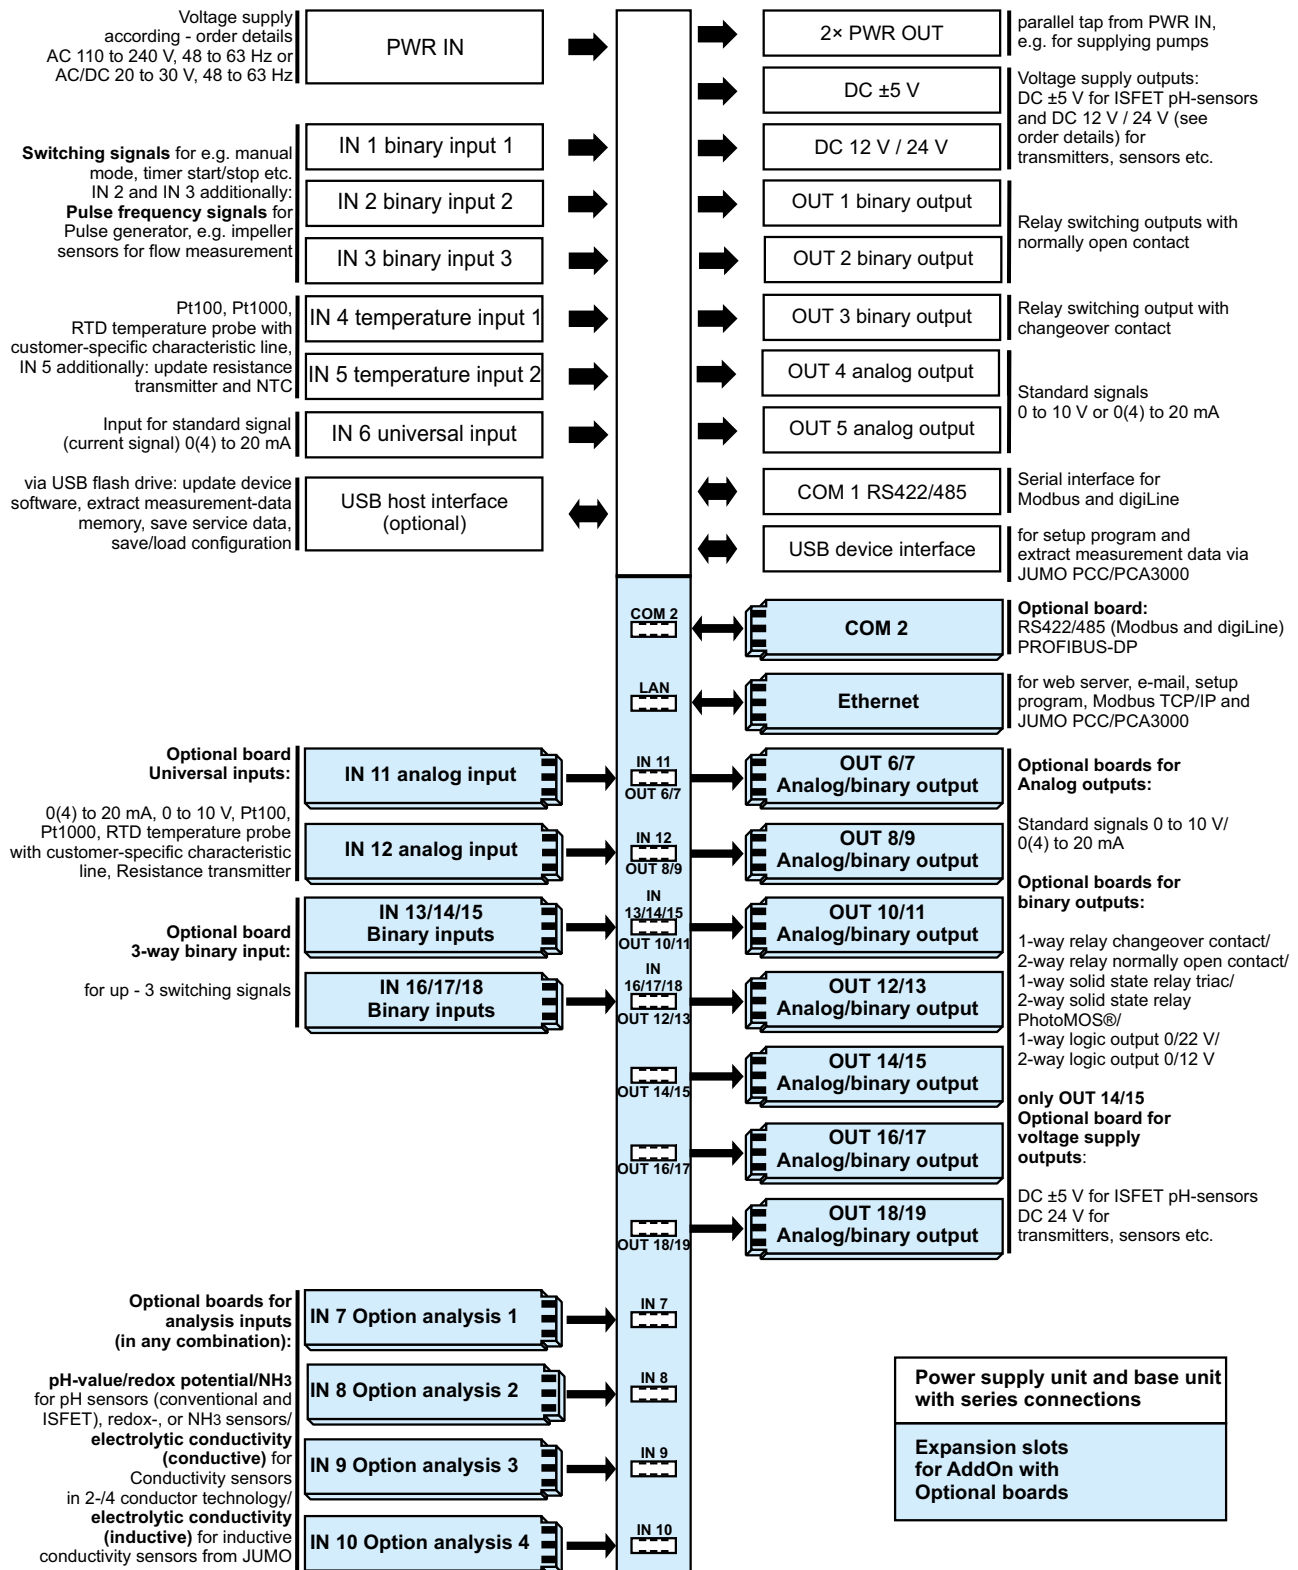

3 Device description

3.3 Device setup

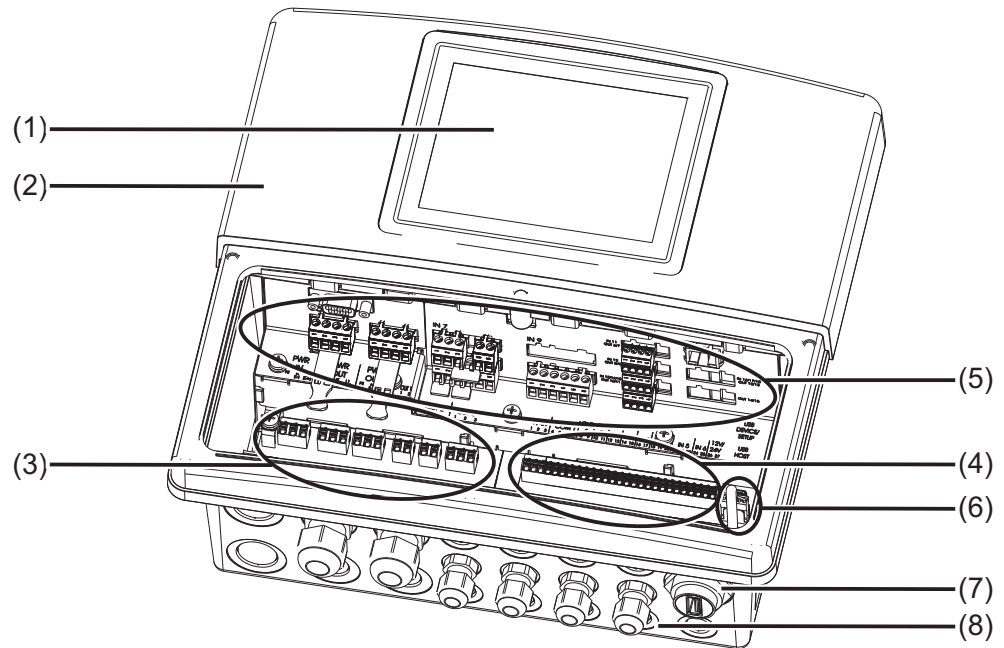


- (1) TFT-touchscreen
- (2) Case (terminal compartment cover opened)
- (3) Connection terminals, power supply unit
- (4) Connection terminals, base unit
- (5) Expansion slots
- (6) USB interfaces (USB device interface and connection for optional USB host socket)
- (7) USB host socket, IP67 (also available, see Extra Code 269 Chapter 4.2 "Order details", page 25)
- (8) Cable fittings


4 Identifying the device version

4.1 Nameplate

The nameplate on the device enclosure identifies the device version. It is located on the outside of the enclosure on the right.

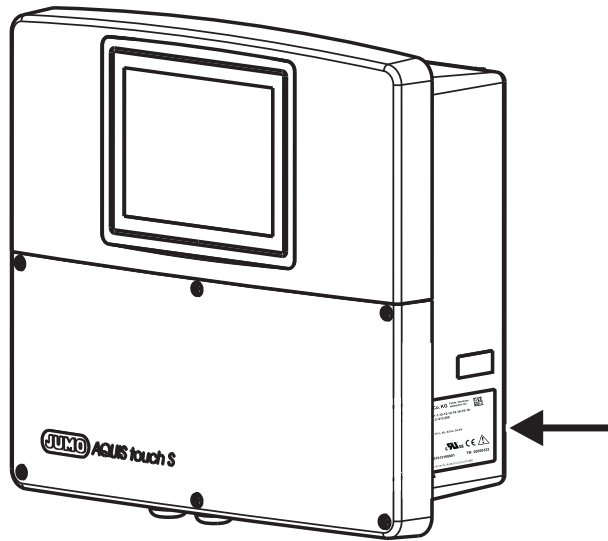

Example of a nameplate

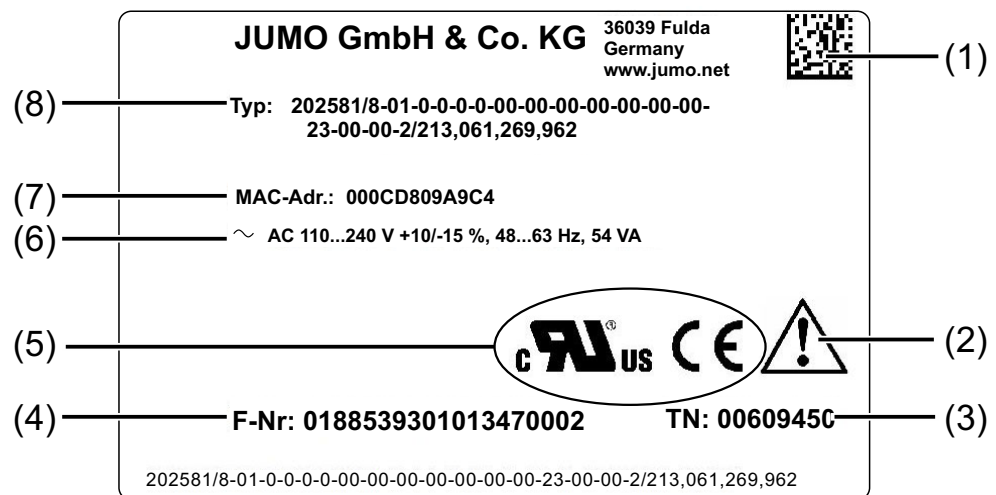

- (1) Data matrix code (for service purposes)
- (2) Information symbol (Read documentation!)
⇒ Chapter 1.1 "Warning symbols", page 15
- (3) Part no.
- (4) Fabrication number
- (5) Approval mark
- (6) Voltage supply
- (7) MAC address of the Ethernet interface (stored in device and therefore also valid for replaced or retrofitted Ethernet optional boards)
- (8) Order code

4 Identifying the device version

It is helpful to become familiar with the technical features of the device prior to startup. Compare the type code on the nameplate with the order details.

⇒ "Order details", page 25

In the event of technical questions, please have the information from the nameplate available for the member of our support team.

4 Identifying the device version

4.2 Order details



NOTE

In addition to the standard languages of German, English, and French, 13 additional languages (e.g. Russian, Chinese, Italian etc.) are available. Please use the contact information on the back of this manual to contact JUMO in this regard.

		Slot
(1) Basic type		
202581	JUMO AQUIS touch S	
(2) Version		
8	Standard with default settings	
9	Customer-specific configuration (specification in plain text)	
(3) Language		
01	German	
02	English	
03	French	
(4) Analysis input 1		IN 7
0	Not used	
1	pH/redox/NH ₃	
2	CR conductive conductivity measurement (2 and 4-pole)	
3	Ci inductive conductivity measurement	
(5) Analysis input 2		IN 8
0	Not used	
1	pH/redox/NH ₃	
2	CR conductive conductivity measurement (2 and 4-pole)	
3	Ci inductive conductivity measurement	
(6) Analysis input 3		IN 9
0	Not used	
1	pH/redox/NH ₃	
2	CR conductive conductivity measurement (2 and 4-pole)	
3	Ci inductive conductivity measurement	
(7) Analysis input 4		IN 10
0	Not used	
1	pH/redox/NH ₃	
2	CR conductive conductivity measurement (2 and 4-pole)	
3	Ci inductive conductivity measurement	

4 Identifying the device version

(8) Input/output 1		IN 11, OUT 6/7
00	Not used	
10	Universal input	
11	Relay (changeover contact)	
12	2× relays (normally open contact)	
13	Solid state relay triac 230 V, 1 A	
14	Logic output 0/22 V	
15	2× logic outputs 0/12 V	
16	Analog output	
17	2× solid state relay PhotoMOS® ^a	
(9) Input/output 2		IN 12, OUT 8/9
00	Not used	
10	Universal input	
11	Relay (changeover contact)	
12	2× relays (normally open contact)	
13	Solid state relay triac 230 V, 1 A	
14	Logic output 0/22 V	
15	2× logic outputs 0/12 V	
16	Analog output	
17	2× PhotoMOS® ^a solid-state relay	
(10) Input/output 3		IN 13/14/15, OUT 10/11
00	Not used	
11	Relay (changeover contact)	
12	2× relays (normally open contact)	
13	Solid state relay triac 230 V, 1 A	
14	Logic output 0/22 V	
15	2× logic outputs 0/12 V	
16	Analog output	
17	2× PhotoMOS® ^a solid-state relay	
18	3× digital inputs	
(11) Input/output 4		IN 16/17/18, OUT 12/13
00	Not used	
11	Relay (changeover contact)	
12	2× relays (normally open contact)	
13	Solid state relay triac 230 V, 1 A	
14	Logic output 0/22 V	
15	2× logic outputs 0/12 V	
16	Analog output	
17	2× PhotoMOS® ^a solid-state relay	
18	3× digital inputs	

4 Identifying the device version

(12) Output 5		OUT 14/15
00	Not used	
11	Relay (changeover contact)	
12	2× relays (normally open contact)	
13	Solid state relay triac 230 V, 1 A	
14	Logic output 0/22 V	
15	2× logic outputs 0/12 V	
16	Analog output	
17	2× PhotoMOS® ^a solid-state relay	
19	Supply voltage output ±5 V DC, 24 V	
(13) Output 6		OUT 16/17
00	Not used	
11	Relay (changeover contact)	
12	2× relays (normally open contact)	
13	Solid state relay triac 230 V, 1 A	
14	Logic output 0/22 V	
15	2× logic outputs 0/12 V	
16	Analog output	
17	2× PhotoMOS® ^a solid-state relay	
(14) Output 7		OUT 18/19
00	Not used	
11	Relay (changeover contact)	
12	2× relays (normally open contact)	
13	Solid state relay triac 230 V, 1 A	
14	Logic output 0/22 V	
15	2× logic outputs 0/12 V	
16	Analog output	
17	2× PhotoMOS® ^a solid-state relay	
(15) Voltage supply		
23	AC 110 to 240 V +10/-15 %; 48 to 63 Hz	
25	AC/DC 20 to 30 V; 48 to 63 Hz	
(16) COM 2 interface		COM 2
00	Not used	
54	RS422/485 Modbus RTU	
64	PROFIBUS-DP	
(17) COM 3 interface		LAN
00	Not used	
08	Ethernet	
(18) Voltage output		
1	DC 12 V	
2	DC 24 V	

4 Identifying the device version

(19) Extra codes	
000	None
213	Recording function
214	Math and logic module
269	USB host socket (IP67)
962	JUMO digiLine protocol activated

^a PhotoMOS® is a registered trademark of Panasonic.

Order code: (1) (2) (3) (4) (5) (6) (7) (8) (9) (10) (11)
 □ / □ - □ - □ - □ - □ - □ - □ - □ - □ - □ - □ -
 Order example: 202581 / 8 - 01 - 1 - 2 - 0 - 0 - 10 - 10 - 13 - 13 -
 (12) (13) (14) (15) (16) (17) (18) (19)
 □ - □ - □ - □ - □ - □ - □ / □ , ...^a
 11 - 11 - 11 - 23 - 64 - 00 - 1 / 213 , 214

^a List all desired extra codes separated by commas.

4.3 Scope of delivery

JUMO AQUIS touch S according to order details
Mini-DVD with JUMO PC setup program as demo version, Adobe Acrobat Reader, operating manual and data sheet in PDF format, GSD generator and JUMO PCC / PCA 3000 as demo version
JUMO AQUIS touch S accessories kit, part no. 00597460
Mounting plate for surface mounting, part no. 00597799
Terminal diagram sticker
Installation instructions in 2 volumes

Content of the JUMO AQUIS touch S accessories kit

6× M12 × 1.5 hexagon nut
6× gasket 10.2 × 14.5 × 1 for M12 cable fitting
6× M12 × 1.5 cable fitting
6× sealing plug for cable fitting M12
3× M16 × 1.5 hexagon nut
3× gasket 14.2 × 19.5 × 1 for M16 cable fitting
3× M16 × 1.5 cable fitting
3× plug for M16 cable fitting
26× cable tie 2.5 × 98 PA
3× self-tapping screw 60 × 16 TORX PLUS® ^a 30IP (for panel mounting kit)
1× snap ferrite to suppress interference from the power supply cable to the device

^a TORX PLUS® is a registered trademark of Acument Intellectual Properties, LLC. USA.

4 Identifying the device version

4.4 Accessories

Order code	Type	Part no.
703571 (20258x)/10	Universal input	00581159
703571 (20258x)/213	Activation of the recording function	00581176
703571 (20258x)/214	Activate math and logic module	00581177
703571 (20258x)/11	Binary output relay (changeover contact)	00581160
703571 (20258x)/12	Binary outputs 2× relay (normally open contact)	00581162
703571 (20258x)/13	Solid state relay triac 230 V, 1 A	00581164
703571 (20258x)/14	Logic output 0/22 V	00581165
703571 (20258x)/15	2 Logic outputs 0/12 V	00581168
703571 (20258x)/16	Analog output	00581169
703571 (20258x)/17	Digital outputs 2× solid state relay PhotoMOS® ^a	00581171
703571 (20258x)/54	Serial interface RS422/485 for Modbus RTU and JUMO digiLine ^b	00581172
703571 (20258x)/64	PROFIBUS-DP	00581173
703571 (20258x)/08	Ethernet	00581174
20258x/3	Analysis input Ci for inductive conductivity	00584265
20258x/2	Analysis input CR for resistive conductivity	00584263
20258x/1	Analysis input pH/Redox/NH ₃	00584264
20258x/18	Digital inputs 3× potential-free contact	00592962
20258x/19	Voltage supply output DC ±5 V, 24 V	00592963
202581/269	USB host socket (IP67)	00608741
	Ethernet RJ-45 connector for self-assembly (4-pole) (PG209791)	00594813
	USB flash drive 2.0 (2 GB) ^c	00505592
	USB cable, A-connector to Mini-B connector, length 3 m	00506252
	Full configuration kit, cable fittings	00597461
	Panel mounting kit	00602403
	Pipe-mounted kit	00602401
	Protective roof kit	00602404
	JUMO PC setup program AQUIS touch S/P, (PG202599)	00594355
	JUMO PCA3000/PCC software package ^d	00431884

^a PhotoMOS® is a registered trademark of Panasonic.

^b The accessories required to install a JUMO digiLine bus can be found in the type sheets and operating manual for the JUMO digiLine components (e.g. JUMO digiLine pH/ORP/T type 202705 or JUMO digiLine hub type 203590).

^c The indicated USB flash drive has been tested and is designed for industrial applications. No liability is assumed for flash drives from other manufacturers.

^d Communication and evaluation software for stored recording function measurement data

4 Identifying the device version

5.1 Important information

**DANGER!**

Under no circumstances may the device be installed or removed while under voltage! This poses the risk of electrocution.

Switch-off the entire system beforehand. This work must be performed only by qualified personnel!

The device must never be installed in potentially-explosive areas! Explosion hazard.

Mounting site

When determining the mounting site, it is important to ensure that the device specifications are respected. The relevant tables with device specification data can be found in the chapter entitled "Technical data". The device must not be exposed to severe oscillations or continuous vibrations. Electromagnetic fields caused by equipment such as motors or transformers must be avoided!

Direct heat radiation, in particular sunlight causes, due to protection type IP67, the inside of the case to heat up and can damage the device. The customer must ensure that the device is not exposed to direct sunlight.

Climatic conditions

The ambient temperature and the relative humidity at the mounting site must correspond to the technical data.

⇒ Chapter 23 "Technical data", page 399

Installation position

The device can be installed in any position. However, the viewing angle of the TFT touchscreen should be taken into consideration.


⇒ Chapter 23 "Technical data", page 399

Space requirement


Ensure adequate access to the region around the cable entry points. The minimum bending radius of the cables must be taken into account!

5 Mounting

5.2 Dimensions

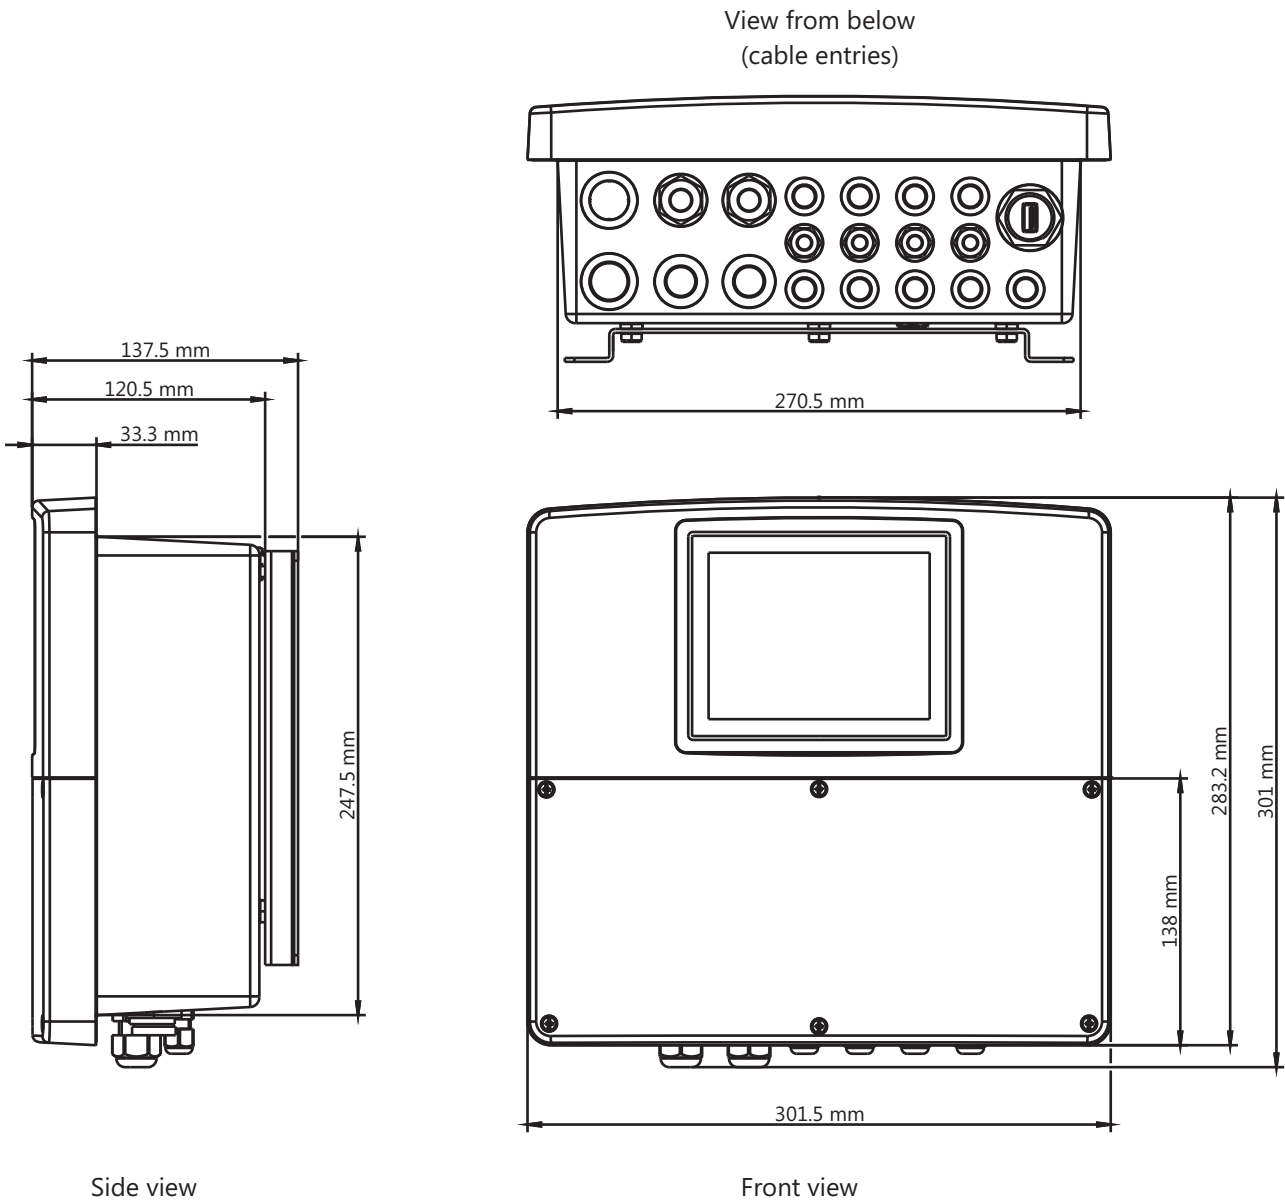


5.3 Surface mounting

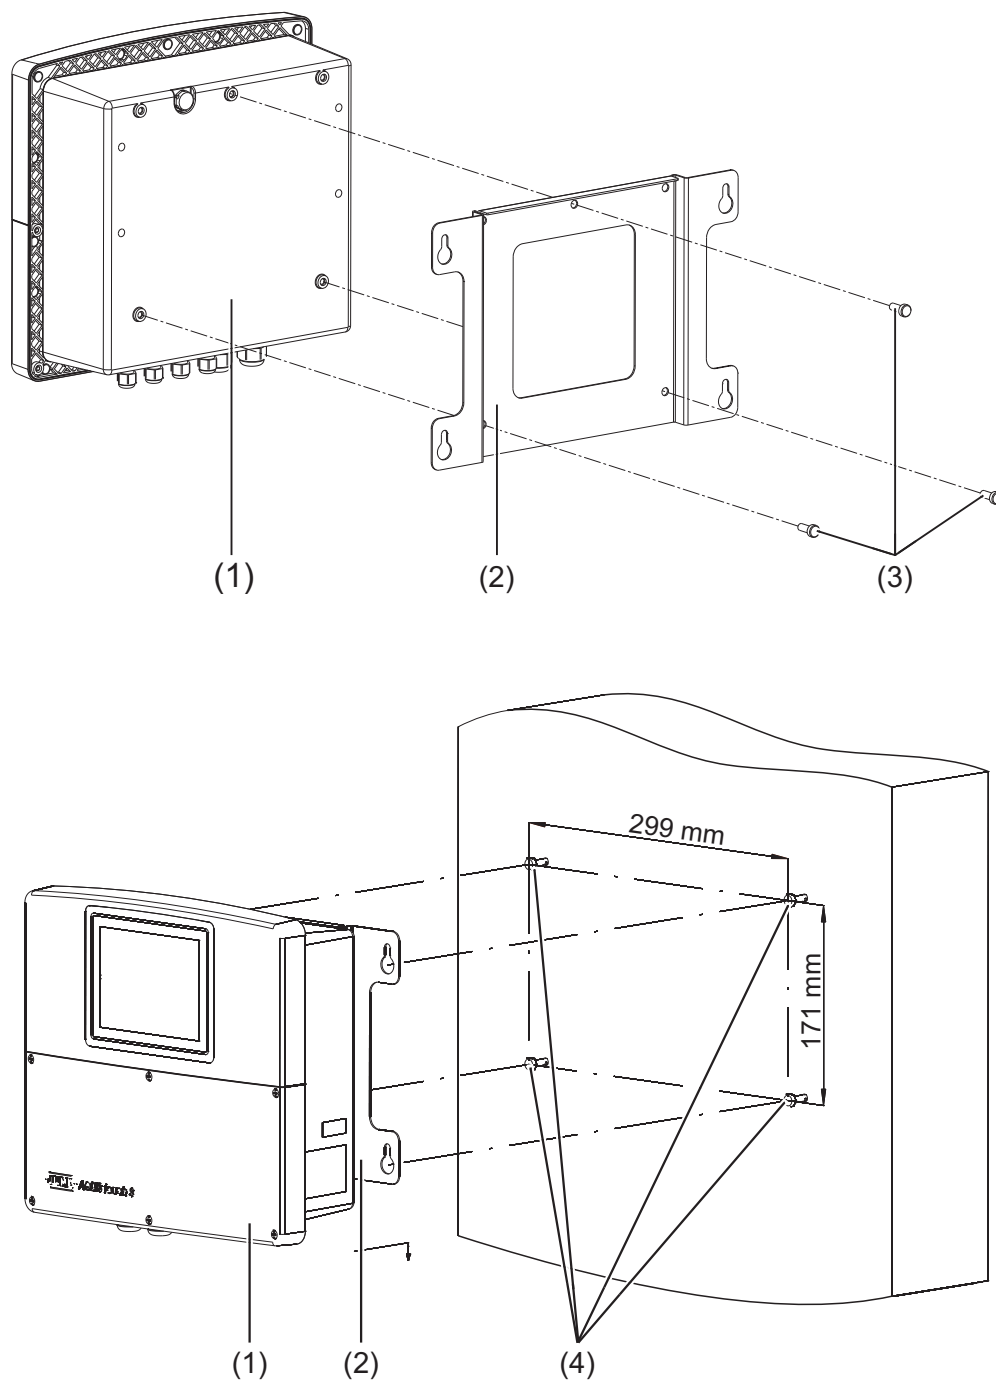

- (1) JUMO AQUIS touch S
- (2) Mounting plate for surface mounting
- (3) Self-tapping screws 60 × 16 TORX PLUS®^a 30IP (supplied as standard with the JUMO AQUIS touch S)
- (4) Fastening screws (hex-headed screws Ø 6 mm)


^a TORX PLUS® is a registered trademark of Acument Intellectual Properties, LLC. USA.

5 Mounting

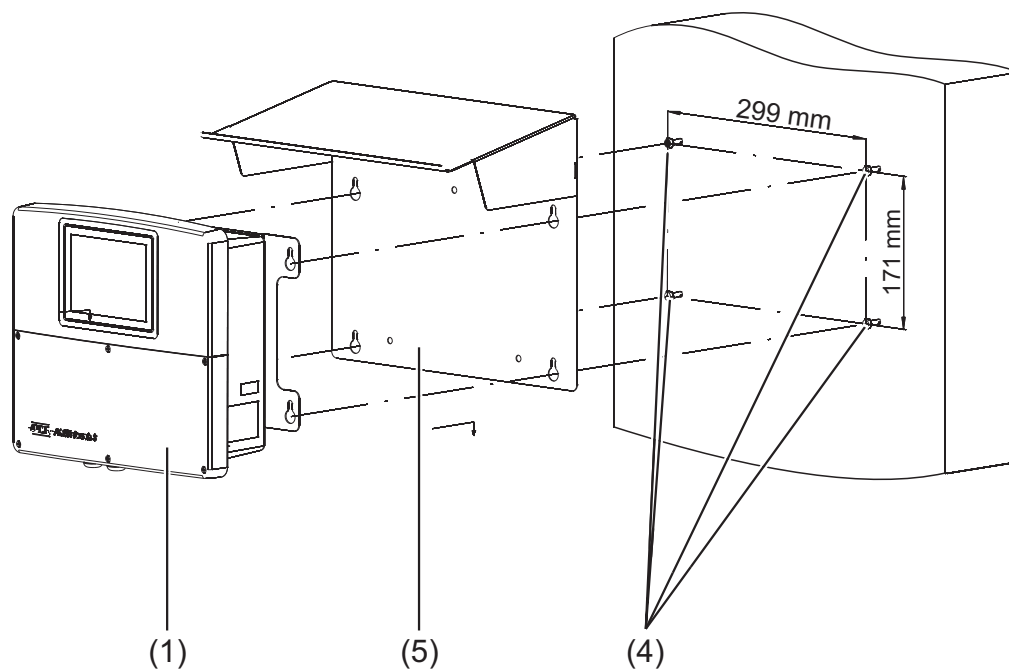

- (1) JUMO AQUIS touch S
- (4) Fastening screws (hex-headed screws \varnothing 6 mm)
- (5) Weather protection canopy, stainless steel 1.4301 (part no. 00602404)

Drilling diagram

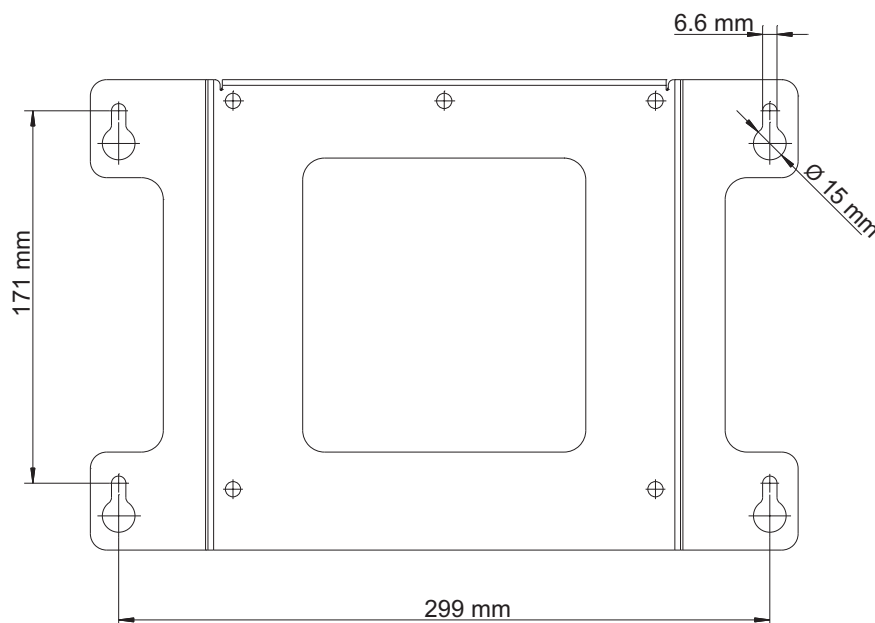

5 Mounting


Procedure

Step	Action
1	Use the drilling diagram to mark the mounting holes on the mounting surface. You can also use the mounting plate as a template for this purpose. Leave enough space around the cable entries to permit routing of cables.
2	Use suitable fastening screws (4) in order to ensure that the screw heads are at a distance of about 1 cm from the mounting surface.
3	Using the screws (3), fasten the mounting plate (2) to the back of the unit (1).
4	Hook the device (1) and where applicable the weather protection canopy (5) with the mounting plate into the screws.
5	Tighten the fastening screws.

5 Mounting

5.4 Pipe mounting

The optional pipe mounting kit (part no. 00602401) is needed for pipe mounting. A weather protection canopy (part no. 00602404) is also available.

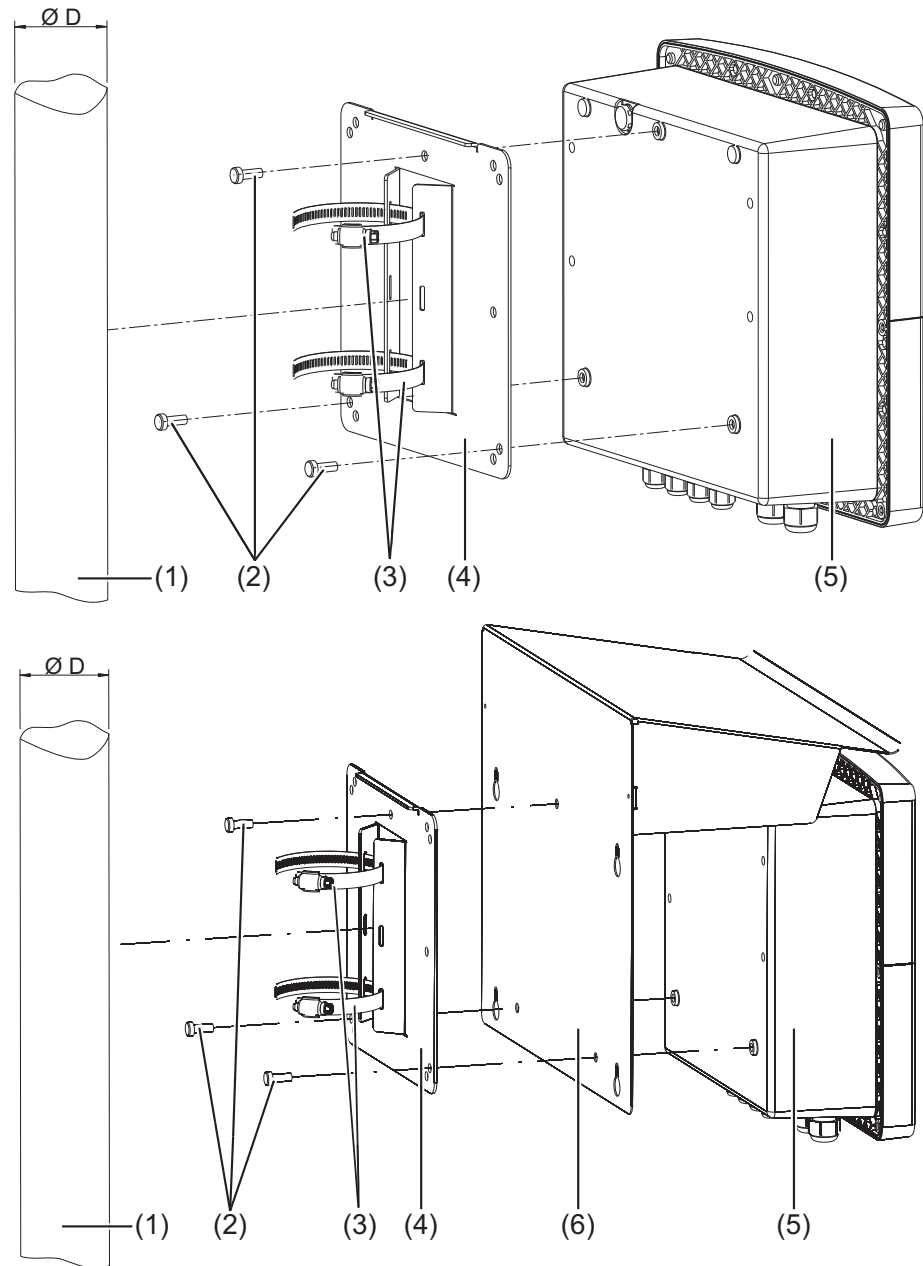

- (1) Pipe/mast (customer provision) with a diameter of 35 to 55 mm
- (2) Self-tapping screws 60 × 16 TORX PLUS®^a 30IP (supplied as standard with the JUMO AQUIS touch S)
- (3) Pipe clips from the pipe mounting kit (part no. 00602401)
- (4) Mounting plate for pipe mounting from the pipe mounting kit (part no. 00602401)
- (5) JUMO AQUIS touch S
- (6) Weather protection canopy, stainless steel 1.4301 (part no. 00602404)

^a TORX PLUS® is a registered trademark of Acument Intellectual Properties, LLC. USA.

5 Mounting

Procedure

Step	Action
1	Using the screws (2), fasten the mounting plate (4) and possibly the weather protection canopy (6) to the right side of the unit (5).
2	Insert the two pipe clips (3) through the slots in the mounting straps on the mounting plate (4) as shown in the drawing.
3	Place the device on the pipe/mast (1) such that the pipe clips (3) enclose the pipe; close the pipe clips (3) and tighten them.

5 Mounting

5.5 Panel mounting

The optional panel mounting kit (part no. 00602403) is needed for installation in a control panel.

Using this kit, the device can be installed in control panels or machine/equipment panels, for instance, and fastened from behind. When installed in this way, the lines connecting to the device are protected behind the panels.


**NOTE!**

Installation in a control panel provides protection class IP20. When the JUMO AQUIS touch S is installed in the wall of control cabinets, the protection type of the control cabinet no longer applies; instead, the protection class for installation in a control panel applies (IP20).

**CAUTION!**

Ensure that the control panel provides adequate support for the device. The weight values listed in the technical data must be taken into account to ensure adequate mechanical stability for control panel installation.
⇒ Chapter 23.14 "Housing", page 413

5 Mounting

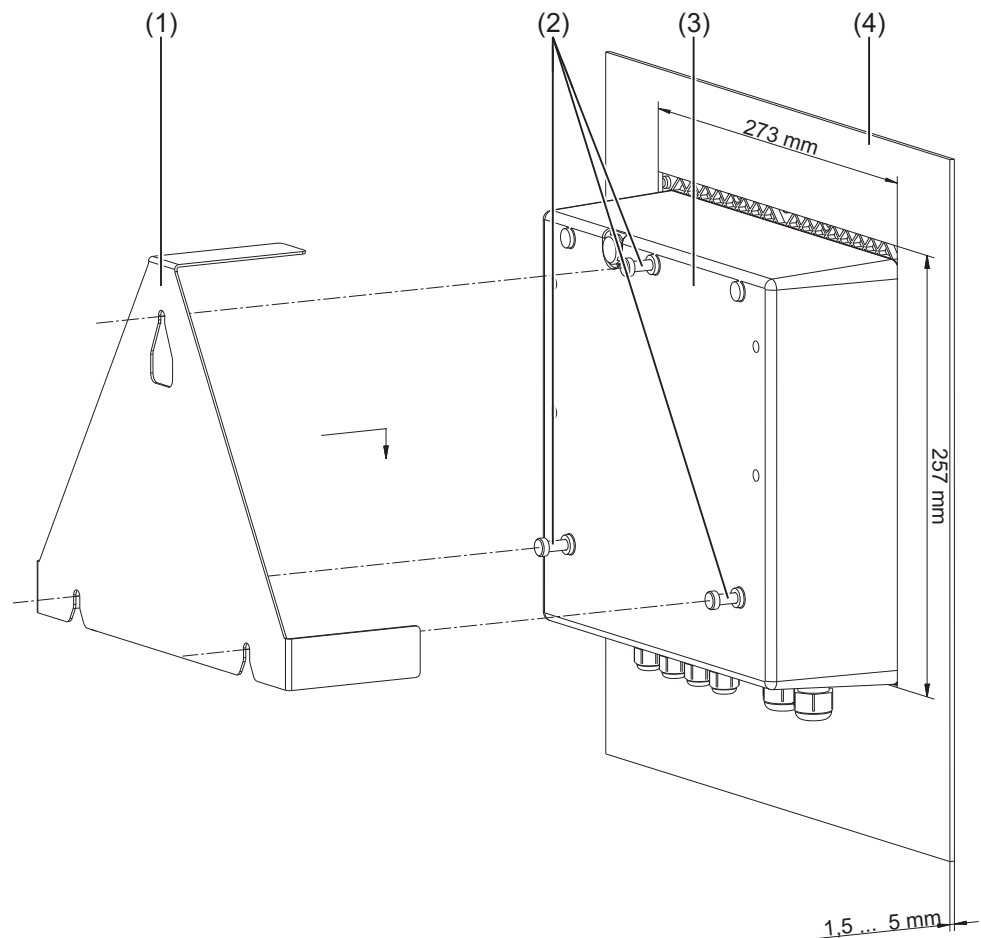

- (1) Fastening bracket, stainless steel 1.4301 from the panel mounting kit (part no. 00602403)
- (2) Self-tapping screws 60 × 16 TORX PLUS®^a 30IP (supplied as standard with the JUMO AQUIS touch S)
- (3) JUMO AQUIS touch S
- (4) Control panel with cutout 273 mm × 257 mm
Material thickness of panel: 1.5 to 5 mm

^a TORX PLUS® is a registered trademark of Acument Intellectual Properties, LLC. USA.

Procedure

Step	Action
1	Insert the screws (2) about 2 to 3 threads into the holes provided for this purpose in the back of the device (3).
2	Place the device in the cutout provided for this purpose in the control panel (4) as shown in the drawing.
3	Hook the fastening bracket (1) into the screws (2) inserted into the back of the device (3).
4	Securely tighten the screws (2) in the back of the device.

6.1 Installation notes

**DANGER!**

Observe the following instructions!

Qualification of personnel

- The electrical connection must only be carried out by qualified personnel.

Electrical wiring

- When selecting the electrical wiring material as well as when installing and connecting the device electrically, comply with the requirements of DIN VDE 0100 "Low-voltage electrical installations" and the applicable country-specific regulations (e. g. based on IEC 60364).
- The input, output, and power supply lines must be separated from one another spatially and not laid in parallel.
- Select suitable cables for sensors and interfaces (shielded and twisted or coaxial cable). These lines must not be installed near live electrical components or current-carrying wiring.
- Route sensor lines and bus lines only as uninterrupted lines (not connected via terminal blocks or the like).
- Provide shielding in accordance with the connection diagram on the device.
- In a star wiring configuration, grounding wires must be connected to an equipotential grounding busbar and insulation must be intact. Keep lines as short as possible. Ensure proper potential equalization/bonding.

6 Electrical connection

Electrical safety


- Disconnect all phases of the power supplied to the device (power grid, outside power supply sources for relays/solid state relays etc.) If current-carrying components could be touched while work is being performed.
- Fuses for power supply circuits should be rated at no more than 10 A (slow-blow).
- To prevent destruction of device outputs in the event of an external short circuit, short-circuit currents in circuits with relay or semiconductor outputs should be limited through use of appropriate fuses.
- The device is not suitable for installation in potentially explosive areas.
- Besides incorrect installation, wrong settings on the device can adversely affect performance of the connected process. For this reason, independently operating safety devices, e.g. pressure relief valves, temperature limiters/monitors, liquid-metering limiters and overflow prevention devices should be provided and adjustment of them restricted only to train technical personnel. Appropriate safety regulations must be observed in this connection.
- Plug-in screw terminal strips should not be unplugged until after the power has been disconnected.

References to other information

- The electromagnetic compatibility conforms to the standards and regulations cited in the technical data.
- The specifications for galvanic isolation must be taken into account during planning and electrical installation.
⇒ Chapter 6.3 "Galvanic isolation", page 50

6.2 Installing and connecting cables

6.2.1 Opening the terminal compartment on the device

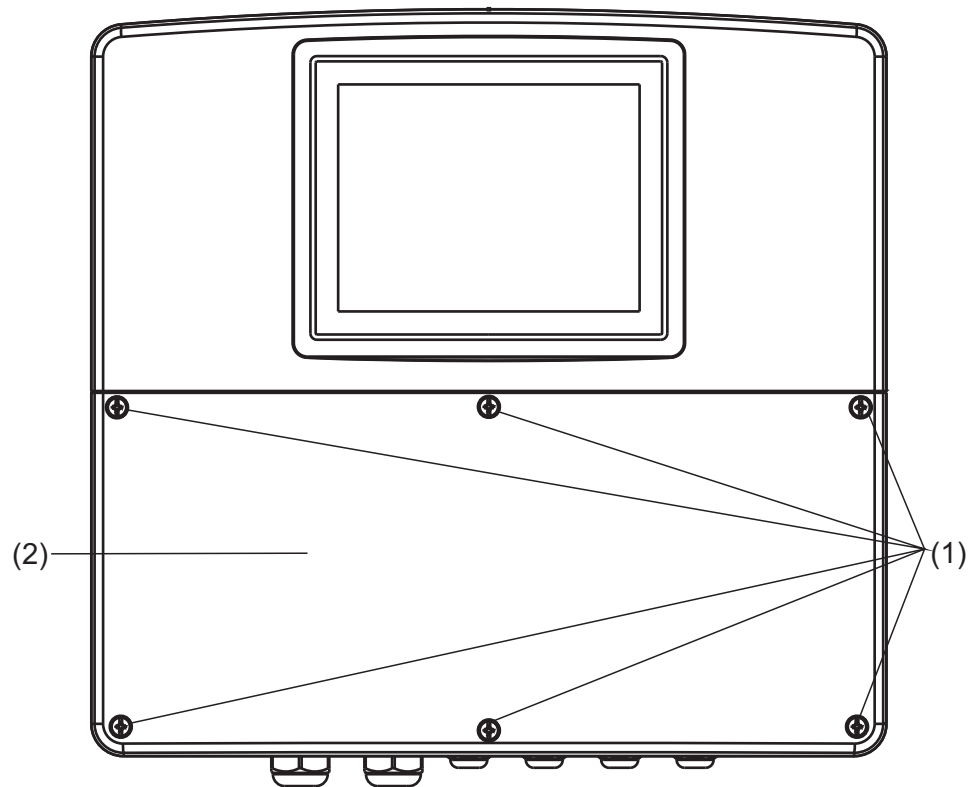

Step	Action
1	Loosen the screws on the terminal compartment cover.
2	Remove the terminal compartment cover.




NOTE

After all work in the terminal compartment has been completed, ensure that the terminal compartment cover is reattached. All 6 screws must be tightened to a torque of 1 Nm. Otherwise, the IP67 protection class is no longer provided. In the open state, the device has the protection class IP20.

6 Electrical connection

6.2.2 Installing cables

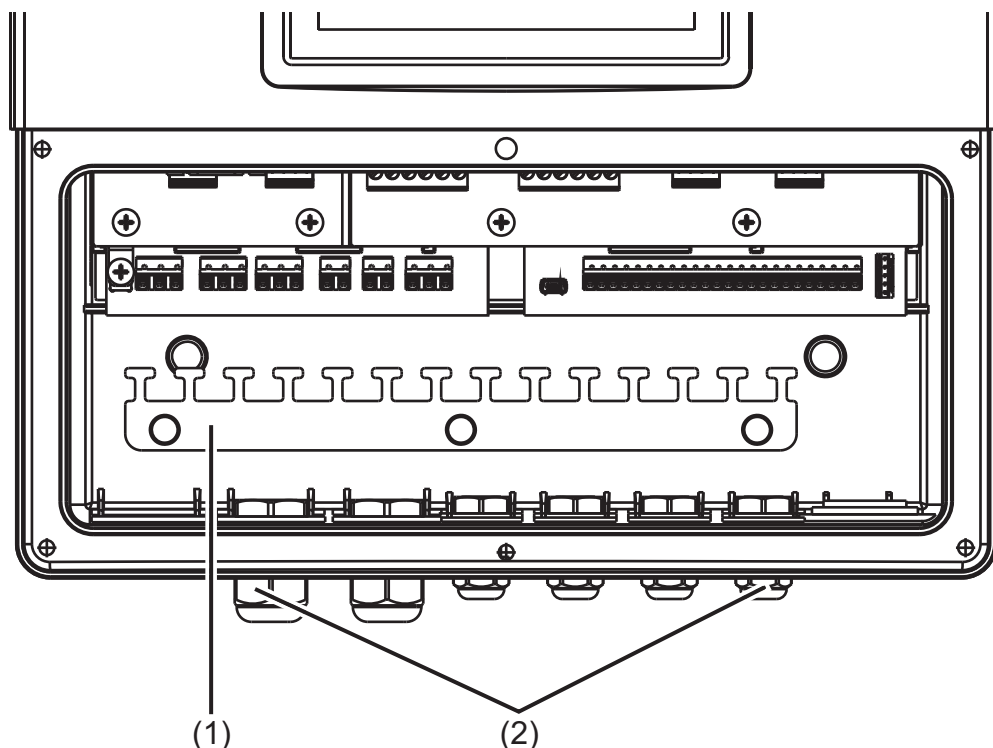

- (1) Strain relief strip
(2) IP67 cable fittings

Procedure

Step	Action
1	Insert the provided cable fittings, together with the appropriate seals, into the corresponding cable entry openings in the enclosure and then tighten the glands with the lock nuts.
2	Insert one cable through each cable fitting and then tighten the cable fitting. Ensure that the cable is sealed properly.
3	Use the provided sealing plugs to close off unneeded cable fittings and then tighten the cable fittings securely.
4	Multi-conductor cables Strip the sheathing off the cable to a point where the sheathing still reaches the upper edge of the tongue on the strain relief strip (1). When putting together cables, ensure that shielding is properly insulated. Preparing coaxial cables: ⇒ Chapter 6.2.3 "Preparing coaxial cables for pH/redox electrodes", page 46
5	To relieve any strain on the cable, use a cable tie to attach the cable to a free tongue on the strain relief strip (1).
6	Attach the supplied snap ferrite to the power supply cable outside the device housing. Simply press the snap ferrite around the cable until it snaps together.
7	Connect the cable in accordance with the connection diagram. ⇒ Chapter 6.4 "Connection diagram", page 51

**NOTE**


Open or improperly sealed cable fittings void the protection type IP67 for the enclosure. Ensure that all cable fittings are sealed and tightened to the correct installation torque. Unused fittings must be sealed with the plugs from the scope of delivery for the device.

⇒ Chapter 23.14 "Housing", page 413

6 Electrical connection


6.2.3 Preparing coaxial cables for pH/redox electrodes

Coaxial cable with Shield-Kon® connector¹

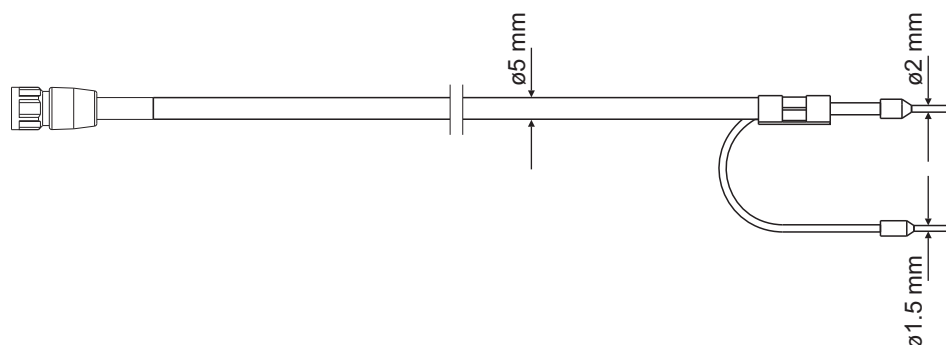


Length	Part no.
1.5 m	00085154
5 m	00307298
10 m	00082649

Preparing your own coaxial cable

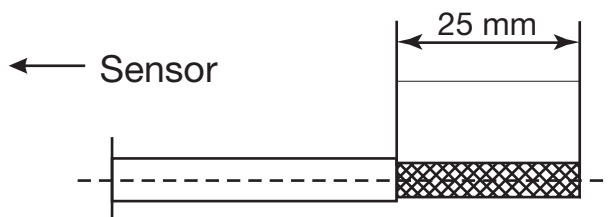


Remove outer sheathing from the cable > Pull back the braided shield

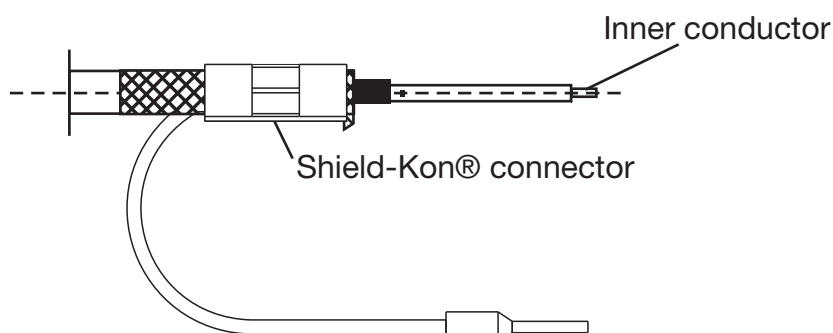

Remove black, semiconducting layer (see image) > Strip insulation off inside conductor > Attach Shield-Kon® connector¹ for shield

¹.Shield-Kon is a registered trademark of THOMAS & BETTS INTERNATIONAL, Inc., Wilmington Del., US.

6 Electrical connection

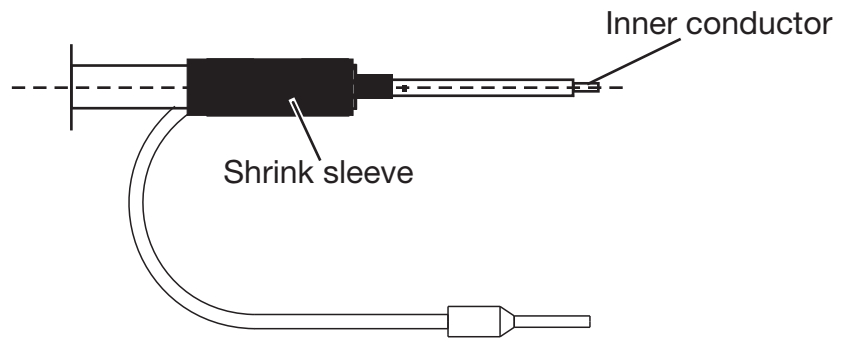


Use shrink tubing to insulate the braided shield




NOTE

The black, semiconducting layer must not touch with the inside conductor! This would short-circuit the signal from the pH electrode.

Preparing a shielded multiconductor cable

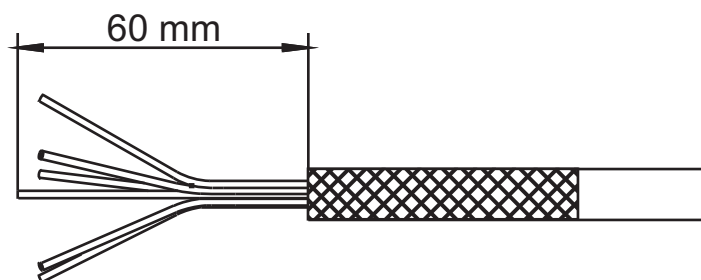


Strip the insulation off the connecting cable and pull back the shield

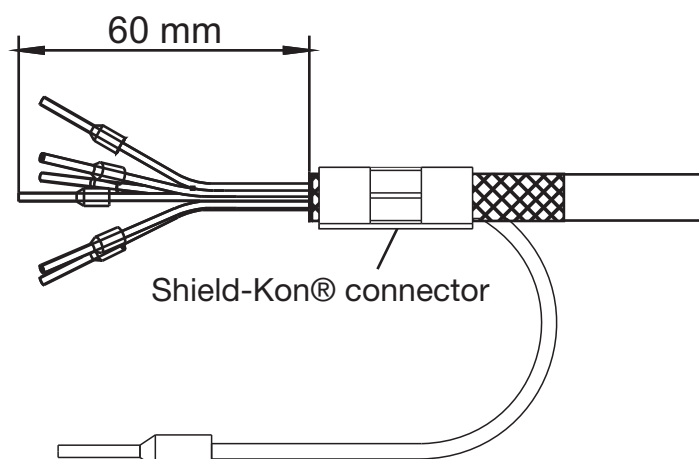

Attach wire ferrules to the ends of the conductors and a Shield-Kon® connector¹ for shielding

¹Shield-Kon is a registered trademark of THOMAS & BETTS INTERNATIONAL, Inc., Wilmington Del., US.

6 Electrical connection

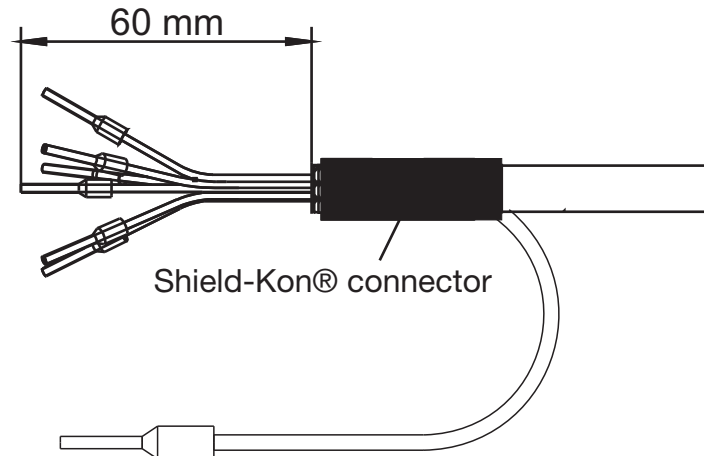

Use shrink tubing to insulate the shield and Shield-Kon® connector¹

6.2.4 Conductor cross-sections for base unit and power supply unit

The terminals on the base unit and power supply unit are spring-cage terminals.

Ferrule	Conductor cross section		Length to strip
	minimal	Maximum	
without ferrule			
Power supply unit	0.2 mm ²	1 mm ²	8 mm
Base unit	0.2 mm ²	1 mm ²	8 mm
Ferrule without lip			
Power supply unit	0.25 mm ²	0.75 mm ²	8 mm
Base unit	0.25 mm ²	0.75 mm ²	8 mm
with ferrule with lip			
Power supply unit	0.25 mm ²	0.75 mm ²	8 mm
Base unit	0.25 mm ²	0.75 mm ²	8 mm
Rigid			
Power supply unit	0.2 mm ²	1.5 mm ²	8 mm
Base unit	0.2 mm ²	1.5 mm ²	8 mm

1.Shield-Kon is a registered trademark of THOMAS & BETTS INTERNATIONAL, Inc., Wilmington Del., US.

6 Electrical connection

6.2.5 Conductor cross-sections for optional boards

The terminals on optional boards are plug-in screw terminals.

Optional boards for	Ferrule	Conductor cross section		Length to strip
		minimal	Maximum	
Universal inputs	without ferrule	0.14 mm ²	1.5 mm ²	7 mm
Analog outputs	with ferrule with lip	0.25 mm ²	0.5 mm ²	7 mm
Digital inputs	Ferrule without lip	0.25 mm ²	1.5 mm ²	7 mm
Digital outputs PhotoMOS® ^a	Rigid	0.14 mm ²	1.5 mm ²	7 mm
Logic outputs				
Voltage supply output				
Analysis inputs pH/Redox/NH ₃	without ferrule	0.2 mm ²	2.5 mm ²	7 mm
Analysis inputs CR ^b	with ferrule with lip	0.25 mm ²	1.5 mm ²	7 mm
Analysis inputs Ci ^c	Ferrule without lip	0.25 mm ²	2.5 mm ²	7 mm
Digital outputs relay				
Digital outputs triac	Rigid	0.2 mm ²	2.5 mm ²	7 mm


^a PhotoMOS® is a registered trademark of Panasonic.

^b CR analysis inputs = Analysis inputs for resistive conductivity

^c Analysis inputs Ci = Analysis inputs for inductive conductivity

6 Electrical connection

6.3 Galvanic isolation

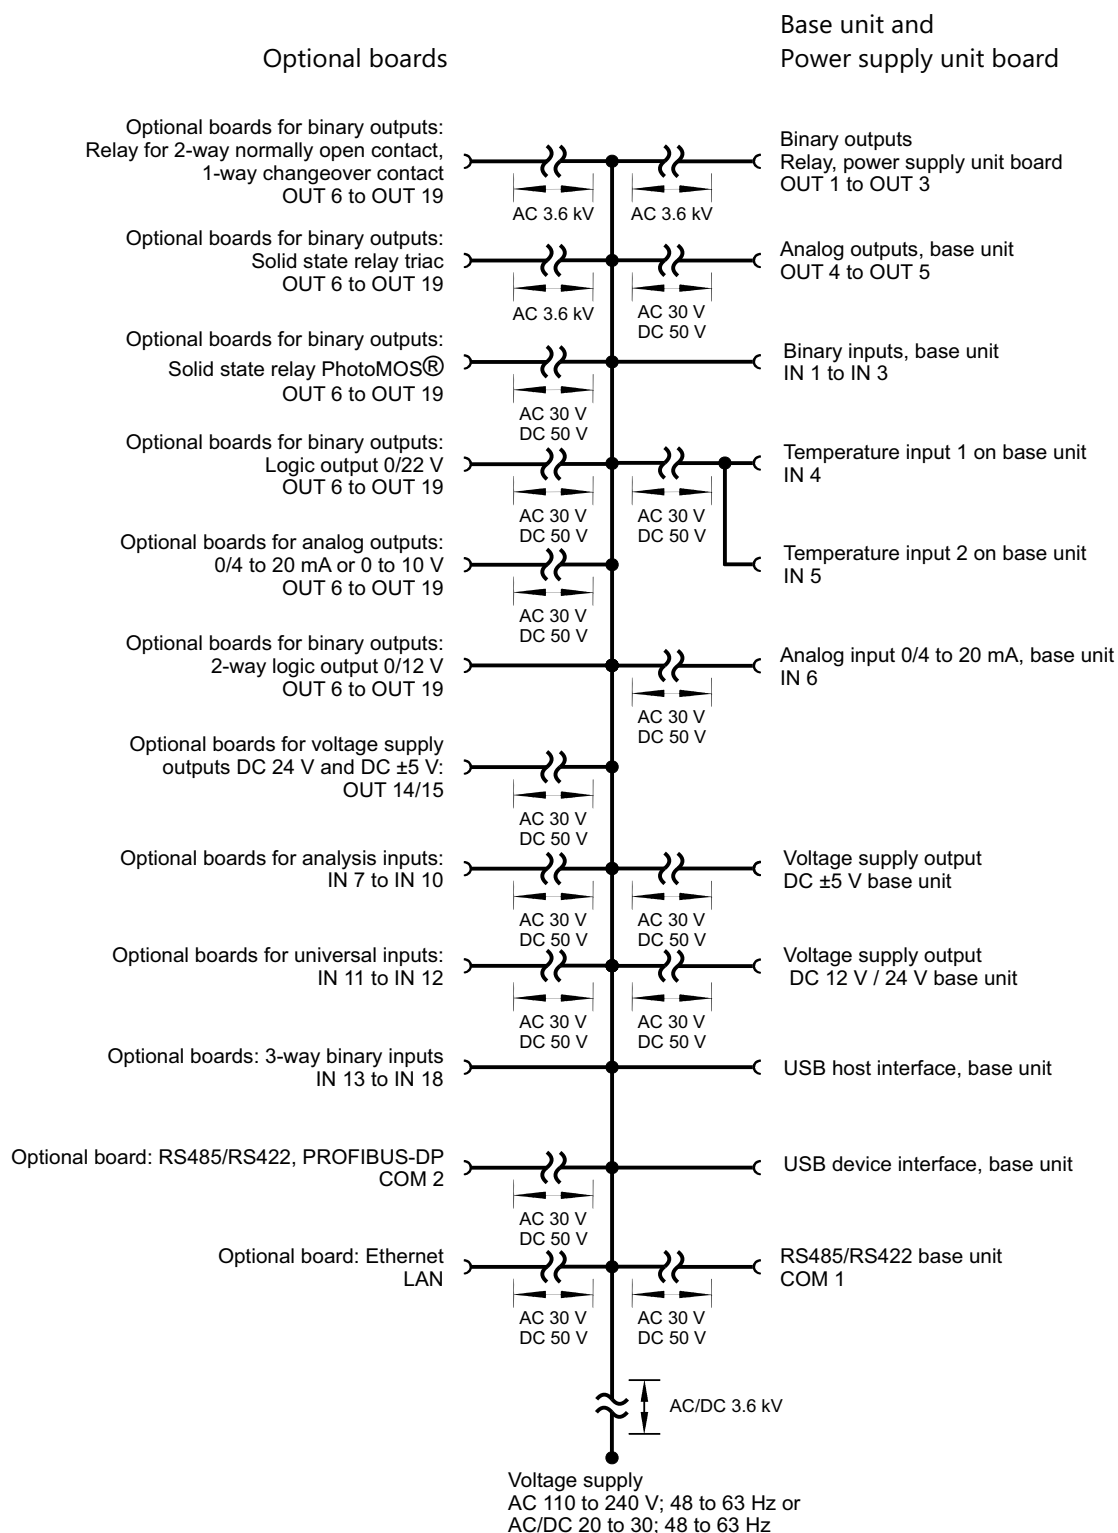


Note!

If sensors that are not electrically isolated are connected to a digital input and supplied by an external power source, potential differences between the internal and external ground can cause problems. Providing the voltage supply from the voltage supply outputs of the JUMO AQUIS touch S is preferable in such cases.

6.4 Connection diagram

6.4.1 Overview of connections

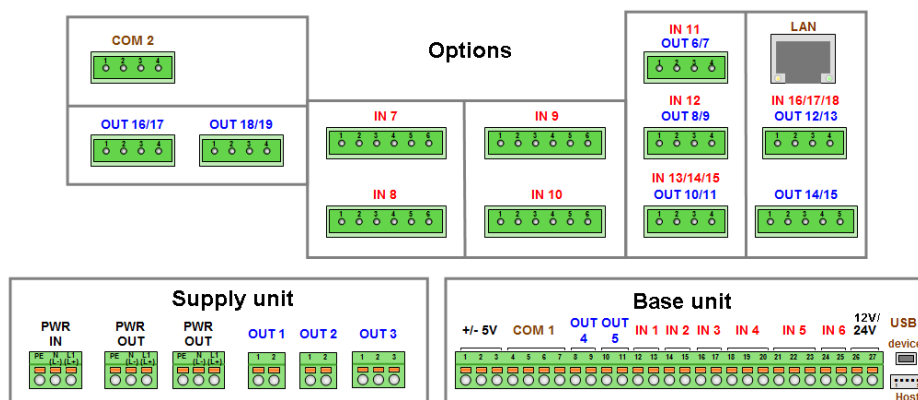










	Assembly	Connector terminal	Type
Inputs	Base unit	PWR IN	Voltage supply for the device
		IN 1 to IN 3	Digital inputs
		IN 4 to IN 5	Temperature inputs
		IN 6	Universal input
	Option-al boards	IN 7 to IN 10	analysis inputs
		IN 11 to IN 12	Universal inputs
Outputs	Power supply unit	OUT 13 to IN 18	Digital inputs
		PWR OUT	Mains voltage lead out
		OUT 1 to 2	Relay outputs normally open contact
	Base unit	OUT 3	Relay outputs changeover contact
		OUT 4 to OUT 5	Analog output
		±5 V	Voltage supply output ±5 V for ISFET sensors
Interfaces	Option-al boards	12 V / 24 V	Voltage supply output DC 12 V / 24 V (e.g. for external transmitters) ^a
		OUT 6 to OUT 19	Analog/digital outputs, OUT 14/15 also for voltage supply output DC ±5 V, 24 V
		OUT 19	
	Base unit	COM 1	RS422/485
		USB device interface	USB device interface
		USB host interface connection ^b	USB host interface connection ^b
	Option-al boards	COM 2	PROFIBUS-DP or RS422/485
		LAN	Ethernet

^a The desired output voltage must be stated on the order (see order details).

^b Use requires the USB host socket (see Chapter 4.2 "Order details", page 25, Extra Code 269).

6 Electrical connection







6.4.2 Analog inputs base unit
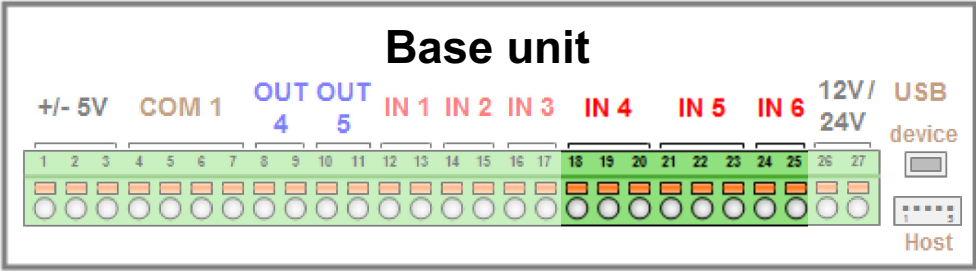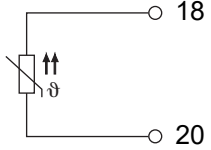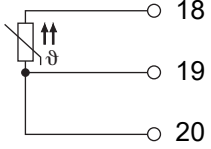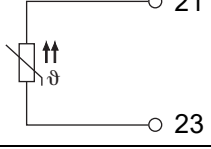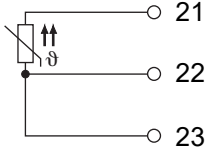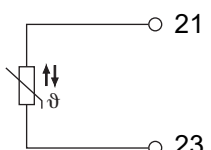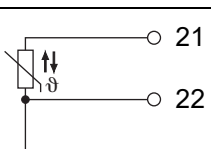
<div style="text-align: center;">  <p>Base unit</p> </div>		
Connector/ terminal	Connection variant	Symbol
IN 4	RTD temperature probe 2-wire circuit Pt100, Pt1000 or customer-specific characteristic line	
	RTD temperature probe 3-wire circuit Pt100, Pt1000 or customer-specific characteristic line	
IN 5	RTD temperature probe 2-wire circuit Pt100, Pt1000 or customer-specific characteristic line	
	RTD temperature probe 3-wire circuit Pt100, Pt1000 or customer-specific characteristic line	
	NTC 2-wire circuit	
	NTC 3-wire circuit	
	Resistance potentiometer A = Start E = End S = Slider	
IN 6	Standard signal Current 0(4) to 20 mA	

6 Electrical connection

6.4.3 Analog inputs optional boards


Universal inputs

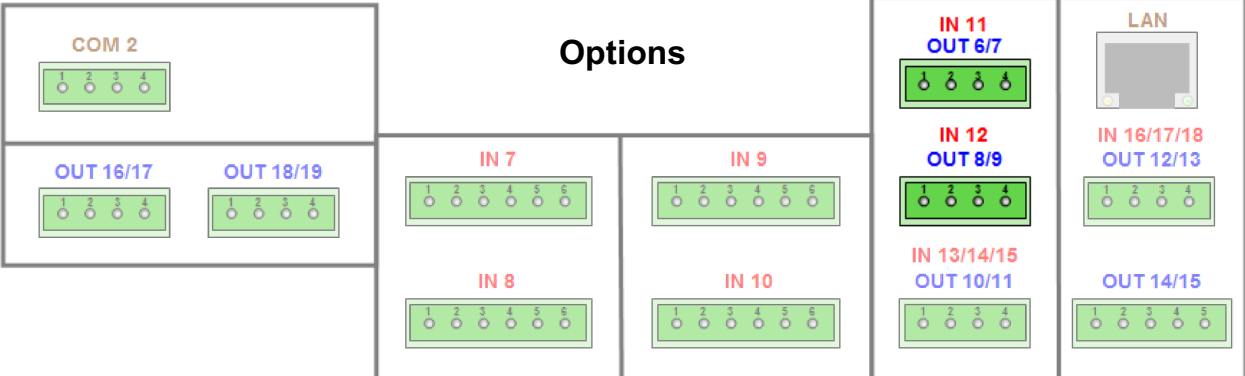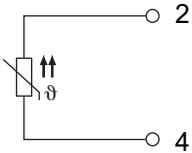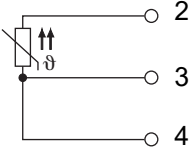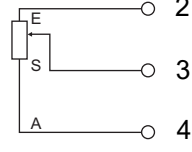		
Slot	Connection variant	Symbol
IN 11 IN 12	RTD temperature probe 2-wire circuit Pt100, Pt1000 or customer-specific characteristic line	
	RTD temperature probe 3-wire circuit Pt100, Pt1000 or customer-specific characteristic line	
	Resistance potentiometer A = Start E = End S = Slider	
	Standard signal Voltage 0 to 10 V	
	Standard signal Current 0(4) to +20 mA	

6 Electrical connection

pH/Redox/NH₃ analysis inputs

For optional board "analysis pH/Redox/NH₃", 2 versions are currently in circulation. The connection diagram contains the connection terminal layout for both version I and version II. To identify the version of your optional board, compare the connection terminal layout to the following illustrations:

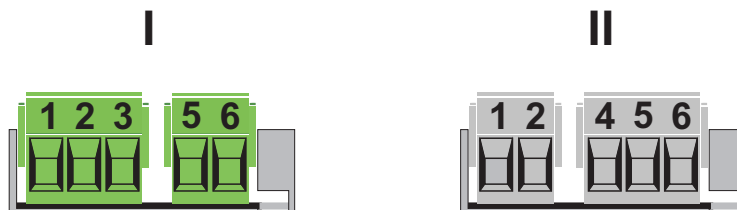

I = First version

II = Revised version

6 Electrical connection


<div><div><div>COM 2</div><div>OUT 16/17</div><div>OUT 18/19</div></div><div>Options</div><div><div>IN 7</div><div>IN 8</div><div>IN 9</div><div>IN 10</div><div>IN 11</div><div>IN 12</div><div>IN 13/14/15</div><div>IN 15/17/18</div><div>OUT 6/7</div><div>OUT 8/9</div><div>OUT 10/11</div><div>OUT 12/13</div><div>OUT 14/15</div></div><div>LAN</div><div>Base unit</div><div>+/- 5V COM 1 OUT 4 OUT 5 IN 1 IN 2 IN 3 IN 4 IN 5 IN 6 12V/24V device USB Host</div></div>								
Slot	Option/ connec- tion variant	Wire (color) ^a	Potential	Terminal			Symbol	
				DC ±5 V	Tempera- ture input	Analysis input pH/redox		
						I		II
IN 7 IN 8 IN 9 IN 10	ISFET-pH sensor	A (blue)	DC +5 V	1				
		B (black)	GND with jump- er to F	2				
		C (green)	DC -5 V	3				
		D (white/ black)	Ion-sensi- tive gate			1	1	
		E	Bypass			3	4	
						5	5	
		F (yellow)	Reference			6	6	
		G (white)	Compensa- tion ther- mometer in 3-wire cir- cuit		<div>Conne- ction^b</div>			
		H (red/ black)						
I (red)								
The RTD temperature probe can be connected to a temperature input or universal input. ^c								

^a The conductor colors listed refer to JUMO ISFET-pH sensors. The orange-colored conductor is not connected.



^b The connection diagram for the selected analog input must be observed when connecting the temperature probe.

^c When connecting the temperature probe of JUMO ISFET pH sensors to process connection 615 (NTC 8k55), no customer-specific linearization like that for the JUMO AQUIS 500 pH is needed. The IN 5 temperature input supports connection of 8k55-NTC temperature probes.


6 Electrical connection
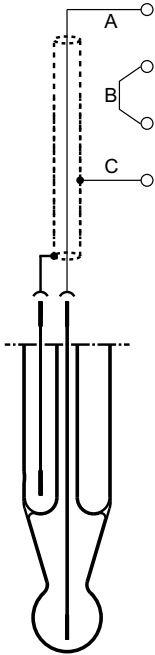
<div>COM 2</div> <div>OUT 16/17</div> <div>OUT 18/19</div>		Options		<div>IN 11</div> <div>OUT 6/7</div> <div>IN 12</div> <div>OUT 8/9</div> <div>IN 13/14/15</div> <div>OUT 10/11</div>		<div>LAN</div> <div>IN 16/17/18</div> <div>OUT 12/13</div> <div>OUT 14/15</div>	
Slot	Option/connection variant	Wire (color)	Potential	Terminal		Symbol	
IN 7 IN 8 IN 9 IN 10	pH/Redox Asymmetric connection of a combination electrode (Standard connection variant) For temperature compensation, a separate temperature sensor can be connected to an analog input.	A (core)	Glass/metal electrode	Temperature input	Analysis input pH/redox		
		B (jumper)	-		I	II	
		C (shield)	Reference electrode				



6 Electrical connection
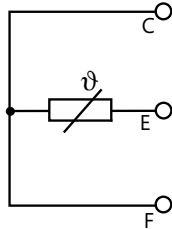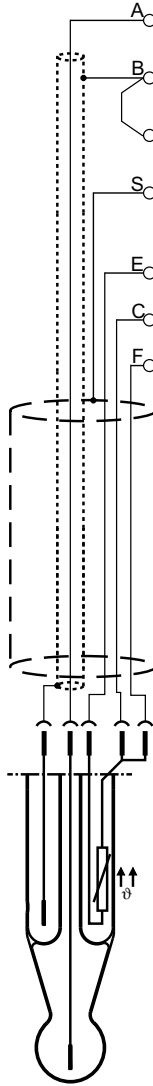
<div>COM 2</div> <div>OUT 16/17</div> <div>OUT 18/19</div>		<div>Options</div> <div>IN 7</div> <div>IN 8</div> <div>IN 9</div> <div>IN 10</div>		<div>IN 11</div> <div>OUT 6/7</div> <div>IN 12</div> <div>OUT 8/9</div> <div>IN 13/14/15</div> <div>OUT 10/11</div>	<div>LAN</div> <div>IN 16/17/18</div> <div>OUT 12/13</div> <div>OUT 14/15</div>		
Slot	Option/connection variant	Wire (color)	Potential	Terminal		Symbol	
				Temperature input	Analysis input pH/redox		
					I		II
IN 7 IN 8 IN 9 IN 10	pH/Redox Asymmetric connection of a combination electrode with integrated RTD temperature probe and Vario-Pin terminal head	A (core) B (inner shield) C (gray) D (blue) E (white) F (green) S (outer shield)	Glass/metal electrode Reference electrode Pt100/1000 Not used Pt100/1000 Pt100/1000 Shield	<div>Connection^a</div> <div></div>	1 3 5 6	1 4 5 6	<div></div>
<div>The RTD temperature probe is used to provide a temperature-compensated pH-value measurement, and can be connected to a temperature input or universal input.</div> <div>Terminal 2 at the analysis input is not connected!</div>							

6 Electrical connection

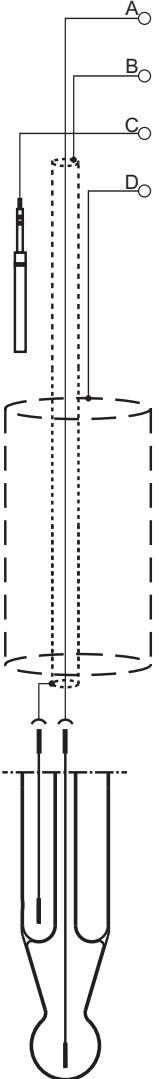Options							
<div>COM 2</div> <div>OUT 16/17</div> <div>OUT 18/19</div>		<div>IN 7</div> <div>IN 8</div>		<div>IN 9</div> <div>IN 10</div>		<div>IN 11</div> <div>OUT 6/7</div> <div>IN 12</div> <div>OUT 8/9</div> <div>IN 13/14/15</div> <div>OUT 10/11</div> <div>LAN</div> <div>IN 16/17/18</div> <div>OUT 12/13</div> <div>OUT 14/15</div>	
Slot	Option/connection variant	Wire (color)	Potential	Terminal		Symbol	
				Temperature input	Analysis input pH/redox		
					I		II
IN 7 IN 8 IN 9 IN 10	pH/Redox	A (core)	Glass/met-al electrode		1	1	
	Symmetric con- nection of a combi- nation electrode	B (inner shield)	Reference electrode		3	4	
		C (ground- ing pin, pipe or tank wall at the mea- suring point)	Liquid po- tential		5	5	
		D (outer shield)	Shield		6	6	
<p>Symmetric connection is used to reduce interference from stray electromagnetic fields along the sensor cable.</p> <p>Terminal 2 at the analysis input is not connected!</p>							

6 Electrical connection
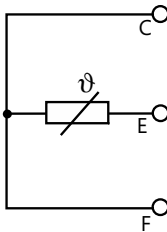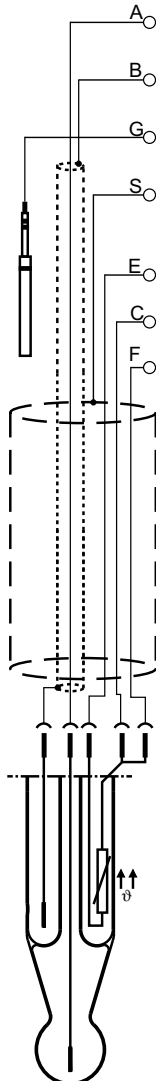
<div>COM 2</div> <div>OUT 16/17</div> <div>OUT 18/19</div>		<div>Options</div> <div>IN 7</div> <div>IN 8</div> <div>IN 9</div> <div>IN 10</div>		<div>IN 11</div> <div>OUT 6/7</div> <div>IN 12</div> <div>OUT 8/9</div> <div>IN 13/14/15</div> <div>OUT 10/11</div>	<div>LAN</div> <div>IN 16/17/18</div> <div>OUT 12/13</div> <div>OUT 14/15</div>		
Slot	Option/connection variant	Wire (color)	Potential	Terminal		Symbol	
				Temperature input	Analysis input pH/redox		
					I		II
IN 7 IN 8 IN 9 IN 10	pH/Redox Symmetric connection of a combination electrode with integrated RTD temperature probe and Vario-Pin terminal head	A (core) B (inner shield) C (gray) D (blue) E (white) F (green) G (grounding pin, pipe or tank wall at the measuring point) S (outer shield)	Glass/metal electrode Reference electrode Pt100/1000 Not used Pt100/1000 Pt100/1000 Liquid potential Shield	 Connection ^a 	1 3 5 6	1 4 5 6	
Symmetric connection is used to reduce interference from stray electromagnetic fields along the sensor cable. The RTD temperature probe is used to provide a temperature-compensated pH-value measurement, and can be connected to a temperature input or universal input. Terminal 2 at the analysis input is not connected!							

^a The connection diagram for the selected analog input must be observed when connecting the temperature probe.

6 Electrical connection

Electrolytic conductivity analysis inputs

Options		
Slot	Option/connection variant	Symbol
IN 7 IN 8 IN 9 IN 10	<p>Ci optional board (inductive conductivity measurement) Connection via an M12 plug, Attach connections for compensation thermometer (2-wire cable for socket) to a suitable analog input (2-wire circuit), The factory-installed wiring must not be changed!</p> <p>Core colors of the conductor connection of the M12 socket to the screw terminal connection on the optional board: A = Brown B = White C = Pink D = Silver E = Black F = Green (temperature sensor) G = Yellow (temperature sensor)</p>	
	<p>CR optional board (conductive conductivity measurement) 2-electrode system with 2-wire conductor Terminal 1 must be connected to the outer electrode on concentric conductivity sensors.</p> <p>A = Outer electrode (core color for JUMO types with fixed cable: White) B = Inner electrode (core color for JUMO types with fixed cable: Brown) C = Shield</p>	


6 Electrical connection

Options		
Slot	Option/connection variant	Symbol
IN 7 IN 8 IN 9 IN 10	<p>CR optional board (conductive conductivity measurement) 2-electrode system with 4-wire conductor (Wiring to minimize the measuring error caused by line resistance)</p> <p>Terminal 1 must be connected to the outer electrode on concentric conductivity sensors.</p> <p>A/B = Outer electrode C/D = Inner electrode E = Shield</p>	
	<p>CR optional board (conductive conductivity measurement) 4-electrode system</p> <p>A = Outer electrode 1 (I hi) (core color of CR-4P cable for JUMO types: Red) B = Inner electrode 1 (U hi) (core color of CR-4P cable for JUMO types: Gray) C = Inner electrode 2 (U lo) (core color of CR-4P cable for JUMO types: Pink) D = Outer electrode 2 (I lo) (core color of CR-4P cable for JUMO types: Blue) E = Shield</p>	

6 Electrical connection


6.4.5 Binary inputs


Base unit

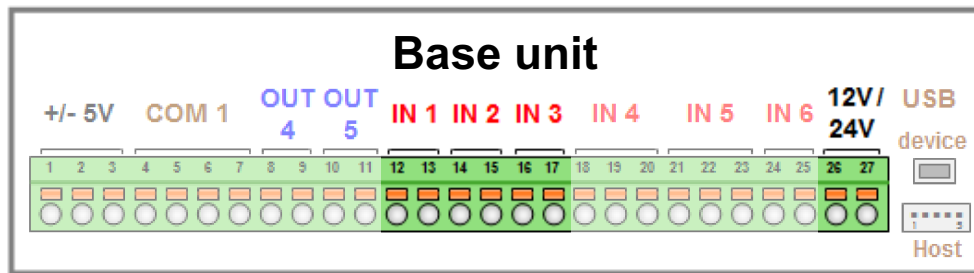

Conne- ctor/ terminal	Connection variant	Wire	Potential	Terminal				Symbol
				12 V / 24 V	IN 1	IN 2	IN 3	
IN 1 to 3	Digital input (potential-free contact)	A	Potential- free con- tact		12	14	16	
		B			13	15	17	
	In the digital input configuration, the "Contact" option must be set to "Potential-free contact".							
	Digital input (external voltage source)	A	Logic sig- nal +		12	14	16	
		B	Logic sig- nal -		13	15	17	
	In the digital input configuration, the "Contact" option must be set to "Ext. voltage supply".							
	Digital input (NPN transistor switch- ing output) ^a	A	Switching signal (collector)		12	14	16	
		B	Sensor -		13	15	17	
		C ^b	Sensor +	26				
		D ^b	Sensor -	27				
	In the digital input configuration, the "Contact" option must be set to "Potential-free contact".							

6 Electrical connection

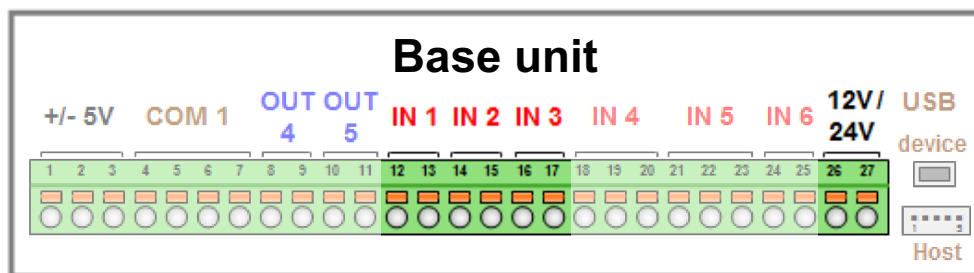

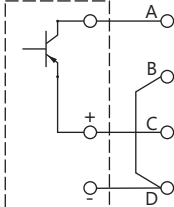Connector/ terminal	Connection variant	Wire	Potential	Terminal				Symbol
				12 V / 24 V	IN 1	IN 2	IN 3	
IN 1 to 3	Digital input (PNP transistor switch- ing output) ^a	A	Switching signal (collector)		12	14	16	
		B	Sensor -		13	15	17	
		C ^b	Sensor +	26				
		D ^b	Sensor -	27				
In the digital input configuration, the "Contact" option must be set to "Ext. voltage supply".								

^a The connection variants for transistor switching outputs (NPN / PNP) are especially important for the flow measurement via impeller sensor (type 406020, part no. 00525530, 00525531) at inputs IN 2 and IN 3 (pulse frequency inputs). However, other sensors with transistor switching output can also be connected.

^b The voltage supply output on the base unit is available for the DC 12 V / 24 V voltage supply to sensors.

6 Electrical connection

Optional boards


Options		
Connector/ terminal	Connection variant	Symbol
IN 13/14/15 IN 16/17/18	3× binary input (potential-free contact)	

6.4.6 Digital outputs, power supply unit board

Supply unit		
Connector/ terminal	Connection variant	Symbol
OUT 1 OUT 2	Relay Normally open contact	
OUT 3	Relay Changeover contact	

6 Electrical connection

6.4.7 Digital outputs, optional boards

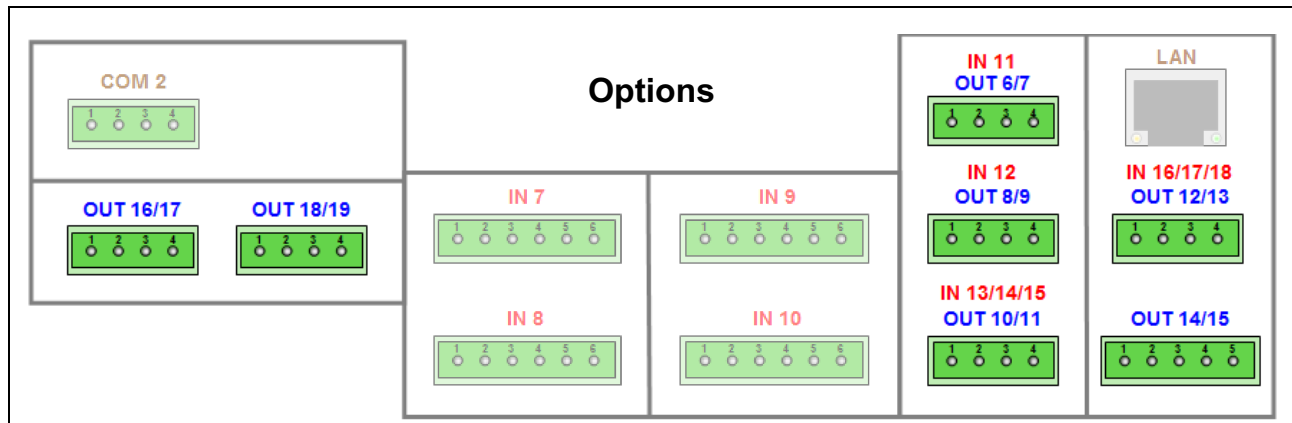

Slot	Option/connection variant	Symbol
OUT 6/7 OUT 8/9 OUT 10/11 OUT 12/13 OUT 14/15 OUT 16/17 OUT 18/19	Relay Changeover contact	
	2× relay Normally open contact	
	Solid state relay triac 230 V/1 A	
	2× solid state relay PhotoMOS® ^a 50 V/200 mA	
	Binary output 0/22 V	
	2× binary output 0/12 V	

^a PhotoMOS® is a registered trademark of Panasonic.




WARNING!

Combining a mains voltage circuit with a protective low-voltage circuit on the option "dual normally open contacts" is not permissible.


6 Electrical connection

6.4.8 Mains power connection

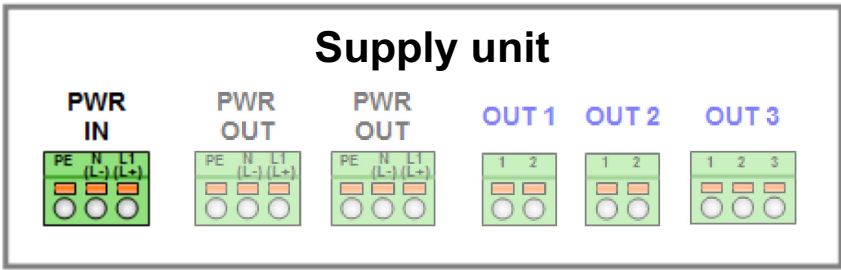 <p style="text-align: center;">Supply unit</p> <p>The diagram shows a terminal block with the following labels: PWR IN, PWR OUT, PWR OUT, OUT1, OUT2, and OUT3. Each label is above a set of terminals. PWR IN has terminals for PE, N, and L1. The first PWR OUT has terminals for PE, N, and L1. The second PWR OUT has terminals for PE, N, and L1. OUT1 and OUT2 each have terminals for 1 and 2. OUT3 has terminals for 1, 2, and 3.</p>		
Connector/ terminal	Connection variant	Symbol
PWR IN	Mains power input	L1 ————○ L1 N ————○ N PE ————○ PE

6.4.9 Voltage supply outputs

Base unit

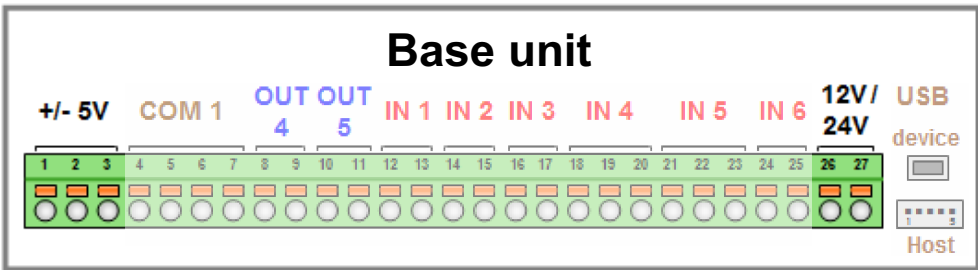 <p style="text-align: center;">Base unit</p> <p>The diagram shows a terminal block with 27 terminals. The labels above the terminals are: +/- 5V (terminals 1, 2, 3), COM 1 (terminal 4), OUT 4 (terminal 5), OUT 5 (terminal 6), IN 1 (terminal 7), IN 2 (terminal 8), IN 3 (terminal 9), IN 4 (terminal 10), IN 5 (terminal 11), IN 6 (terminal 12), 12V/24V (terminals 26, 27), and USB device/Host (terminals 13-15). The terminals are numbered 1 through 27.</p>		
Connector/ terminal	Connection variant	Symbol
DC ± 5 V	Voltage supply (e.g. for ISFET sensors or JUMO digiLine)	+ ————○ 1 U_{\pm} - ————○ 2 - ————○ 3
DC 12 V / 24 V	Voltage supply (e.g. for external transmitters)	+ ————○ 26 U_{\pm} - ————○ 27

6 Electrical connection

Power supply unit board

<div><div>Supply unit</div><div><div><div>PWR IN</div><div>PE N L1 (L-) (L+)</div></div><div><div>PWR OUT</div><div>PE N L1 (L-) (L+)</div></div><div><div>PWR OUT</div><div>PE N L1 (L-) (L+)</div></div><div><div>OUT 1</div><div>1 2</div></div><div><div>OUT 2</div><div>1 2</div></div><div><div>OUT 3</div><div>1 2 3</div></div></div></div>		
Connector/ terminal	Connection variant	Symbol
PWR OUT	Mains voltage lead out	L1 ————○ L1 N ————○ N PE ————○ PE

Optional board

<div><div>Options</div><div><div><div>COM 2</div><div>1 2 3 4</div></div><div><div>OUT 16/17</div><div>1 2 3 4</div></div><div><div>OUT 18/19</div><div>1 2 3 4</div></div></div><div><div><div>IN 7</div><div>1 2 3 4 5 6</div></div><div><div>IN 8</div><div>1 2 3 4 5 6</div></div><div><div>IN 9</div><div>1 2 3 4 5 6</div></div><div><div>IN 10</div><div>1 2 3 4 5 6</div></div></div><div><div><div>IN 11 OUT 6/7</div><div>1 2 3 4</div></div><div><div>IN 12 OUT 8/9</div><div>1 2 3 4</div></div><div><div>IN 13/14/15 OUT 10/11</div><div>1 2 3 4</div></div></div><div><div><div>LAN</div><div></div></div><div><div>IN 16/17/18 OUT 12/13</div><div>1 2 3 4</div></div><div><div>OUT 14/15</div><div>1 2 3 4 5</div></div></div></div>
--

6 Electrical connection

6.4.10 Interfaces for data and bus communication




NOTE

When installing the bus cabling for digital sensors, heed the information regarding line length and number of sensors in the Annex.


⇒ Chapter 24.2 "Planning the cabling for digital sensors", page 423

Interfaces for data and bus communication - Base unit

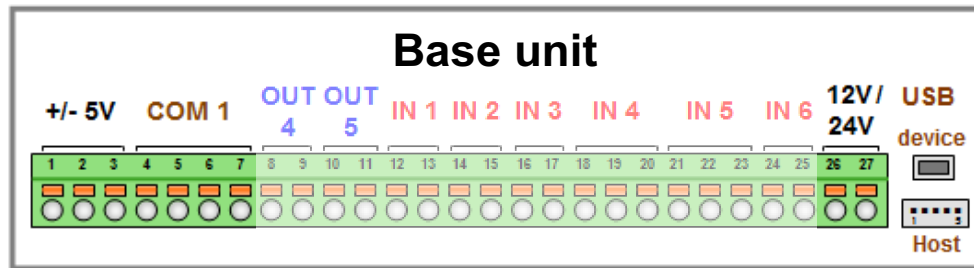

Connector/ terminal	Connection variant	Wire (color)	Potential	Terminal			Symbol
				DC ±5 V	DC 24 V	COM 1	
COM 1	RS422	RxD+	RxD+	-	-	4	
		RxD-	RxD-	-	-	5	
		TxD+	TxD+	-	-	6	
		TxD-	TxD-	-	-	7	
	RS485	RxD/TxD+	RxD/TxD+	-	-	6	
		RxD/TxD-	RxD/TxD-	-	-	7	

6 Electrical connection

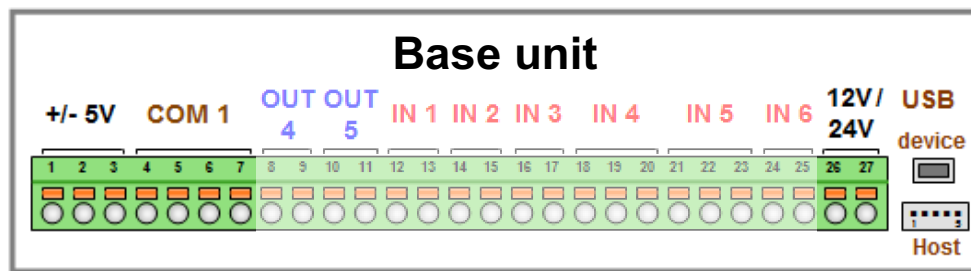

Connector/ terminal	Connection variant	Wire (color)	Potential	Terminal			Symbol
				DC ±5 V	DC 24 V	COM 1	
COM 1	Digital sensors (Connection to the JUMO M12 master connect- ing cable)	A (gray)	RxD/TxD+	-	-	6	
		B (black)	RxD/TxD-	-	-	7	
		C (brown)	+5 V	1	-	-	
		D (blue)	GND	2	-	-	
		E (blue)	GND	-	27	-	
		F (white)	+24 V	-	26	-	
		G (black with cable lug for connecting to the grounding)	Shield	Connection screw on cover plate of optional board in connection area			
	For connection of a JUMO digiLine bus line to operate digital sensors, JUMO offers 5-wire M12 digiLine Master connecting cable. A total of up to 6 digital sensors (JUMO ecoLine/tecLine or sensors with JUMO digiLine electronics) can be operated over a JUMO digiLine bus. The voltage supplies of DC 5 V and DC 24 V for the sensors on the bus are provided by the voltage supply outputs on the device (base unit or optional board). ⇒ Chapter 6.4.9 "Voltage supply outputs", page 67						
USB de- vice	USB device Type Mini-B (socket)	-	-	-	-	-	
USB host	Connection for USB host sock- et ^a Type A	-	-	-	-	-	




^a Use requires the USB host socket (see Chapter 4.2 "Order details", page 23, Extra Code 269).

6 Electrical connection

Interfaces for data and bus communication - Optional boards

Options							
Slot	Option/con- nection variant	Wire/pin (color)	Potential	Terminal			Symbol
				DC ±5 V	DC 24 V	COM 2	
COM 2	RS422 terminating re- sistors with DIP switches on optional board configurable	RxD+	RxD+	-	-	1	RxD+ ○
		RxD-	RxD-	-	-	2	RxD- ○
		TxD+	TxD+	-	-	3	TxD+ ○
		TxD-	TxD-	-	-	4	TxD- ○
	RS485 terminating re- sistors with DIP switches on optional board configurable	RxD/TxD+	RxD/TxD+	-	-	3	RxD/TxD+ ○
		RxD/TxD-	RxD/TxD-	-	-	4	RxD/TxD- ○

6 Electrical connection
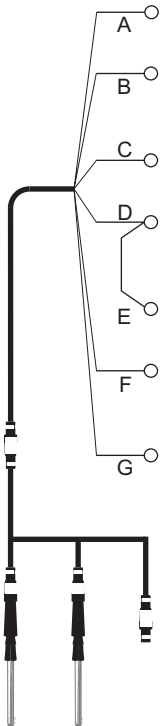
<div><div>COM 2</div><div><div>1 2 3 4</div></div></div> <div><div>OUT 16/17</div><div><div>1 2 3 4</div></div></div> <div><div>OUT 18/19</div><div><div>1 2 3 4</div></div></div>							<div>Options</div> <div><div>IN 7</div><div><div>1 2 3 4 5 6</div></div></div> <div><div>IN 8</div><div><div>1 2 3 4 5 6</div></div></div> <div><div>IN 9</div><div><div>1 2 3 4 5 6</div></div></div> <div><div>IN 10</div><div><div>1 2 3 4 5 6</div></div></div> <div><div>IN 11</div><div>OUT 6/7</div><div><div>1 2 3 4</div></div></div> <div><div>IN 12</div><div>OUT 8/9</div><div><div>1 2 3 4</div></div></div> <div><div>IN 13/14/15</div><div>OUT 10/11</div><div><div>1 2 3 4</div></div></div> <div><div>LAN</div><div><div>IN 16/17/18</div><div>OUT 12/13</div><div><div>1 2 3 4</div></div></div><div><div>OUT 14/15</div><div><div>1 2 3 4 5</div></div></div></div>		
Slot	Option/con- nection variant	Wire/pin (color)	Potential	Terminal			Symbol		
				DC ±5 V	DC 24 V	COM 2			
COM 2	Digital sensors	A (gray)	RxD/TxD+	-	-	3			
		B (black)	RxD/TxD-	-	-	4			
	Connection to optional board: RS422/485 seri- al interface with JUMO M12 master connect- ing cable	C (brown)	+5 V	1	-	-			
		D (blue)	GND	2	-	-			
		E (blue)	GND	-	27	-			
		F (white)	+24 V	-	26	-			
		G (black with ca- ble lug for con- necting to the grounding)	Shield	Connection screw on cover plate of option- al board in connec- tion area					
	For connection of a JUMO digiLine bus line, JUMO offers 5-wire M12 digiLine master connecting cable. Up to 6 digital sensors (JUMO ecoLine/tecLine or sensors with JUMO digiLine electronics) can be operated over a JUMO digiLine bus. The voltage supplies of DC 5 V and DC 24 V for the sensors on the bus are provided by the voltage supply outputs on the device (base unit or optional board). ⇒ Chapter 6.4.9 "Voltage supply outputs", page 67								
Located on the front of the serial interface RS422/485 optional board are DIP switches for setting the terminating resistors:									
with terminating resistors									
									
without terminating resistors									
									

6 Electrical connection

Options							
Slot	Option/con- nection variant	Wire/pin (color)	Potential	Terminal			Symbol
				DC ±5 V	DC 24 V	COM 2	
COM 2	PROFIBUS-DP 3 = RxD/TxD-P 5 = DGND 6 = VP 8 = RxD/TxD-N	3	RxD/TxD-P	-	-	-	
		5	DGND	-	-	-	
		6	VP	-	-	-	
		8	RxD/TxD-N	-	-	-	
LAN	Ethernet Type RJ 45 (socket)	-	-	-	-	-	



NOTE

Only 1 serial interface per device can be used for JUMO digiLine (see Chapter 10.20 "Serial interfaces", page 211).

A maximum of 6 sensors can be connected to the selected interface.

**WARNING!**

Prior to startup, ensure that the device has been installed and connected properly and in compliance with the installation instructions. Observe the safety instructions in this description.

⇒ Chapter 1 "Safety information", page 15

**CAUTION!**

A buffer battery is built into the device. Its purpose is to maintain data when the device is switched off or if the voltage supply is interrupted. If the battery approaches the end of its operating life (approximately 7 years) then a battery prealarm will indicate that status. When the battery is empty a battery alarm will indicate that status. The battery must be exchanged before it is empty. The battery must be exchanged by the JUMO Service department! In this case, send in the device!

**CAUTION!**

The touchscreen must not be operated with sharp or pointed objects, as these could damage the protective film and the touchscreen.

7.1 Initial startup

Step	Action
1	Switch on the supply voltage to the device and wait until it has booted up.
2	Select the operating language.
3	Log in as user "Master" or "Service" in order to have access to the configuration in the device menu. ⇒ Chapter 8.2.1 "Log-on/Log-out", page 97
4	Set the date and time. ⇒ Chapter 9.1 "Date and time", page 135
5	Make the basic settings for the device. ⇒ Chapter 10.2 "Basic settings", page 142
6	Configure the analog and digital inputs you wish to use. ⇒ Chapter 10.5 "Analog inputs", page 147 ⇒ Chapter 10.7 "Digital inputs of base unit and optional boards", page 162
7	Check the hardware functions of the device. ⇒ Chapter 7.3 "Function test", page 81
8	Calibrate any analysis sensors connected to the device. ⇒ Chapter 12 "Calibration in general", page 233
9	The device is now ready for use. You can configure the displays and functions of the device according to your needs.

7 Startup

7.2 Digital sensors



NOTE

For operation of digital sensors, you need the extra code "JUMO digiLine protocol activated" (see Chapter 4.2 "Order details", page 25)

7.2.1 Initial startup

Sensors with JUMO digiLine electronics



NOTE

Only one serial interface of the device can be configured for operation of digital sensors. If your device has 2 serial interfaces (base unit and possibly an optional board), select 1 interface for connection of digital sensors and set its protocol to "Modbus digital sensors".

Thanks to plug & play, startup of sensors with JUMO digiLine electronics is very simple. As soon as a JUMO sensor with digiLine electronics is connected to the bus, the JUMO AQUIS touch S detects and links it to an available (not yet linked) and suitably configured input for digital sensors. The status of the link can be checked in the assignment table. If, prior to connection of the sensor, no input for digital sensors was configured with a suitable sensor type, this can also be done after connection of the sensor. Automatic linking of the sensor to the input for digital sensor occurs here as well. If several sensors of the same kind need to be put into operation, they must be put into operation individually in succession or the link must be established manually in the device menu. For a sensor to be linked automatically to an input for digital sensors, the following conditions must be met:

- An available (unlinked) input for digital sensors must be configured for the sensor type of the sensor being connected. This can be checked by viewing the assignment table. All configured inputs for digital sensors are listed there with configuration information and link status.
- The sensor type listed for the configured input for digital sensors must match the type of sensor being connected.
- If "TAG check" is activated in the configuration of linkable inputs for digital sensors, the "Sensor TAG" must match the "TAG number" in the JUMO digiLine electronics of the sensor.

Viewing the assignment table:

⇒ Chapter 8.2.7 "Digital sensors", page 103

Manual linking:

⇒ Chapter "Procedure for manual linking of digital sensors", page 106

Configuring the inputs for digital sensors:

⇒ Chapter 10.11 "Digital sensors", page 168

The following table describes the startup procedure for an individual JUMO sensor with JUMO digiLine electronics.

Step	Action
1	Log in as user "Master" or "Service" in order to have access to the configuration in the device menu. ⇒ Chapter 8.2.1 "Log-on/Log-out", page 97
2	Ensure that the serial interface being used for operation of digital sensors is configured correctly. The protocol must be set to "Modbus digital sensors".
3	Open the configuration of the digital sensors, select an available output for digital sensors and enter the type information for the sensor being connected. Open the configuration of the digital sensors: Device Menu > Configuration > Digital Sensors 1 to 6 > General
4	Open the assignment table for the digital sensors and check whether an entry exists for the input for digital sensors that was just configured. The line number must match the number of the input for digital sensors and the assignment table entry must show the status "Installation". The status is visualized by symbols in the right column of the assignment table. Open the assignment table: Device Menu > Digital Sensors ⇒ Chapter 8.2.7 "Digital sensors", page 103
5	Connect the sensor with JUMO digiLine electronics to the bus.
6	Check whether the assignment table entry has changed from "Installation" to "linked". If this is not the case after a waiting period of about 10 seconds, linking has failed. In such a case, check the correctness of the configuration and bus cabling (see Chapter 24.1 "Troubleshooting and remedies for digital sensors", page 417). For diagnosis, it is helpful to display more information about the assignment table entry. To display the information, press the "Info" button. This opens a text window in which, among other things, the most recent bus fault is displayed. ⇒ Chapter 8.2.7 "Digital sensors", page 103

7 Startup

Digital JUMO ecoLine and tecLine sensors






NOTE

Only one serial interface of the device can be configured for operation of digital sensors. If your device has 2 serial interfaces (base unit and possibly an optional board), select 1 interface for connection of digital sensors and set its protocol to "Modbus digital sensors" and the baud rate to "9600".

Digital JUMO ecoLine and tecLine sensors can communicate with the JUMO AQUIS touch S over the JUMO digiLine bus just like sensors with JUMO digiLine electronics. However, they do not support plug & play and must be put into operation in another way. The following table describes the startup procedure for an individual digital JUMO ecoLine or tecLine sensor.

Step	Action
1	Log in as user "Master" or "Service" in order to have access to the configuration in the device menu. ⇒ Chapter 8.2.1 "Log-on/Log-out", page 97
2	Ensure that the serial interface being used for operation of digital sensors is configured correctly. The required settings are: Protocol: Modbus digital sensors Baud rate: <ul style="list-style-type: none">• JUMO ecoLine: 9600• JUMO tecLine: 9600, 19200 or 38400 (automatic) Data format: 8 - 1 - no parity
3	In the configuration, select an available input for digital sensors and enter the type information in the "General" folder of the sensor being connected. Open the menu: Device Menu > Configuration > Digital Sensors > Digital Sensors 1 to 6 > General ⇒ Chapter 7.2 "Digital sensors", page 76
4	Open the assignment table for digital sensors in the device menu. Open the assignment table: Device Menu > Digital Sensors ⇒ Chapter 8.2.7 "Digital sensors", page 103
5	Localize the entry whose number (1 to 6) matches that selected in step 1 and in the configured input for digital sensors.

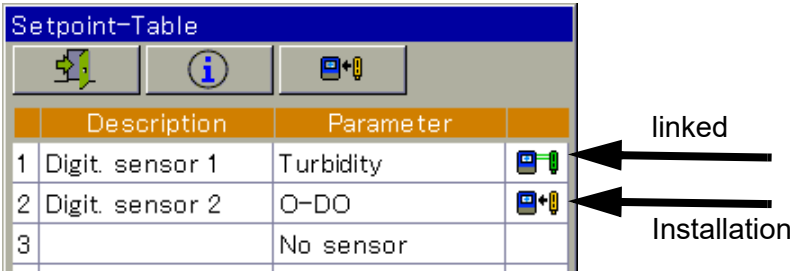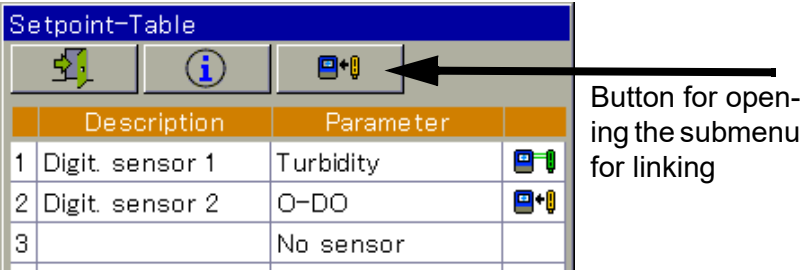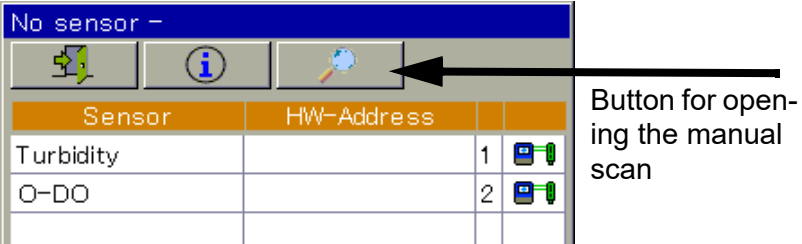Step	Action
6	<p>Check whether this entry has the status "Installation". If this is not the case, check the configuration of the selected input for digital sensors.</p> <p>Example of view showing the status of assignment table entries:</p>  <p>⇒ Chapter 8.2.7 "Digital sensors", page 103</p>
7	Connect the sensor to the JUMO digiLine bus.
8	Highlight the prepared assignment table entry (status "Installation") by tapping it.
9	<p>Open the "Link" submenu and highlight the assignment table entry that was just created by tapping it.</p>  <p>⇒ Chapter 8.2.7 "Digital sensors", page 103</p>
10	<p>Using the "Scan Button", start a sensor scan and wait until the sensors scan is completed. If the sensor was detected, it will appear in the list of this menu with its status.</p>  <p>⇒ Chapter 8.2.7 "Digital sensors", page 103</p>
11	Leave the "Link" submenu by pressing the "Exit" button. This takes you back to the display of the assignment table.

7 Startup

Step	Action
6	<p>Check whether the assignment table entry has changed from "Installation" to "linked". If this is not the case after a waiting period of about 10 seconds, linking has failed. In such a case, check the correctness of the configuration and bus cabling (see Chapter 24.1 "Troubleshooting and remedies for digital sensors", page 417). For diagnosis, it is helpful to display more information about the assignment table entry. To display the information, press the "Info" button. This opens a text window in which, among other things, the most recent bus fault is displayed.</p> <p>⇒ Chapter 8.2.7 "Digital sensors", page 103</p>

7.2.2 Restarting and replacing

Sensors with JUMO digiLine electronics

A JUMO digiLine electronics assembly that was disconnected from the bus for maintenance and repair is detected again automatically upon reconnection, linked to its original assignment table entry and resumes operation.

When replacing JUMO digiLine electronics assemblies, each electronics assembly must be replaced individually before the next one is disconnected from the bus. In this way, each new JUMO digiLine electronics assembly is linked automatically with the original assignment table entry.

Digital sensors from the types JUMO ecoLine and JUMO tecLine

A digital sensor from the type JUMO ecoLine or JUMO tecLine that was disconnected from the bus for maintenance and repair is detected again automatically upon reconnection, linked to its original assignment table entry and resumes operation.

When replacing digital sensors from the type JUMO ecoLine or JUMO tecLine, it is necessary to follow the initial startup procedure to put the new digital sensors into operation (see Chapter 7.2.1 "Initial startup", page 76).

7.3 Function test

Important hardware information is displayed in the "Device Info" menu.
The functionality of the device can be checked from here.


7.3.1 Checking the optional boards

Open the hardware information for the installed optional boards as follows:

Device Menu > Device Info > Slots

A tab with hardware and software information for each correctly installed optional board now appears.

Sample screen:
Hardware
Information for an
optional board
"Universal input"

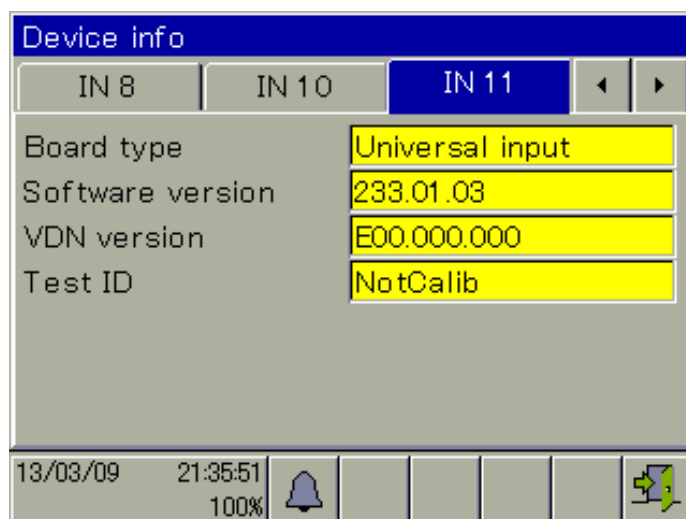

If no tab appears for an optional board, the board was not recognized and there is a hardware problem. In such cases, check whether the optional board concerned was installed correctly.

⇒ Chapter 11.1 "Installing optional boards", page 219

If this is not successful, contact Technical Support at JUMO. The contact data can be found on the back of these installation instructions.

7.3.2 Checking sensors and inputs/outputs

To check correct operation of all inputs/outputs, you can display the current analog and binary values.

Device Menu > Device Info > Inputs/Outputs

Depending on the type of input, up to 2 columns will be visible in the Device Info screens for inputs.

- **Compensated:** Display value that is calculated from the value measured by the sensor through use of an appropriate compensation method and after taking the corresponding calibration values into account.
This suppresses incorrect measured values that can be caused by outside factors (e.g. temperature) or sensor wear (e.g. a dirty electrode).
- **Uncompensated:** Value measured by sensor (raw value of the measurement input, e.g. pH measuring chain voltage)

7 Startup

These sensor values are subject to distortion caused by outside factors. Display of uncompensated values is used primarily for diagnostic purposes. The compensated values are used for the actual measurement of analysis variables.

The following example considers analysis inputs in the form of a conductivity measurement input and a pH measurement input. The device calculates the (compensated) values of the process variable from the (uncompensated) raw measurement data.

Sample screen:
IN 7 measures conduc-
tivity
IN 8 measures pH-value
IN 9 not used
IN 10 not used

Device info			
Temperature		Analysis	
		Univer	◀ ▶
		Compensated	Uncomp.
IN 7:	31,447 mS/cm	33,867 mS/cm	
IN 8:	7,0091 pH	-0,5434 mV	
IN 9:	-----	-----	
IN 10:	-----	-----	
13/03/09 21:40:29		Master 100%	

8.1 Operating concept

This chapter explains how to use the functions at the operating level (e.g. controller and data monitor) and access the menu structure for editing device settings. The JUMO AQUIS touch S is operated by means of the touchscreen, using either a finger or stylus with a soft, rounded plastic tip.



CAUTION!

The touchscreen must not be operated with sharp or pointed objects, as these could damage the protective film and the touchscreen.



CAUTION!

Use only a soft cloth to clean the touchscreen. Commercially available cleaners may contain substances that damage the protective film and the display.



NOTE

Operation depends on the user's rights. Operating and setting options are restricted, depending on the user who is logged in.

The "Master" and "Service" users have access to all menus and functions (default setting).

⇒ Chapter 8.1.1 "Passwords and user rights", page 83

8.1.1 Passwords and user rights

The device has 4 users with factory-configured user names, passwords, and user rights. The passwords can be changed in the device.

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

The JUMO PC setup program is needed to change user names and user rights.

⇒ "User list", page 349

The following table provides an overview of the factory-set user accounts.

Factory-set passwords


Users	Every-one	User 2	User 1	Service	Master
Factory-set password	-	20	110	3000	9200

8 Operation

Factory-set user rights

<div>Users</div> <div>User rights</div>	Every-one	User 2	User 1	Service	Master
Display of: <ul style="list-style-type: none"> Current measuring values on overview and detailed screens Configuration data parameters Device information 	X	X	X	X	X
Display of: <ul style="list-style-type: none"> History of measurement data in the recording function Event and alarm list Service data User actions <ul style="list-style-type: none"> Acknowledge alarms Calibration Read out history of measurement data in the recording function Display and change user level parameters Read out service data Link digital sensors manually 		X	X	X	X
User actions <ul style="list-style-type: none"> Operate control functions Change settings <ul style="list-style-type: none"> Changing the settings at the perimeter level Set date and time Configuration <ul style="list-style-type: none"> Initialize calibration 			X	X	X
Configuration <ul style="list-style-type: none"> Configuration of all functions Activate extra codes 				X	X

8.1.2 Display and control elements

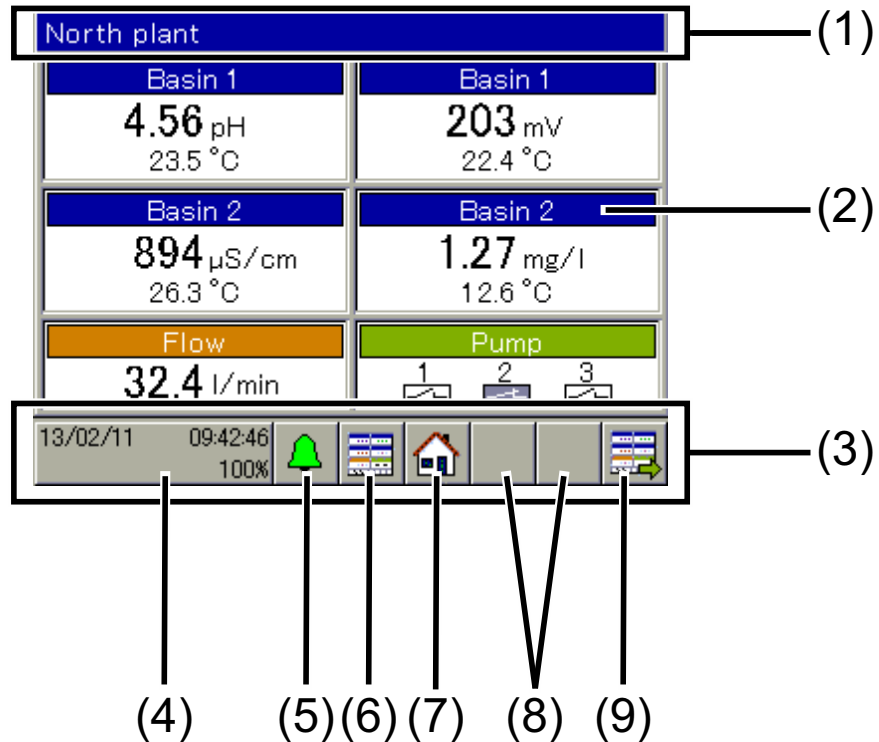

8 Operation


8.1.3 Menu structure

At the **operating level**, 3 different navigation buttons are available to select appropriate screens for display and control of device functions.

The "**Device menu**" and "**Alarm/event list**" menu levels are also displayed by means of corresponding buttons. The device menu contains submenus for setting, servicing, and diagnosing the device and its functions.

The **memory manager** opens automatically as soon as a USB flash drive is inserted into the USB host interface. It exchanges data between the device and the flash drive. The USB host socket is required to connect the USB flash drive (see Chapter 4.2 "Order details", page 25, Extra Code 269).

Overview of the menu structure

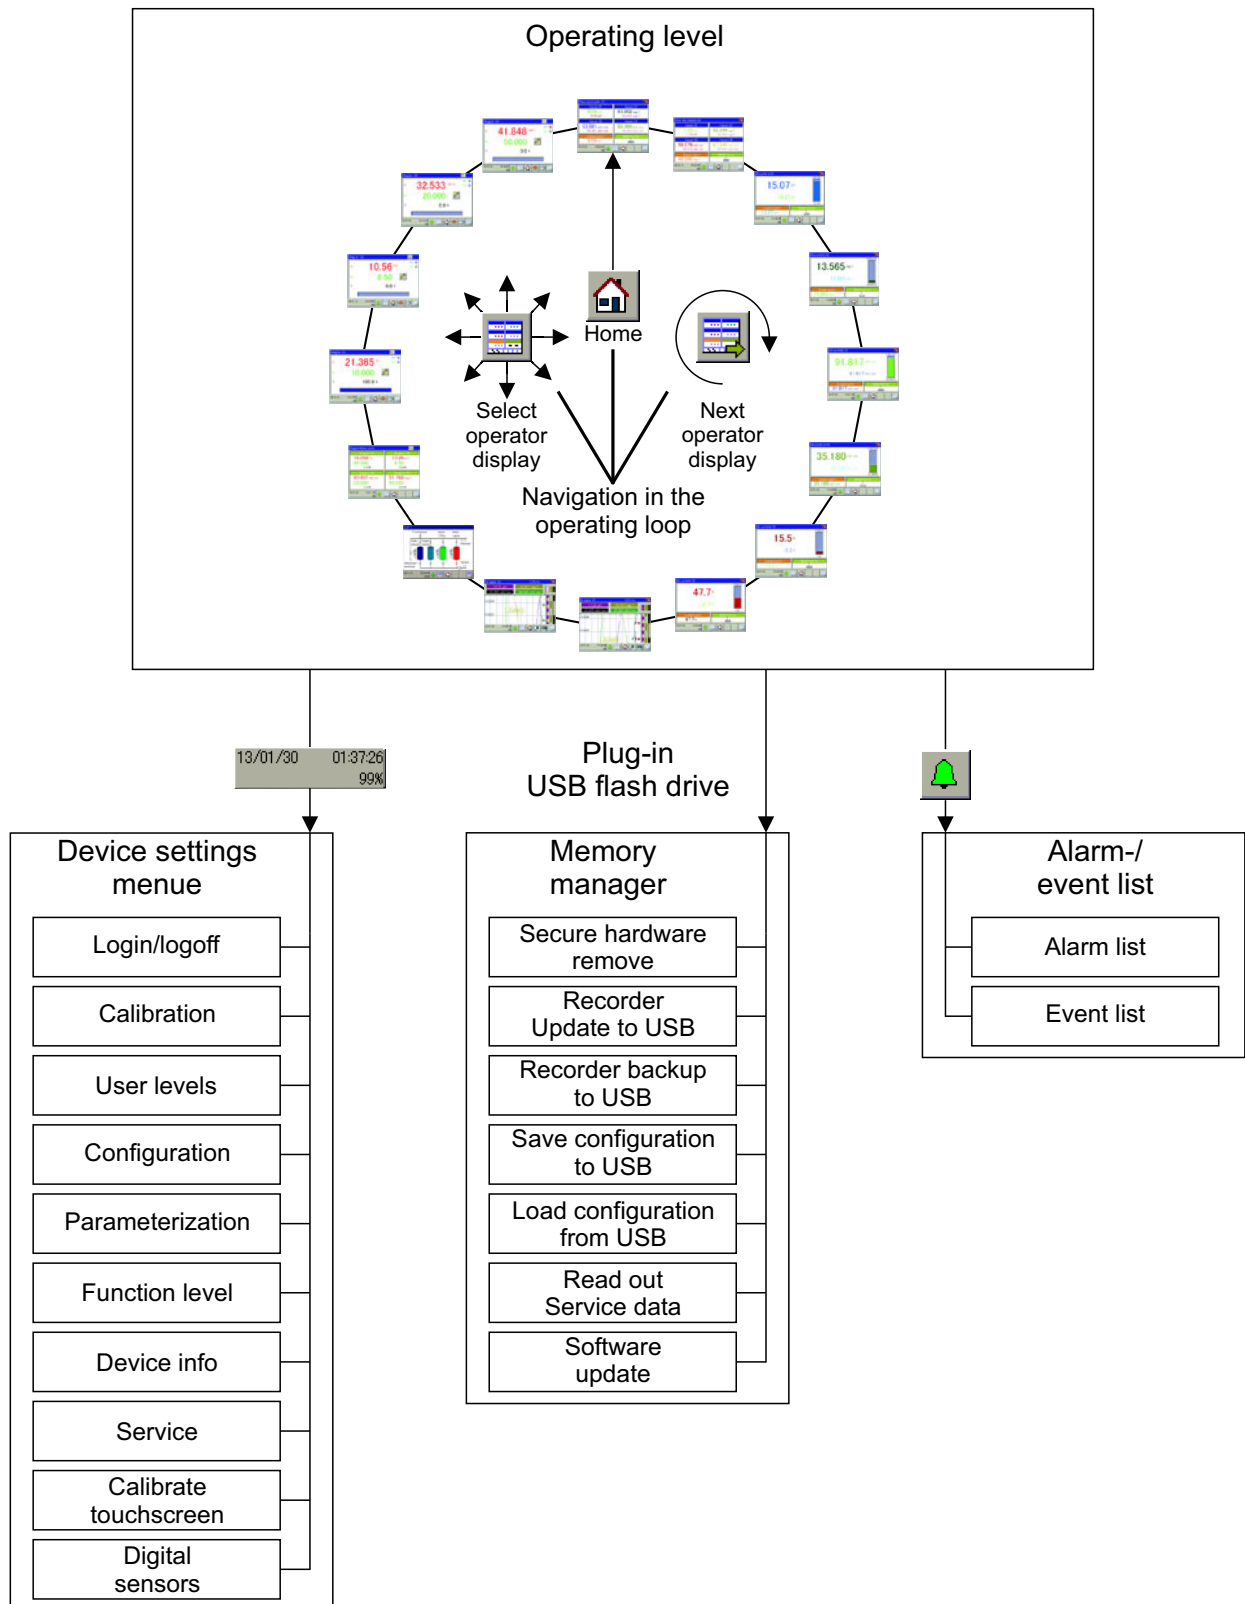


8 Operation

**NOTE**

The "Recorder Update to USB" and "Recorder Backup to USB" items appear in the "Memory Manager" menu only if the extra "Recording function" is enabled.

⇒ Chapter 4.2 "Order details", page 25

Operating images of the operating ring as an example

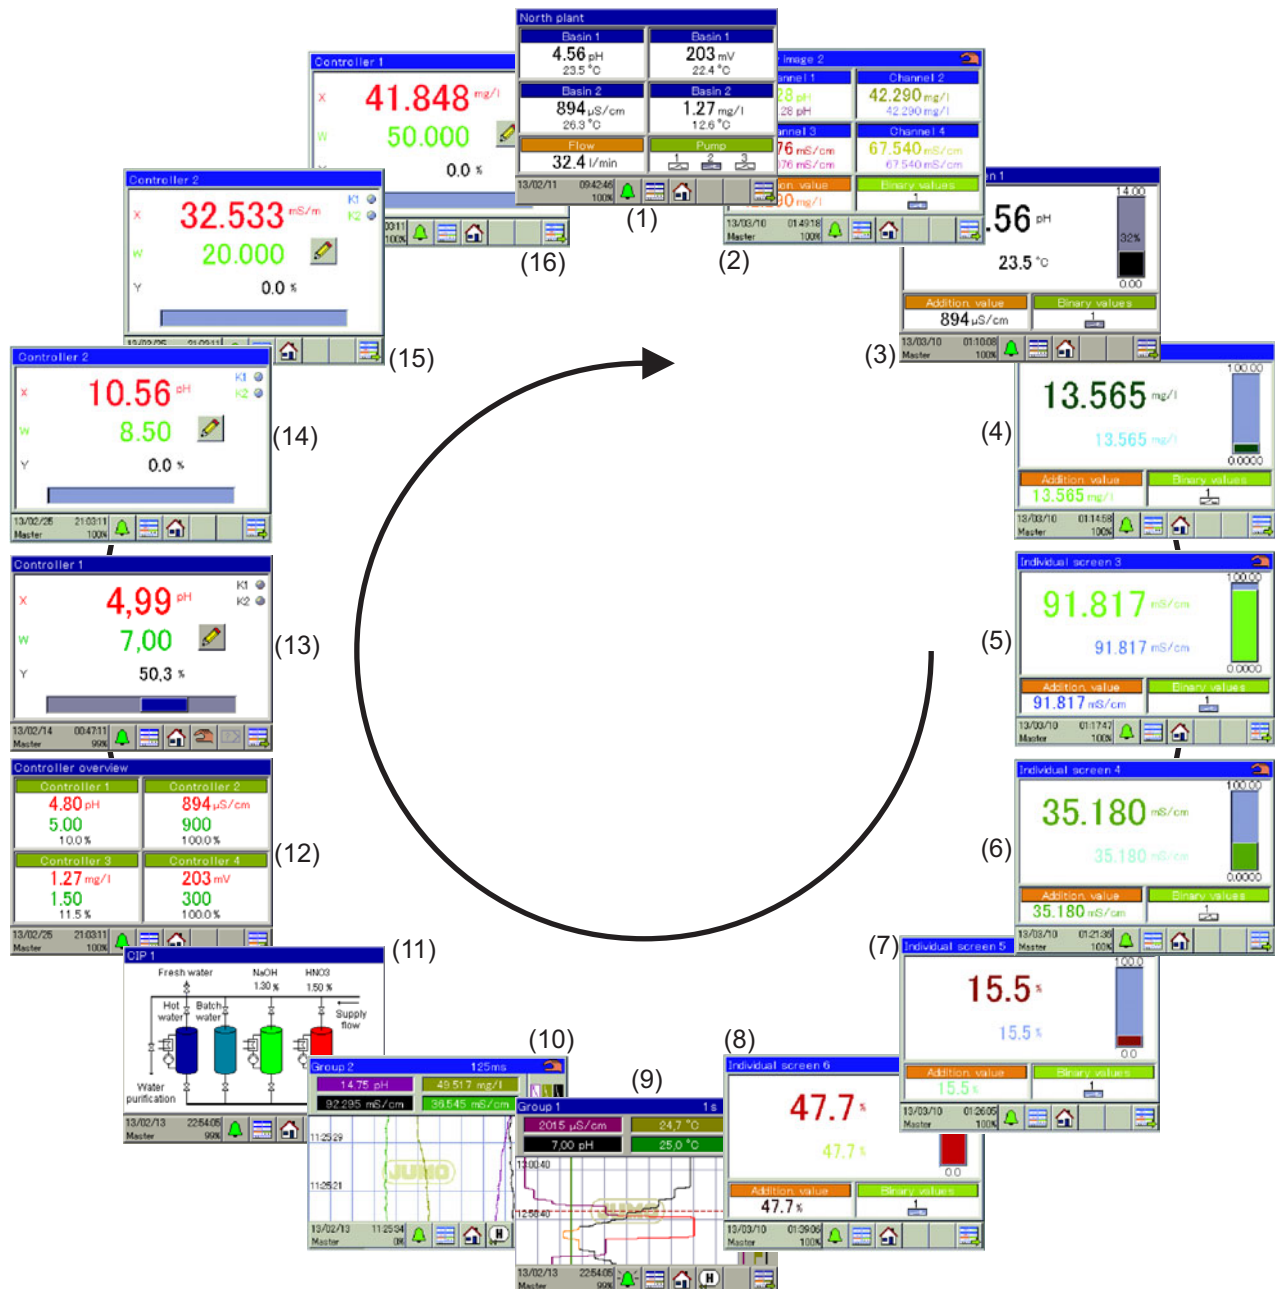

Screen	Operator screen	Description
(1)	General screen 1	User configurable overview display of measuring values and digital signal states The overviews can be configured as a 2-part screen or a 4-part screen. 2-part screen: Display of 2 primary and 2 secondary measured values per screen, 1 additional measured value and 3 binary values. 4-part screen: Display of 4 primary and 4 secondary measured values per screen, 1 additional measured value and 3 binary values.
(2)	General screen 2	

8 Operation


Screen	Operator screen	Description
(3)	Detailed screen 1	User configurable large-section screen Display of 1 main measuring value, 1 second measuring value, 1 additional value and up to 3 binary values, as well as additional visualization of the main measuring value and the alarm limits for an analog input with a bar graph
(4)	Detailed screen 2	
(5)	Detailed screen 3	
(6)	Detailed screen 4	
(7)	Detailed screen 5	
(8)	Detailed screen 6	
(9)	Diagram group 1	Up to 4 analog measuring values and 3 digital functions can be displayed on a configurable recorder screen (group). Up to 4 groups can be set up. Diagrams of disabled groups are not available in the operation loop (here in the figure this applies to group 3 and 4).
(10)	Diagram group 2	
(11)	Process screens 1 to 8	<p>User-defined visualization screen that is user configurable by means of an editor in the PC setup program ⇒ Chapter 22.8.11 "Process screens", page 367</p> <p>With the aid of static and dynamic graphic and display elements for analog and binary values, it is possible to create a screen that displays the process flow concerned in an especially vivid manner. If no process screen is configured, none is available for the operation loop.</p>
(12)	Controller overview	The active controller channels are visualized here in an overview display. The controller overview becomes available as part of the operating loop only if at least 2 controllers are activated. The current setpoint values, actual values and output levels are displayed for all active controllers. In addition, the operating states of the controllers are displayed (manual mode, hold, self-optimization).
(13)	Controller screen Controller 1	The controllers are visualized in detail on the controller screens. The controller screens are available as part of the operation loop only for the respectively configured channels. The information displayed includes the current setpoint value, actual value and output level. The binary values of switching controller outputs are visualized. In addition, controls for setpoint value entry, manual output level control and self-optimization are available. Access to the operating functions depends on the user rights of the logged-in user.
(14)	Controller screen Controller 2	
(15)	Controller screen Controller 3	
(16)	Controller screen Controller 4	

Display of invalid values

Invalid input signals/measured values or errors in the analog input configuration are detected and shown in the measured value displays as follows:

Type of error	Display
underrange: measuring range underflow	<<<<<
overrange: measuring range overflow	>>>>>
Compensation error: An error occurred when compensating for factors affecting the measurements of the analysis. It is necessary to check the measuring circuits and settings of the compensation signals and the configuration of the analysis measurement input affected.	+++++
Invalid display value Possible errors include: Incorrect input signal: An analog input has an incorrect signal or an analog input was selected for which an optional board is not even present. Errors with digital sensors: A digital sensor does not deliver valid values because it either is not correctly linked or a scanned is in process on the JUMO digiLine bus. Error in the formula used by the mathematics module: The result from a mathematical formula is invalid (e.g. division by zero)	-----
Display overrun: The value to be displayed is outside the limits of -99999 to 99999.	* * * * *

Example of display of invalid values:

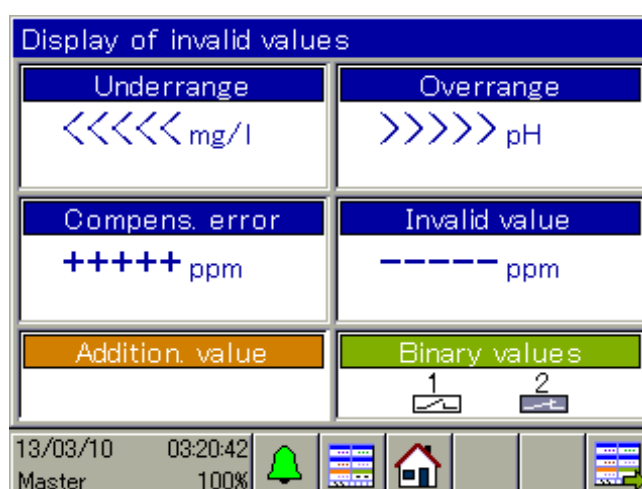

8 Operation

8.1.4 Entry of text and numbers

Dialogs for entry of text or numbers appear automatically when the corresponding entry field is tapped.

Text entry dialog



There are 2 special features in addition to conventional entry of characters:

- **Special characters** appear for selection automatically at those buttons that contain special characters.
- **The text list** simplifies entry of frequently used character strings. A history of character strings entered is stored internally in the device. These are then available for selection in the text list and can be copied simply by tapping the line for the entry.

Entry line

Selection of umlauts/
special characters

Selection from the text

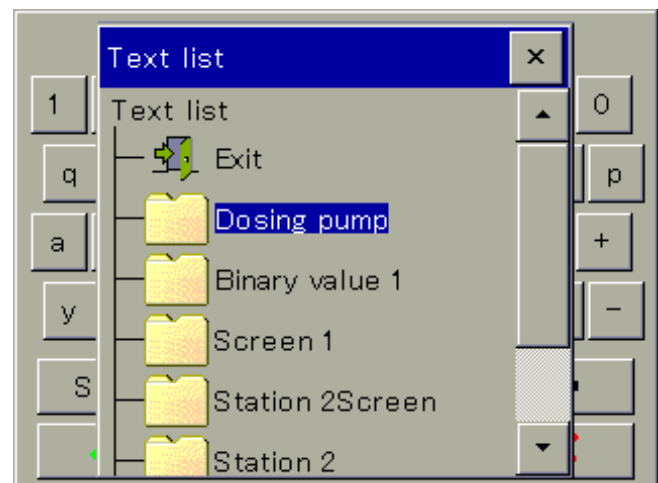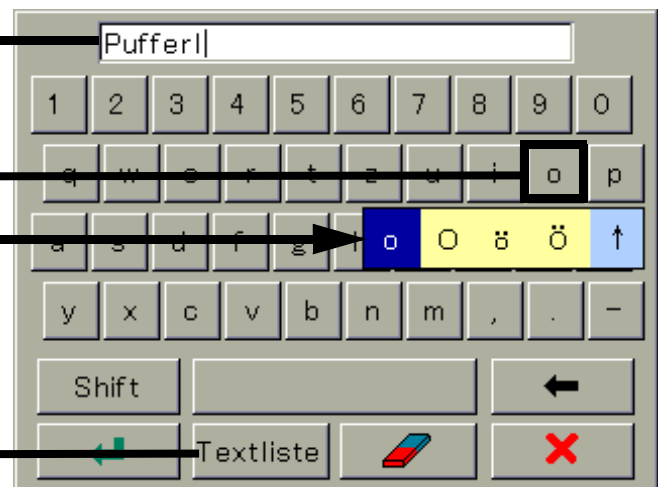


Number entry dialog

This dialog opens if an entry field for numerical values is tapped.







Special feature: The **"Exp" button** permits entry of an exponent as a power of ten.

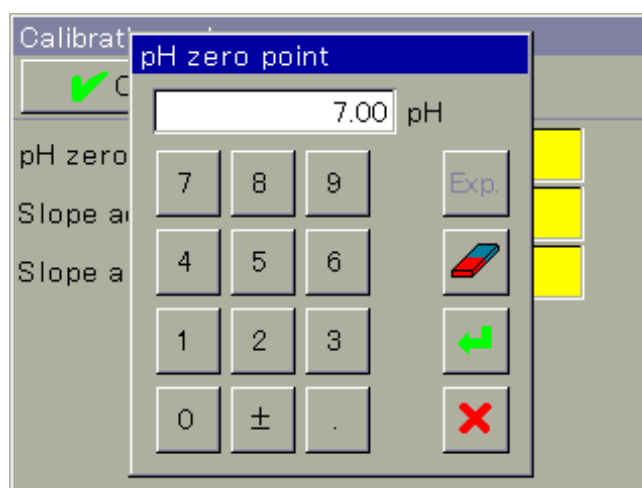Procedure:

Enter the numerical base value > Tap "Exp" > Enter the exponent > Confirm the entry



Entry dialog buttons

Explanation	Button
Confirm entry (the value entered is accepted and the dialog closed)	
Cancel entry (the value entered is discarded and the dialog closed)	
Delete 1 character	
Delete entry line completely	
Open text list (select from a history of character strings entered)	
Entry of an exponent as a power of ten	

8 Operation

8.2 Device menu



NOTE

Operation depends on the user's rights. Operating and setting options are restricted, depending on the user who is logged in.

The "Master" and "Service" users have access to all menus and functions (default setting).


⇒ Chapter 8.1.1 "Passwords and user rights", page 83

The device menu contains submenus for setting and configuring all device functions.

To open one of the submenus in the device menu, tap the corresponding entry. The device menu is opened by tapping the "Device menu" button at the operating level.

⇒ Chapter 8.1.2 "Display and control elements", page 85

⇒ Chapter 8.1.3 "Menu structure", page 86

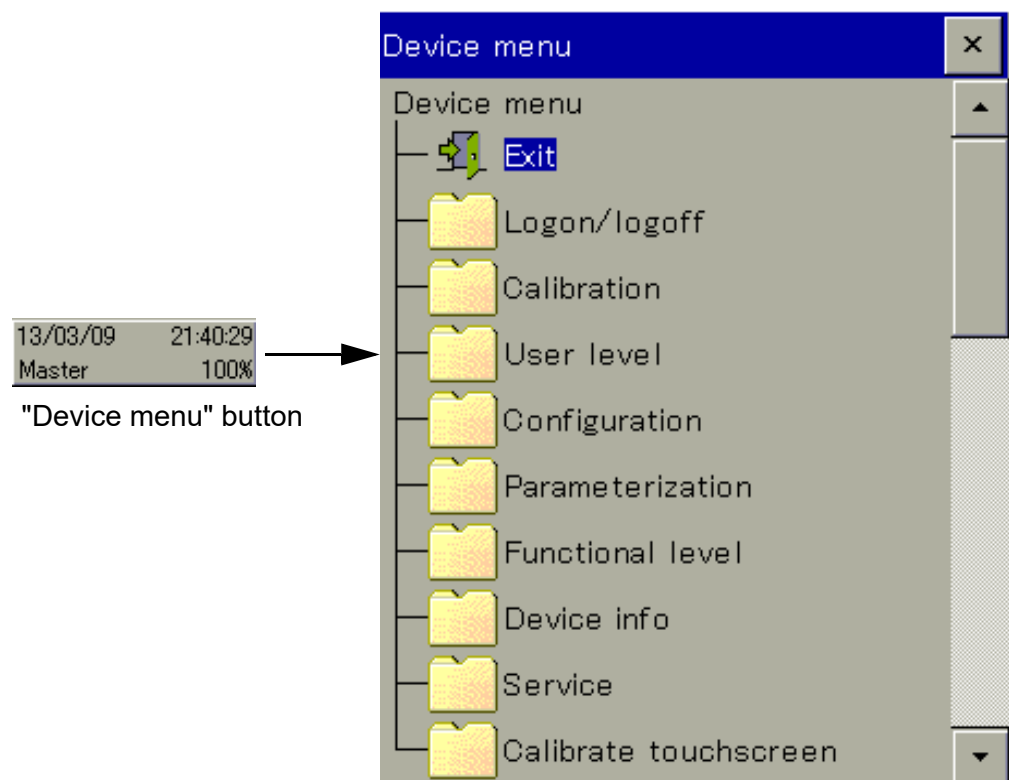


Device menu items	Description
Log-on/Log-out	The user logs on and out here. In addition, passwords can be changed here. ⇒ Chapter 8.2.1 "Log-on/Log-out", page 97
Calibration	Sensor calibration can be configured and performed here. In addition, current calibration values and the calibration log-book are displayed. ⇒ Chapter 12 "Calibration in general", page 233

Device menu items	Description
User levels	<p>User levels permit fast and simple access to a selection of up to 50 frequently needed parameters per user level from the parameter level and the configuration level. Up to 16 user levels can be set up.</p> <p>No user level is configured at the factory. The user level must be configured and loaded into the device with the aid of the JUMO PC setup program. The "User Levels" entry does not appear in the device menu as long as no user level is configured.</p> <p>⇒ Chapter 8.2.2 "User levels", page 98</p>
Configuration	<p>Basic operation of the device inputs and outputs and the device functions is set here.</p> <p>⇒ Chapter 10 "Configuration", page 141</p>
Parameterization	<p>Setting the date/time and controller parameter sets, as well as pre-setting controller setpoint values.</p> <p>Fixed numerical values can be defined in the "Manual values" submenu.</p> <p>⇒ Chapter 9 "Parameterization", page 135</p>
Functional level	<p>Manual operation of certain functions for testing and diagnostic purposes (e.g. start wash contact or reset counter)</p> <p>⇒ Chapter 8.2.3 "Functional level", page 99</p>
Device information	<p>Information about the device hardware and software, viewing of current analog and binary values for all device functions, inputs, and outputs</p> <p>⇒ Chapter 8.2.4 "Device information", page 101</p>
Service	<p>Displaying and reading service data for diagnostic purposes, saving and loading a default configuration</p> <p>⇒ Chapter 8.2.5 "Service", page 102</p>
Calibrate Touchscreen	<p>Calibration of the touchscreen to ensure the reliability and convenience of touch control</p> <p>⇒ Chapter 8.2.6 "Calibrating the touchscreen", page 103</p>
Digital sensors	<p>Open an overview of all configured digital sensors (Assignment table), check the link status of the sensors and manually link sensors that are not linked</p> <p>⇒ Chapter 8.2.7 "Digital sensors", page 103</p>

8 Operation


To navigate in submenus, menu items are opened by tapping the folder icons identified with a plus sign. Open menu structures are identified with a minus sign and can be closed again by tapping the folder icon. Currently open windows can be left either by tapping "Exit" or the "Close window" button. Data are saved automatically when an open window is closed. Settings that were changed in the submenus take effect.

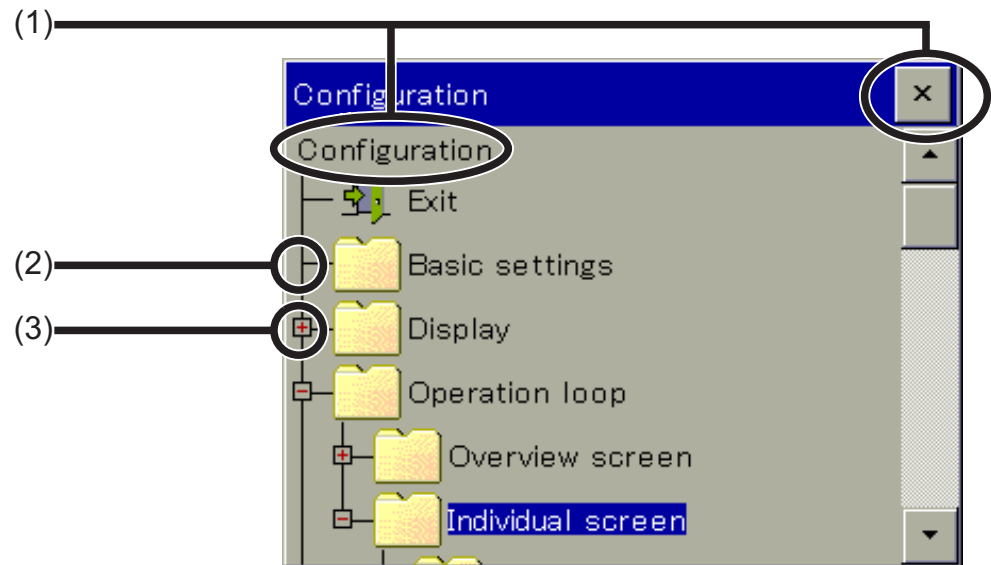

- (1) Close window
- (2) Closed menu structure (plus sign)
- (3) Open menu structure (minus sign)

8.2.1 Log-on/Log-out

To access the "Log-on/Log-out" menu, tap the "Device menu" button and then select the "Log-on/Log-out" menu item. The user can log on/off here and change passwords for the currently configured user accounts.

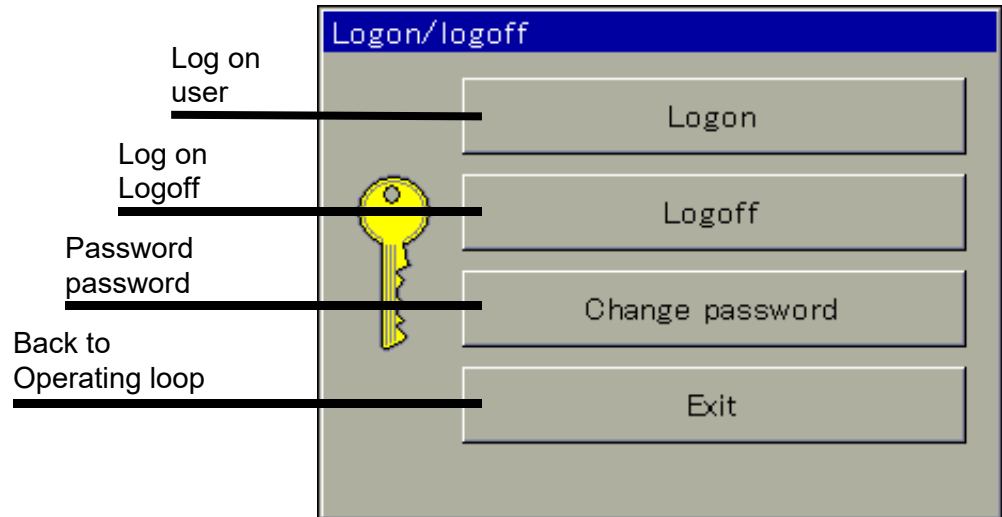

An overview of the factory-configured users and their rights can be found in the "User Management" chapter.

⇒ Chapter 8.1.1 "Passwords and user rights", page 83

After the re-authentication time has elapsed, a logged-on user is logged off automatically. It is then necessary to log on again.

The re-authentication timeout does not take effect if:

- The logon/logoff dialog is open
- The memory manager is open
- During calibration of analysis sensors
- During calibration of the touchscreen

The re-authentication time is set using the JUMO PC setup program.

⇒ Chapter 22.8.3 "User list", page 349

8 Operation

8.2.2 User levels

A user level consists of a user-defined list of parameters and configuration settings. Up to 16 such user levels can be set up. You need the JUMO PC setup program to configure the user levels.

⇒ Chapter 22.8.6 "User levels", page 360

User levels can be opened from the device menu only if they have been configured beforehand with the aid of the PC setup program. If this has not been done, there is no user level in the device menu.

Opening a user level provides easy and uncomplicated access to the selected parameters and settings. These can be edited from here. The entry dialog is opened by tapping the display field for a desired data point.

View of a user level (example)

User level	
Device name	Name
Config. IP address	Automatic
DNS device name	North plant
Time dosing pump	00:03:00
Washing time pH-s...	10 min
Washing time cond...	10 min

To make an entry, tap the display



NOTE

Changing the date/time settings and the configuration data that are relevant for recording of measurement data initiates a restart of measurement data recording by the data monitor or recording function. This is also the case if the change is made from a user level. The restart terminates the current recording of measurement data. In the case of the "Data monitor" function, the content of the screen is deleted.

8.2.3 Functional level

The functional level is used primarily for testing and diagnostic purposes. Analog and binary values of the outputs can be controlled manually here. This may be useful, for instance, for checking an individual piece of equipment in a plant. When performing maintenance and repair work, counters for operating hours, switching actions and flow rates can be reset.



WARNING!

When manually controlling equipment in a system, it is absolutely essential to take appropriate measures to prevent personal injury and property damage. Ensure that only qualified personnel has access to the functional level. The factory settings restrict access to just "Master" and "Service" users.

Functional level menu items:

- **Flow:** Display the current flow rate, display and reset the total quantity counter
- **Washtimer:** Manually start the wash process, display the time remaining until the wash process and the current binary value
- **Analog outputs:** Read and manually control the current values of analog outputs
- **Digital outputs:** Read current binary values, manually control digital output outputs
- **Counters:** Reset the counters (operating hours and service counters)



NOTE

Manual control of analog and binary outputs is possible only if the "Enable menu. mode" option is activated for the specific output in the configuration. In general, actions at the function level can be executed only by the "Master" and "Service" users.

- ⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161
- ⇒ Chapter 10.8 "Digital outputs of base unit and optional boards", page 163
- ⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

8 Operation


Manual control of analog/digital outputs

Activate the configuration setting "Enable menu mode" for the outputs you wish to control manually. "Manual mode buttons" buttons for manual control for these outputs then appear at the functional level. To adjust output values manually, proceed as follows:

Select Device Menu > Functional Level > Analog or Digital Output tab > Tap "Manual mode" button > Tap Output Display field > Entry dialog opens > Enter value > Confirm

An activated manual mode can be recognized by the green background of the particular output value display at the functional level.

View of functional level analog outputs (example)

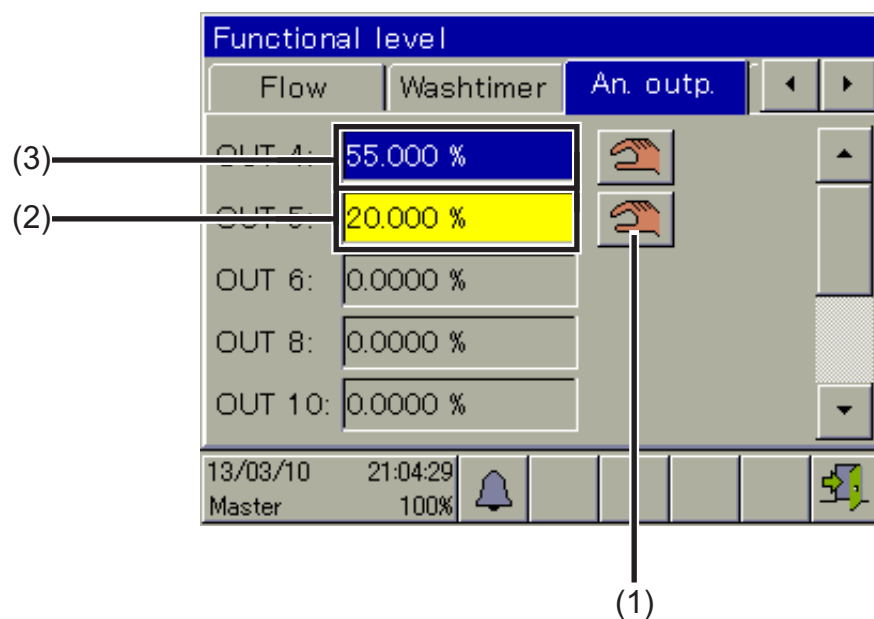

- (1) "Manual mode" button
- (2) Yellow background: Manual mode off
- (3) Green background: Manual mode active

Once "Manual mode" has been switched off, the output immediately returns to the value assigned in its configuration. The output display is once again yellow.

8.2.4 Device information

For testing and diagnostic purposes, the "Device info" menu provides access to extensive data about the hardware and software of the device, as well as current analog and binary values.

Device Info menu items:

- **General:** Information about the main board, device software and Ethernet configuration
- **Slots:** Equipping overview of expansion slots, display of diagnostic and version information for the installed optional boards
- **Inputs/outputs:** Overview of all analog and binary values of the inputs and outputs of the device
- **Functions:** This menu is particularly helpful when checking functions after configuration changes. It contains detailed information about all internal functions (math/logic, flow, limit value, timer, washtimer, counter, and controller) via their current status.
- **Ethernet info:** Ethernet communication statistics for diagnosis by trained personnel

8 Operation

8.2.5 Service

The "Service" menu is used for in-device troubleshooting and diagnostics. It is intended primarily for trained personnel. When troubleshooting together with Service, the operator can access data that the JUMO service technicians need for diagnosis.




NOTE

The Service menu appears in the Device menu only if a user with corresponding user rights is logged in.

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

Service Menu items

- **Default configuration:** The operator can store the current device configuration in the device's memory. This configuration can be reloaded as the active configuration at any time. This is important, for instance, to return to the initial configuration after configuration changes made for testing purposes.

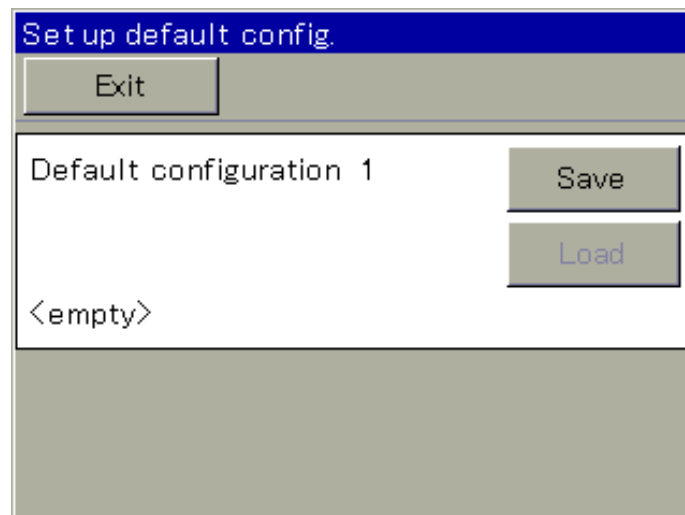

Configurations can also be saved with the PC setup program or on a USB flash drive with the aid of the Memory Manager.

⇒ Chapter 8.4 "Memory Manager (USB flash drive)", page 116

- **Debug Window:** The Debug window can be used to check the behavior of the device software in detail. Data are displayed to assist the JUMO service technicians during troubleshooting.
- **Digital sensor 1 to 6:** For each digital JUMO sensor from the type JUMO ecoLine or JUMO tecLine that is operating on the device, a menu appears here that allows you to reset the calibration data of the sensor to the default settings.
- **Service data: Status information** that can be evaluated by JUMO service personnel for diagnostic purposes can be read here. In addition, the **"Service count."** and **"Internal data"** are displayed. The

service counters record the number of switching operations executed by the binary outputs. The **voltage of the buffer battery** and the **board temperature** are shown in the "Internal data".



CAUTION!

A buffer battery is built into the device. Its purpose is to maintain data when the device is switched off or if the voltage supply is interrupted. If the battery approaches the end of its operating life (approximately 7 years) then a battery prealarm will indicate that status. When the battery is empty a battery alarm will indicate that status. The battery must be exchanged before it is empty. The battery must be exchanged by the JUMO Service department! In this case, send in the device!

8.2.6 Calibrating the touchscreen

To ensure precise and reliable operation of touchscreen control, you can open the "Calibrate touchscreen" menu.

The device then prompts you tap 4 points on the touchscreen. Simply follow the instructions on the display.



8.2.7 Digital sensors

The assignment table (list of all configured inputs for digital sensors) is displayed here. Up to 6 digital sensors can be connected and operated via the selected serial interface. The link status of the configured sensors is displayed in the form of a symbol in the right column.



Setpoint-Table			
	Description	Parameter	
1	Digit. sensor 1	pH	
2	Digit. sensor 2	pH	
3		No sensor	
4		No sensor	
5		No sensor	
6		No sensor	

8 Operation

Link status symbols for the assignment table entries

Status	Explanation	Symbol
linked	Communication between the sensor electronics and the JUMO AQUIS touch S has been successfully established. The sensor is operating.	
Installation	<p>The device searches for the individual assignment table entry of a linkable sensor. A new sensor can be linked manually or automatically if the following prerequisites are met:</p> <ul style="list-style-type: none">• The sensor type must match the settings of the assignment table entry.• The sensor version must be compatible• Operation of bus communication must be assured through correct interface settings (with JUMO digiLine electronics, the interfaces are configured automatically during the scan) <p>Known sensors are identified and assigned and linked with the known entry</p> <p>After successful assignment, the status changes from "Installation" to "linked" following connection of the sensor to the bus. If a sensor cannot be linked, the status remains "Installation". If the status has not changed from "Installation" to "linked" after a waiting period of about 15 seconds, linking of the sensor electronics has failed. A description of the startup procedure for digital sensors can be found in the chapter on startup.</p> <p>⇒ Chapter 7.2 "Digital sensors", page 76</p>	

In addition to the "Exit" button, this view also has "Info" and "Link" buttons. The following table explains the function of these buttons.




Explanation	Button
The "Info" button opens an overview of important information to more easily identify the individual sensor connected.	
With the "Link" button, you can access the submenu for linking sensors that are not linked. Digital sensors from the types JUMO ecoLine or JUMO tecLine must be linked by means of this button during startup. When errors occur during the startup of digital sensors, you usually have the ability here to detect connected digital sensors by means of a bus scan and then to link the detected sensors manually. Help for problems when sensor electronics cannot be detected or linked can be found in the Annex. ⇒ Chapter 24.1 "Troubleshooting and remedies for digital sensors", page 417	

Submenu for linking

In this menu, the bus can be "scanned" for connected sensors. The sensors detected are displayed in a list. Sensors that are not detected cannot be linked here manually. In addition to the "Exit" button, this view also has "info", "Scan" and "Link" buttons. Corresponding user rights are needed to access the "Link" submenu. The default settings authorize the "Master", "User 1", "User 2" and "Service" users for this.


⇒ Chapter 8.1.1 "Passwords and user rights", page 83

The following table explains the function of these buttons.

Explanation	Button
The "Info" button opens an overview of important information to more easily identify the individual sensor connected.	
Pressing the "Scan" button starts the search for sensors connected to the bus. Detected sensors are listed on conclusion of the bus scan. The digital sensors connected do not provide any measurement data for the duration of the scan. Instead of the measured values, the "Invalid display value" symbol appears in the associated measured value displays (see Chapter "Display of invalid values", page 91).	
Detected sensors can be linked manually with the "Link" button in this menu. It appears in this view when one of the detected sensors in the list has been highlighted by a tapping it in this menu. The procedure is described at the end of this table. Help for problems when digital sensors cannot be detected or linked can be found in the Annex. ⇒ Chapter 24.1 "Troubleshooting and remedies for digital sensors", page 417	




8 Operation

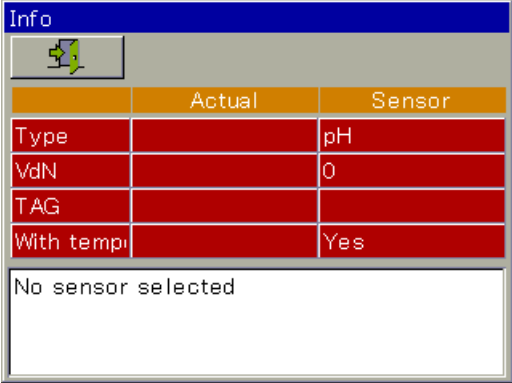Procedure for manual linking of digital sensors

Step	Action
1	In the "Digital Sensors" menu, highlight the assignment table entry to be linked.
2	Open the "Link" submenu by tapping the corresponding button in the "Digital Sensors" menu.
3	Open the "bus scan" by pressing the "Scan" button (magnifying glass).
4	In the list of detected sensors, highlight the one that you wish to link with the previously highlighted assignment table entry. Sensors with JUMO digiLine electronics can be identified by the hardware address on the nameplate of the JUMO digiLine electronics. It is also displayed in the list of detected sensors and in the sensor information ("Info" button).
5	The "Link" button now appears above the table. Press this button to link the selected assignment table entry with the sensor selected from the list of detected sensors.
6	<p>If the link was successful, the previously selected entry now has the status "linked" in the assignment table. If the digital sensor could not be linked, an error message appears. The error message displays a table with information about the selected assignment table entry and the sensor selected from the list of detected sensors. The error message is displayed in the lower area.</p> <p>Example of an error message: No assignment table entry was selected before the "Link" submenu was opened.</p> 

Bus status display

The operating status of the JUMO digiLine bus is visualized in the title bar. The symbols and their meanings are explained in the following table.

Green There are no bus errors. All sensors are linked and functioning.	
Red This symbol appears in the title bar when connecting sensor electronics that have not yet been linked with the device. As soon as the sensor electronics are linked, the bus status changes from "Yellow" to "Green". In addition, the status "Red" is also displayed during a bus scan.	
Yellow The "Yellow" status appears in the title bar when digital sensors are not linked, e. g. As the result of defective components in the bus or a faulty configuration (see Chapter 24.1 "Troubleshooting and remedies for digital sensors", page 417). Furthermore, the "Yellow" status is also displayed when digital sensors are booted after a bus scan or after the device is switched on.	

8 Operation

8.3 Alarm/Event list


The JUMO AQUIS touch S offers the option of configuring alarm functions and event functions in numerous functions. In addition, the electronics of the JUMO AQUIS touch S are self-monitoring and trigger corresponding preprogrammed alarms and events in case the internal device malfunctions.

Alarms and events appear in the lists in chronological order. The respective list is opened from the "Alarm/Event List" menu.

The alarm/event list is opened by tapping the "Alarm/event list" button at the operating level.

⇒ Chapter 8.1.2 "Display and control elements", page 85


⇒ Chapter 8.1.3 "Menu structure", page 86

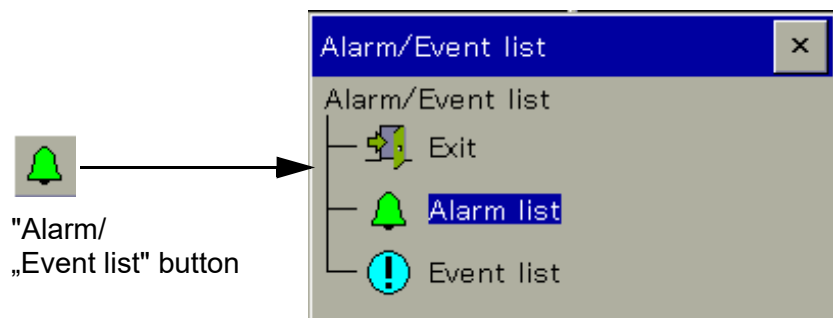



8.3.1 Alarm list

The alarm list displays the current alarms. Alarms are cleared upon elimination of the alarm condition. Each alarm triggers a "collective alarm". The alarm list view contains buttons for viewing details about alarms and acknowledging collective and dosing alarms.

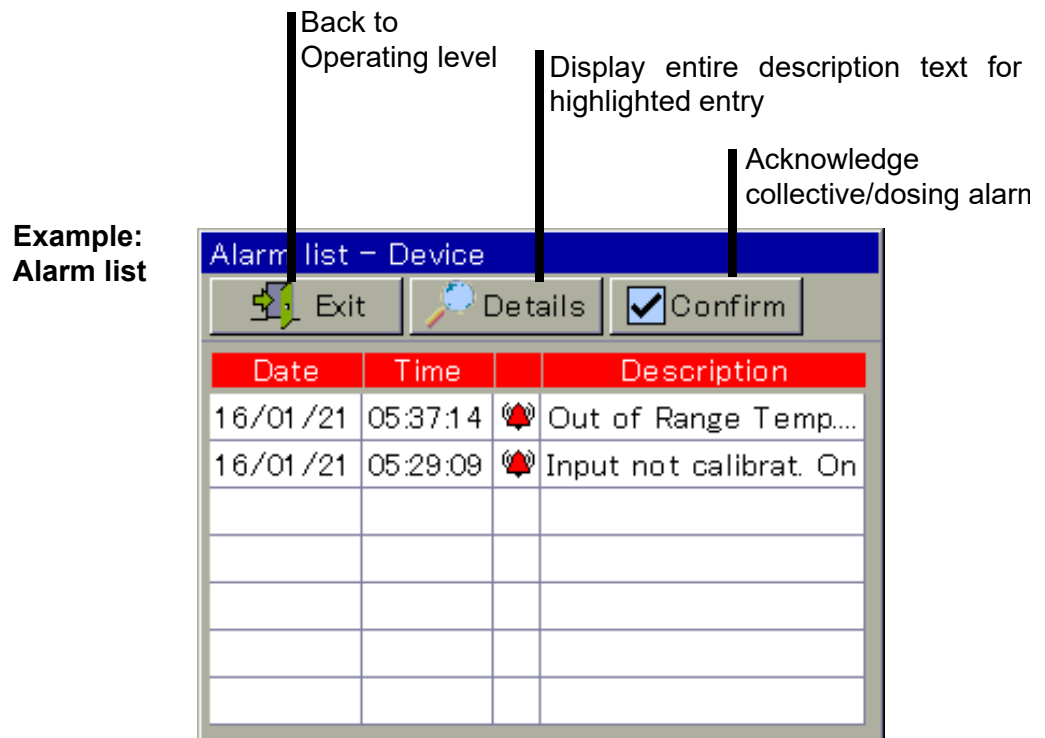⇒ "Acknowledging collective/dosing alarms", page 111



Alarms are visualized further by the color of the bell icon on the "Alarm/event list" button, in the "Alarm list" menu item of the "Alarm/event list" menu and in the title bar of the operation screens. The symbols used for visual signaling of alarms are listed in the following table.

Meaning	Symbol
at least 1 alarm present	
Details can be viewed in the "Alarm list" and in the "Event list".	
no alarms	

Visualization of alarms in the title bar can be activated in the configuration. The most recently occurring alarm then flashes red in the title bar of the operation screens.

⇒ Chapter 10.3.1 "General information", page 143

If the alarm from a measurement input disappears, the color of the respective measuring-value display changes in accordance with the color settings.

⇒ Chapter 10.3.3 "Colors", page 144

8 Operation

All alarms are available in the binary selector. In this way, digital outputs or other internal functions of the device can be controlled via alarms.

Acknowledging collective/dosing alarms

The **collective alarm** combines all alarms in the alarm list. It simplifies signaling of one or several active alarms with external indicating devices or to control rooms. The binary signal for the collective alarm is available in the binary selector in 2 versions:

- **Collective alarm:** Is triggered by the occurrence of any alarm and disappears only after all alarms in the alarm list have been cleared.
- **Collective alarm ack.:** Is triggered by the occurrence of any alarm and disappears when the alarm is acknowledged.

Selection of a collective alarm when configuring device functions and digital outputs:

Binary selection > Alarm and Internal Signals >
Collective Alarm/Collective Alarm Ack.

Dosing alarms are triggered by the controllers when the control deviation is greater than the "alarm tolerance". An "alarm delay" can be set for each dosing alarm. Dosing alarms and acknowledgment of them must be activated in the controller configuration. The "alarm tolerance" and "alarm delay" settings are made in the controller parameters.

⇒ Chapter 10.14.1 "Configuration of the controllers", page 197

⇒ Chapter 9.2 "Parameter Sets (Controller parameter)", page 136

Selection of a dosing alarm when configuring internal functions and digital outputs:

Binary Selection > Controller > Dosing Alarm, Controller 1 to 4

Collective and dosing alarms can be acknowledged with the "Confirm" button.


8 Operation

8.3.2 Event list

A number of situations that are essential for tracking and diagnostic purposes are logged in the event list. The entries are identified with corresponding icons on the basis of the type of event. In addition, events are logged with an icon in the data monitor/recording function.





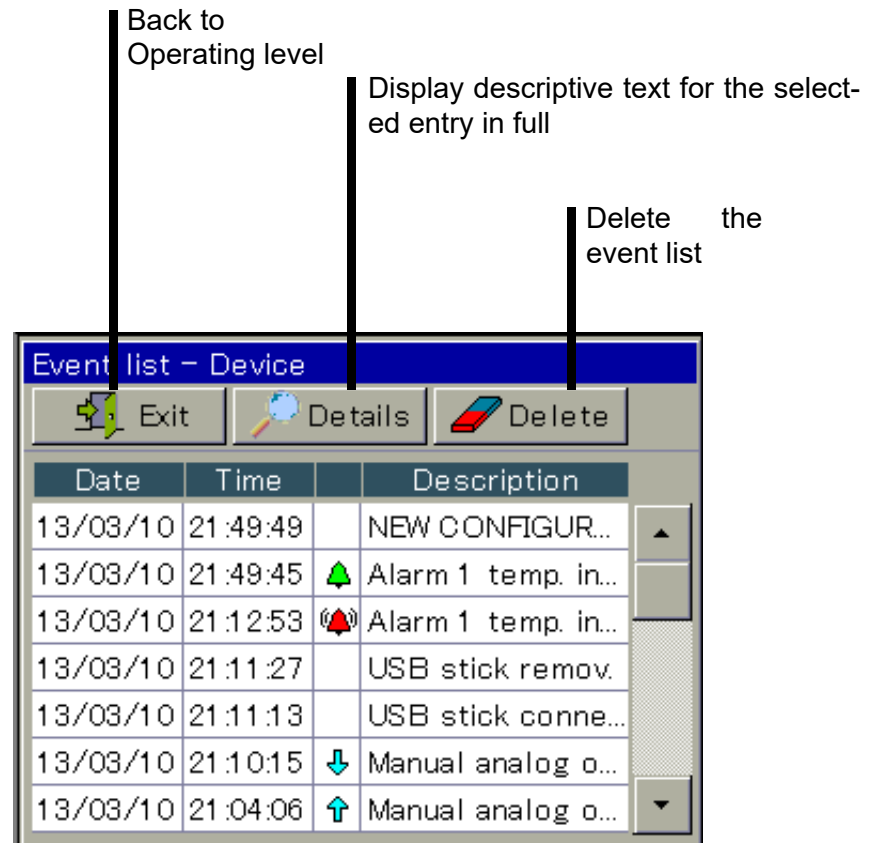

Detailed information on the data monitor/recording function

⇒ Chapter 8.6 "Operation of the data monitor/recording function", page 125



8 Operation

The following table provides an overview of the possible entries in the event list.

Events	Symbol
Power on	
Power off	
Alarm occurred	
Alarm cleared	
<ul style="list-style-type: none"> Configured event (condition occurred) Calibration start Timer start Wash contact start Controller manual mode on Controller self-optimization started 	
<ul style="list-style-type: none"> Configured event (condition ended) Calibration stop/cancel Timer stop Wash contact stop Controller manual mode off Controller self-optimization ended 	
<ul style="list-style-type: none"> Switch daylight saving time No connection to an input module Configuration change Reset counter Reset flow rate measurement Confirm collective alarm E-mail sent (with indication of the e-mail index 1 to 5) E-mail error (with indication of the e-mail index 1 to 5^a and error number^b) 	No symbol

^a Up to 5 event-controlled e-mail notifications can be set up in the JUMO PC setup program. The notifications are numbered consecutively with an index from 1 to 5. The index corresponds to the tab number on an e-mail template in the JUMO PC setup program.

^b The meaning of each error number is listed in the following table.

8 Operation

Error codes in the event list when sending an e-mail via modem and Ethernet

Error number	Meaning
120	Step error in state automation
121	Invalid response length
122	No CONNECT from modem
123	FCS checksum incorrect
124	Unexpected value or response
125	Conf request not accepted
126	No conf request from opposite end
127	No CHAP request from opposite end
128	Response timeout
129	Unknown modem response
130	Unexpected OK from modem
131	Unexpected CONNECT from modem
132	Unknown frame received
133	Unexpected PROTOCOL from modem
134	Unexpected COMPRESS from modem
135	Invalid PPP packet received
136	Unexpected BUSY from modem
137	Unknown authentication protocol
138	Ignored LCP option
139	Unexpected DELAYED from modem
140	Unexpected NODIALTONE
141	Unknown PPP protocol
142	Unknown PAP code
143	Ignored IPCP option
144	Ignored IPCP code
145	Unknown CHAP code
146	IP checksum incorrect
147	Unknown IP protocol
148	Unknown ICMP type
149	Unknown LCP type
150	Received as client DNS request
151	Unknown DNS error
152	DNS response is split
153	No IP received via DNS
154	Unknown UDP port
155	TCP checksum incorrect
156	Incorrect TCP port
157	Unknown TCP-SYN option
158	TCP port not used
159	Unknown POP3 response
160	Unknown SMTP response
161	Unknown DNS name
162	No MD5 requested for CHAP

163	Authentication error
164	Canceled from opposite end
165	Error creating TCP socket
166	Error binding TCP socket
167	Error during TCP connect
168	Error sending TCP telegram
169	Error closing TCP socket
170	Error during TCP listen
171	Reset during TCP accept
172	Error during TCP accept
173	SMTP server reports syntax error
174	TCP socket is already closed
175	Incorrect frame configuration
176	Already sent from the gateway


8 Operation

8.4 Memory Manager (USB flash drive)



NOTE

The USB host socket is required to connect the USB flash drive (see Chapter 4.2 "Order details", page 23, Extra Code 269).

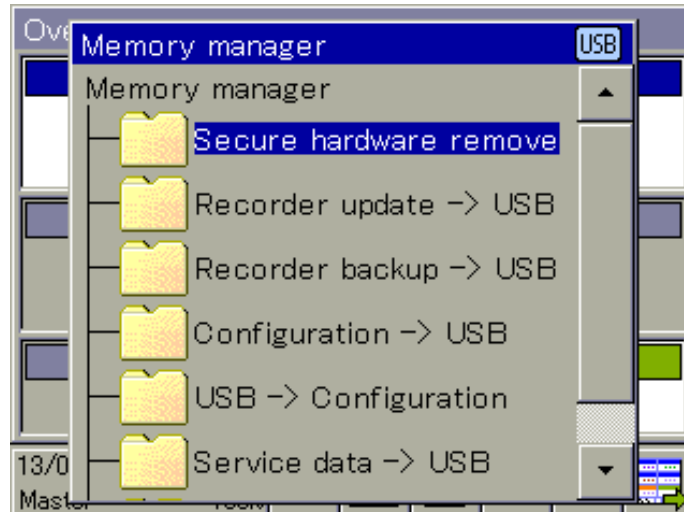

Data are transferred between the JUMO AQUIS touch S and a USB flash drive via the memory manager. To open the memory manager, close all windows and insert the USB flash drive into the USB host interface. The memory manager will then open automatically. You require the relevant user rights for access to the menu options "USB->Configure devices" and "Software update". The factory settings authorize the "Master" and "Service" users for this.

⇒ Chapter 8.1.1 "Passwords and user rights", page 83

Memory Manager menu items:

- **Safely remove hardware:** To prevent hardware damage or loss of data, it is necessary to select this menu item before removing and inserted USB flash drive. Please follow the instructions on the device's display.
- **Recorder Update -> USB:** Use this function for **regular retrieval of recorder data** and **continuous archiving** of measured-data histories. Measurement data that have not yet been retrieved are stored on the flash drive together with their configuration data. The measurement data are stored in DAT files and the configuration data in SET files. These files can be opened and evaluated with the aid of the JUMO PCA3000 evaluation software. Data that has been read out is marked internally as retrieved and the available memory display is reset to 100 %.



CAUTION!

Ensure that recorder updates are performed in a timely manner!
When the ring memory is full (display of remaining memory in device reads 0 %), measurement data in the ring memory is lost (starting with the oldest).

- **Recorder Backup -> USB:** This function is used to **back up** the recorder data to **prevent data loss**.
All measurement data in the ring memory (also data already retrieved) are transmitted to the flash memory together with their configuration data.
The measurement data are stored in DAT files and the configuration data in SET files. These files can be opened and evaluated with the aid of the JUMO PCA3000 evaluation software.
In contrast to Recorder Update, there is no internal marking of recorder data and no resetting of the available memory display.

**NOTE**

The "Recorder Update" and "Recorder Backup" functions are available only if the extra code "Recording" is enabled.

**NOTE**

A measuring data recording session is closed by changing configuration data that are relevant to the data monitor or registration function (e.g. scaling or description of an analog channel). The measurement data accumulated since the beginning of the current recording session are stored in the device in a file with the extension "DAT" together with an additional file with the extension "SET". A new recording session begins as soon as the new configuration goes into effect. One DAT file and one SET file are created for each recording session when recorder data are retrieved via Update or Backup.

- **Device Config. -> USB:** The complete, current configuration of the device is transmitted to the flash drive and saved in a file with the name "KONF304.SET". If the flash drive already contains a configuration file, a security prompt appears asking whether you are sure you want to overwrite this file. Pressing the "OK" button saves the current configuration to the flash drive and overwrites the previous file.

8 Operation

- **USB -> Device config.:** A configuration that is saved on the flash drive is loaded into the device and activated as the current configuration. Only the currently active configuration is overwritten. The previous default configuration is retained. If desired, the current configuration can be saved as the default configuration.
⇒ Chapter "Service Menu items", page 102



NOTE

A check of version compatibility is performed when transferring device configurations from the USB flash memory to the device. If the device setup on the USB flash drive is incompatible with the version of the device software of the destination device, the transfer is terminated. The second term of the device version number must be greater than or equal to the second term of the device version number used to create the device setup file.

Examples of combinations of version levels:

Device software version used to create the configuration = 304.**02**.xx, device software version of the destination device = 304.**02**.xx,
The versions are compatible

Device software version used to create the configuration = 304.**01**.xx, device software version of the destination device = 304.**02**.xx,
The versions are compatible

Device software version used to create the configuration = 304.**02**.xx, device software version of the destination device = 304.**01**.xx,
The versions are not compatible

- **Service data -> USB:** A data record with service-relevant information about the device is transmitted to the flash drive and saved in a file with the name "DEBUG304.SET". The information can be used by JUMO Service for diagnostic purposes.
- **Software Update:** The device software can be updated with the aid of a USB flash drive. To do so, an appropriate update file must have been saved on the flash drive in advance; this file can be obtained from JUMO Service.



CAUTION!

It is strongly recommended that the configuration and recorder data be backed up prior to performing a device software update.

8.5 Operating the controllers

**NOTE**

Since the automatic control mode is of prime importance in the case of controllers, correct configuration of the individual controller and its parameterization (adjustment of the control response) are very important for achieving good process value stability.

Before starting up a controller channel, ensure that all settings in the configuration and the parameterization are correct.

⇒ "Operating the controllers", page 119

⇒ Chapter 9.2 "Parameter Sets (Controller parameter)", page 136

**NOTE**

In most cases, the parameterization are made automatically with the aid of self-optimization. In exceptional cases, however, it may be necessary to determine

the controller parameters experimentally or to calculate them and then enter them into the controller's parameter sets manually.

How to operate the 4 different operating modes (automatic mode, manual mode, hold mode and self-optimization) is described in the following 4 subchapters.

8 Operation

8.5.1 Automatic control mode


The automatic control mode is the normal operating mode used by the controller to maintain the actual value of a process variable at the specified setpoint. The controller evaluates the control deviation and controls the output such that the actual value of the process approaches the setpoint. Changes to the current setpoint can be made in the controller operator screen or in the "parameterization". Two setpoints are stored for each controller in the parameterization. Setpoint 1 is active by default. Setpoint 2 can be activated instead of Setpoint 1 in each controller by means of "Setpoint selection". Setpoints can also be specified by external sources and transmitted to the controllers in the JUMO AQUIS touch S via analog inputs. "Setpoint selection" and the configuration of external setpoints are set in the "Setpoint configuration".

⇒ Chapter 9.3 "Setpoint values", page 139

⇒ Chapter 10.15 "Setpoint value configuration", page 204

8 Operation

On the operator screen of each controller, it is possible to change the current controller setpoint value, switch to the "Manual mode" or start "Self-optimization".

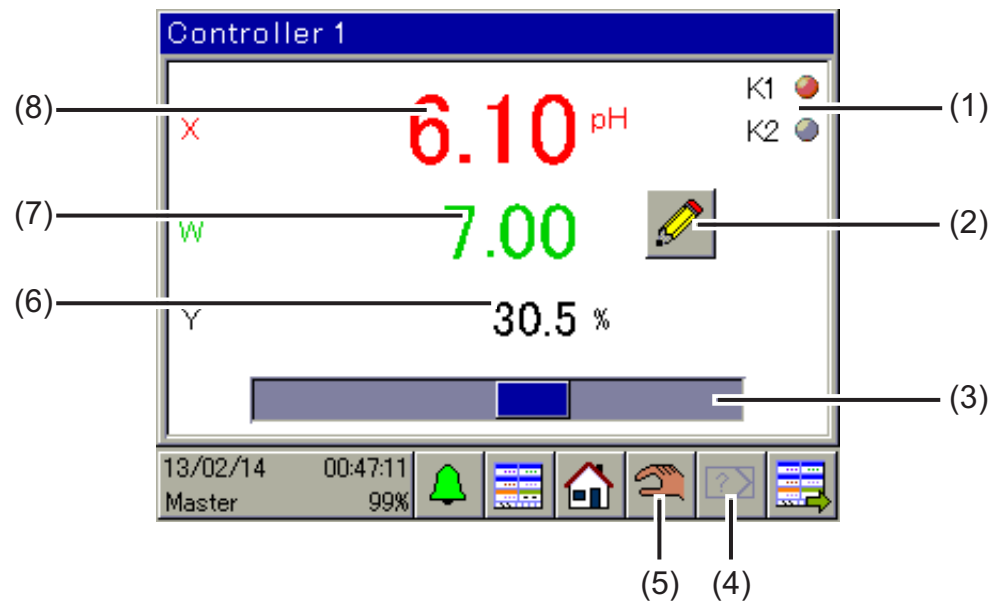

- (1) Display of the digital controller output signals as indicator lights
- (2) "Manual entry" button for changing the current setpoint value
A change to the currently active setpoint value is transferred to the controller parameters. When external setpoint values are used, this button is hidden.
- (3) Bar graph to display the current output level
- (4) Start/cancel "self-optimization" button
Self-optimization is used to determine the optimal controller parameters automatically.
- (5) "Manual mode" on/off button
When manual mode is activated, the output level assumes a preconfigured value and can then be changed manually.
⇒ Chapter 8.5.2 "Controller in the manual mode", page 122
- (6) Numerical display of the current output level
- (7) Display of the current setpoint value
- (8) Display of the current actual value

8 Operation

8.5.2 Controller in the manual mode


In manual mode, the user can manually control the controller outputs. The controller outputs can be controlled in two ways:

- **Entry of a numerical value:** Using the "Manual entry" button, the user can open a dialog to enter a fixed numerical value for the output.
- **Jogging mode:** Pressing and holding the arrow buttons sets the output to $\pm 100\%$ or the corresponding digital controller output to "on" depending on the controller configuration. After the button is released, the output level returns to 0 % or the corresponding digital controller output level back to "off". This function is used to operate actuators (e.g. solenoid valves, dosing pumps or motorized positioners) manually. To protect the actuators, the output does not change abruptly when the button is pressed, but rather in a continuous manner.

It is also possible to specify a manual output level in the configuration in order to ensure that a "safety output level" is generated when changing to the manual mode.

The manual output level is preset in the controller configuration.

⇒ Chapter 10.14 "Controller", page 197

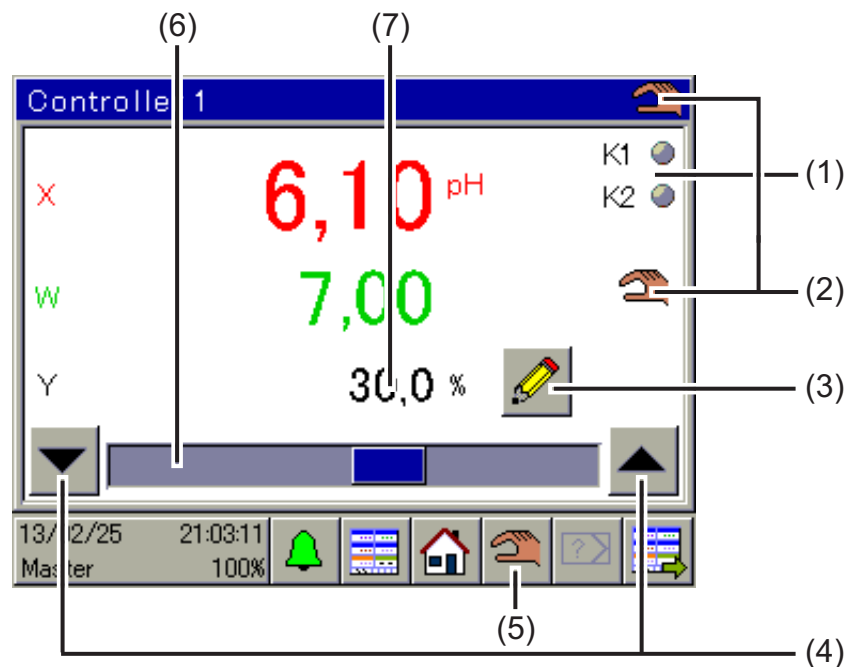

- (1) Display of the digital controller output signals as indicator lights
- (2) Display of active manual mode
- (3) "Manual entry" button for entering the manual output level
- (4) "Jogging mode" button for manual control of actuators
 - **Down arrow** for output level = -100 % or digital controller output off (only for three-point, three-point step controllers and continuous controllers with integral position controller)
 - **Up arrow** for output level = +100 % or digital controller output on
- (5) "Manual mode" on/off button
- (6) Bar graph to display the current output level
- (7) Numerical display of the current output level

8.5.3 Hold mode

The hold mode of a controller is activated in two ways:

- Calibration of the actual-value input
- Hold signal for the individual controller (specified in the controller configuration)


In the hold mode, automatic control is suspended. The controller generates the preconfigured value as output level unless acceptance of the hold output is disabled in the configuration. In this case, the output level is frozen.

Only the setpoint value can be changed in this operating mode. In the hold mode, however, the setpoint value change has no effect. The changed setpoint value takes effect only when the controller returns to the automatic control mode.

The hold mode has priority over the manual mode. If the hold mode is activated while the controller is in the manual mode, the controller changes from manual mode to hold mode and then returns to manual mode when hold mode is deactivated.

The hold output level is preset and the digital signal for activating hold mode is set in the controller configuration.

⇒ Chapter 10.14 "Controller", page 197

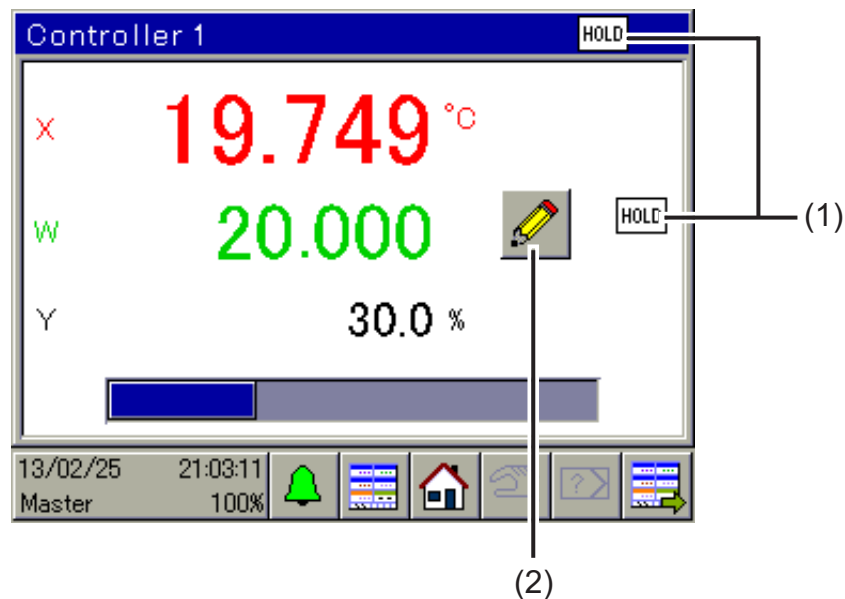

- (1) Display of active hold mode
- (2) "Manual entry" button for changing the current setpoint. The change to the currently active setpoint is transferred to the controller parameters. However, the output remains frozen during the hold mode. When external setpoint values are used, this button is hidden. To configure external setpoint values:
⇒ Chapter 10.15 "Setpoint value configuration", page 204

8 Operation

8.5.4 Optimizing controllers


The control response can be optimized by entering known controller parameters manually or automatically by means of "self-optimization". During self-optimization, the individual controller determines the mathematical parameters for a process. The controller changes the output level (step change) and evaluates the response of the actual value in the process (step response). Following successful self-optimization, the controller parameters determined in this way are adopted in the "Parameterization" function

⇒ Chapter 9.2 "Parameter Sets (Controller parameter)", page 136



WARNING!

During self-optimization, the controller outputs assume unpredictable values! Before starting a self-optimization routine, it is important to ensure that there is no risk of property damage or physical injury due to large deviations between the actual value and the selected setpoint value.

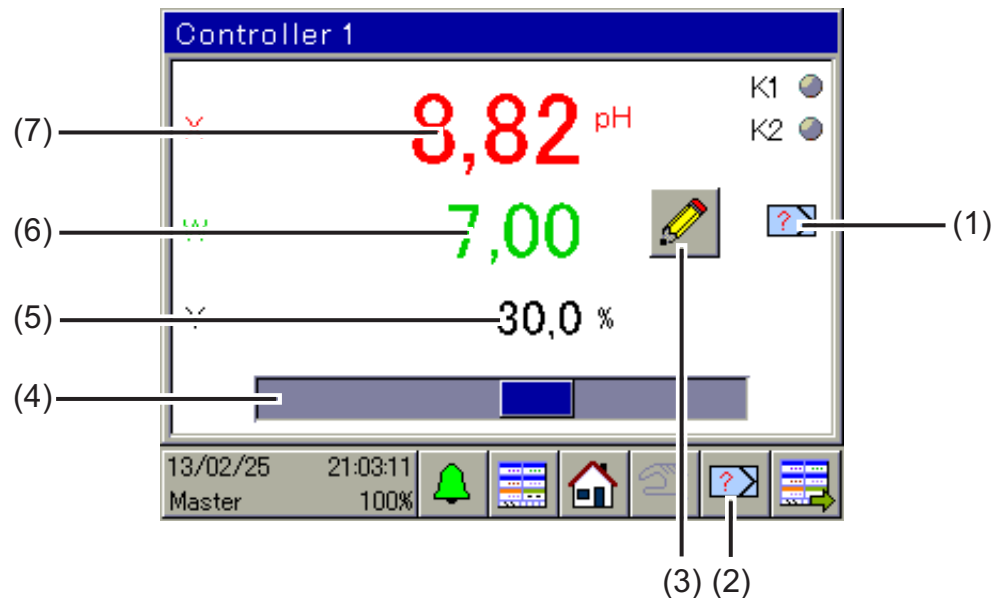

- (1) Display of active self-optimization
- (2) Start/cancel "self-optimization" button
- (3) Button for changing the current setpoint value
Changing the setpoint values during self-optimization is not possible.
- (4) Bar graph to display the current output level
- (5) Numerical display of the current output level
- (6) Display of the current setpoint value
- (7) Display of the current actual value


8.6 Operation of the data monitor/recording function

The standard version of the JUMO AQUIS touch S is equipped with a data monitor. It is used to record and view the analog measuring value and signal states of digital functions. Four groups are available, each of which can record up to 4 analog values and 3 binary values and display them in the form of a line recorder diagram. There is a separate diagram for each group in the operation loop. The recording function represents an Add-On to the data monitor and is available as an extra code.

⇒ Chapter 4.2 "Order details", page 25


The features of the data monitor and recording function are listed in the following table:

Function Features	Data monitor	Recording
Measured-data recording Recording of the measuring values from up to 4 analog channels and display of the measuring values in the form of a line recorder diagram	X	X
Digital data recording Recording of the binary values from up to 3 digital channels and display of the digital data in the form of a binary channel	X	X
Displaying events Event list entries are shown as icons in the line recorder diagram	X	X
History function For scrolling the line recorder diagram to the past to view measurement data and events from farther back in time		X
Zoom function The time range is compressed to view measured-data histories over longer periods in one area of the screen		X
Measurement data retrieval for archiving recorded measurement data and evaluating the data via JUMO PCC/PCA3000		X

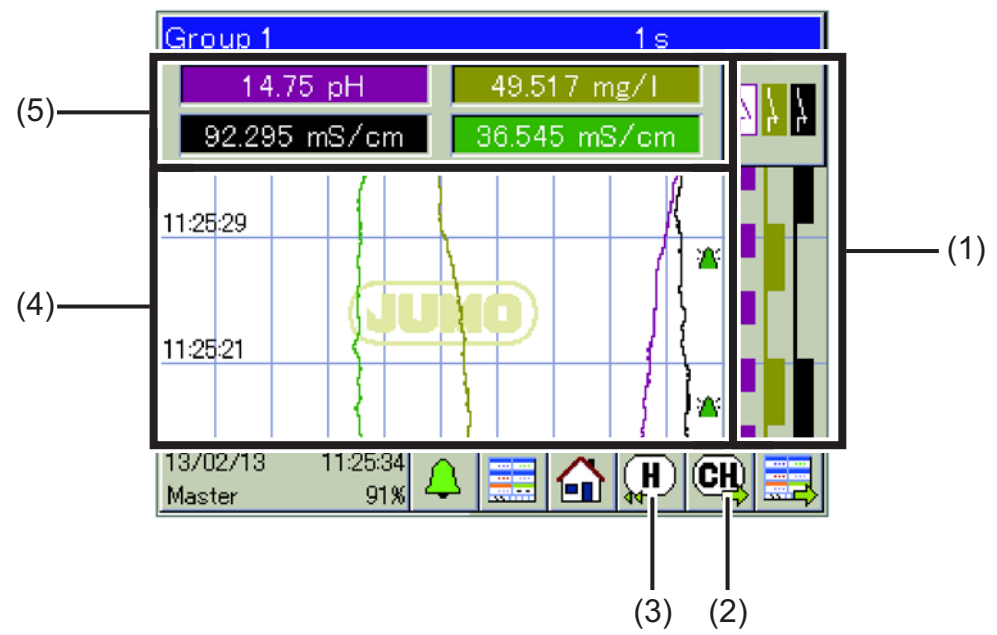

Stylus trace view

The "Next channel" button is used to scroll through the individual stylus trace views. For the particular channel selected, the appropriate scale with stylus trace appears in the stylus trace view. The position of the stylus corresponds to the current measured value of the channel.

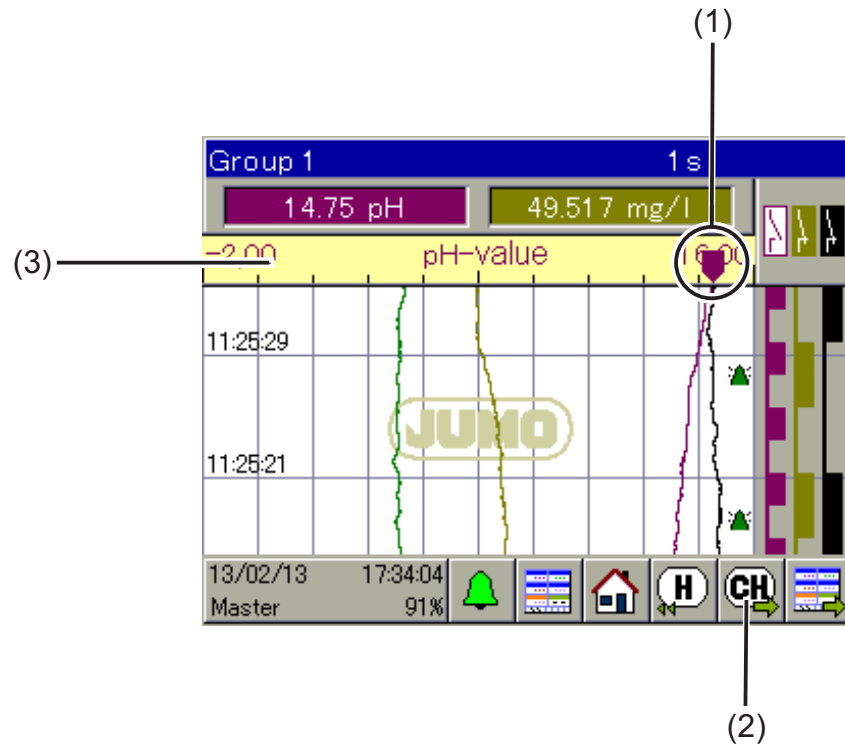


- (1) Stylus
The position on the scale corresponds to the current measuring value of the channel.
- (2) "Next Channel" button for scrolling through the stylus trace views (graphical representations of a scale with a stylus) for the individual channels 1 to 4
- (3) Scale
The beginning and end of the scale correspond to the "display range" in the configuration of the source of the analog value (e. g. analog input or mathematical formula).

8 Operation

Scrolling through the stylus trace views

The sequence of views that appear with repeated tapping of the "Next Channel" button can be seen in the graphic below.

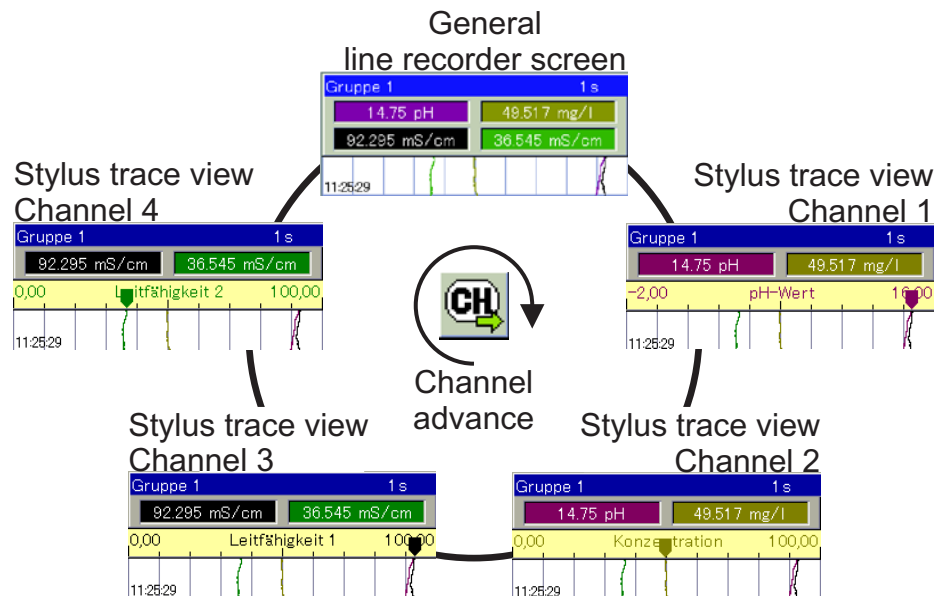


8.6.2 History function

The history function is available only in the recording function. It permits the user to view all recorded data in the ring memory on the device's display. The history is opened by tapping the "History" button on the operator screen for the respective group. The scroll and zoom functions can be used to put the view in the desired form.

- **Scroll:** The diagram can be scrolled forward and backward with the aid of the "Scroll" buttons.
- **Zoom:** The time range in the display can be compressed with the aid of the "Zoom" button. This permits viewing of measurement curves over a longer period of time in a single area of the screen.

The "Exit" button is used to leave the history view; the display then returns to the operator screen for the corresponding group.

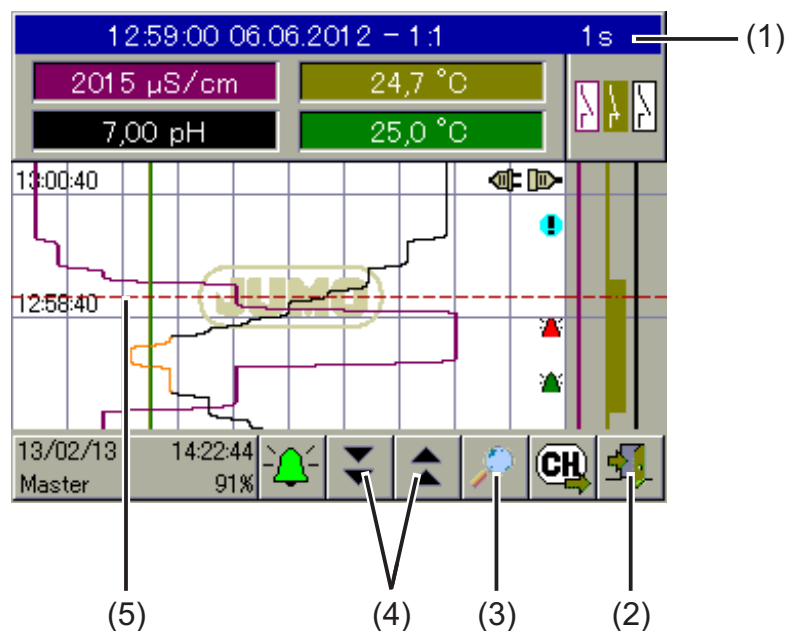

- (1) Title bar with indication of the cursor position (time and date), Zoom factor and memory cycle time
- (2) "Exit" button for leaving the history view
- (3) "Zoom" button for compressing the time range in the area of the screen
- (4) "Scroll" buttons for scrolling forward and backward in the History
- (5) Cursor

8 Operation

8.7 Online visualization

Using a web browser, all operation screens of the operation loop, the alarm/event list, the measurement data history of the recording function and the calibration logbooks can be opened and viewed online. This requires the "Standard online visualization" to be set as online visualization in the basic settings.

⇒ Chapter 10.2 "Basic settings", page 142

A PC with Microsoft® Windows® operating system and Microsoft® Silverlight® installed is required to use this function. Microsoft® Silverlight® is supported only by Microsoft® Internet Explorer®. Thus, Microsoft® Internet Explorer® is required to display the online visualization.

Actions involving the device functions (e.g. setpoint value entry or operating a controller manually) are not possible from a web browser and must take place directly on the device. Device settings can be made only on the device itself or via the JUMO PC setup program. In the online visualization, the "Device menu" button opens only the calibration logbook. In the recording function, the measured-data history can be opened.

Detailed information on the above-mentioned views:

⇒ Chapter "Operating images of the operating ring as an example", page 89

⇒ Chapter 8.3 "Alarm/Event list", page 108

⇒ Chapter 12.3 "Calibration logbook", page 235

The online visualization can be opened by up to 5 clients simultaneously.



NOTE

The web server can also be configured and activated as an alternative to online the visualization. When a web server is active, the website of the web server is displayed in the web browser instead of the online visualization.

The website is opened in exactly the same manner as the online visualization, i.e. by entering the IP address or the URL of the device. Up to 5 clients have simultaneous access. The user needs the web server password to open the website.

Operation of the web server visualization depends on the specific layout of the website stored in the device.

⇒ Chapter "Checking the e-mail function", page 386

The online visualization is open with a web browser.

Enter either the IP address or the URL of the JUMO AQUIS touch S in the address bar of your web browser.

⇒ Chapter 10.19 "Ethernet", page 210

When the website opens, it is possible to select between "Visualization" and "Quad View".

The visualization displays a view identical in appearance to the device. A request for a password appears next. The web server password specified in the web server configuration must be entered here.


⇒ Chapter 22.8.13 "Web server", page 386

As on the device, an operator screen can now be selected from the operation loop.

⇒ Chapter "Operating images of the operating ring as an example", page 89

Access to the device menu remains blocked. Only the calibration logbooks are displayed when the "Device menu" button is pressed.


⇒ Chapter 12.3 "Calibration logbook", page 235

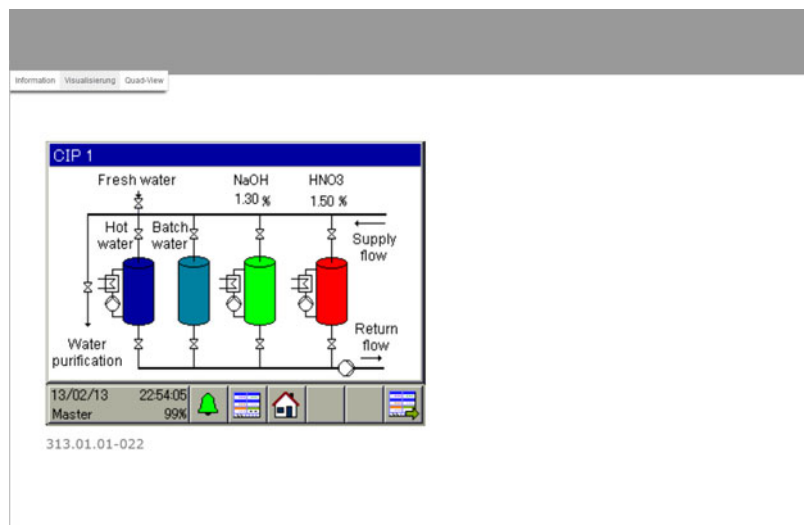



8 Operation

Quad View enables the user to open 4 different and independent views of the device. The open Quad View displays 4 plus signs for this purpose. Clicking on any one opens a request to enter the IP address of the JUMO AQUIS touch S. After the IP address has been entered, the selected view opens and can be controlled exactly as in the "Visualization" view.

Clicking on the minus sign at the upper left above one of the four views resets the Quad View.

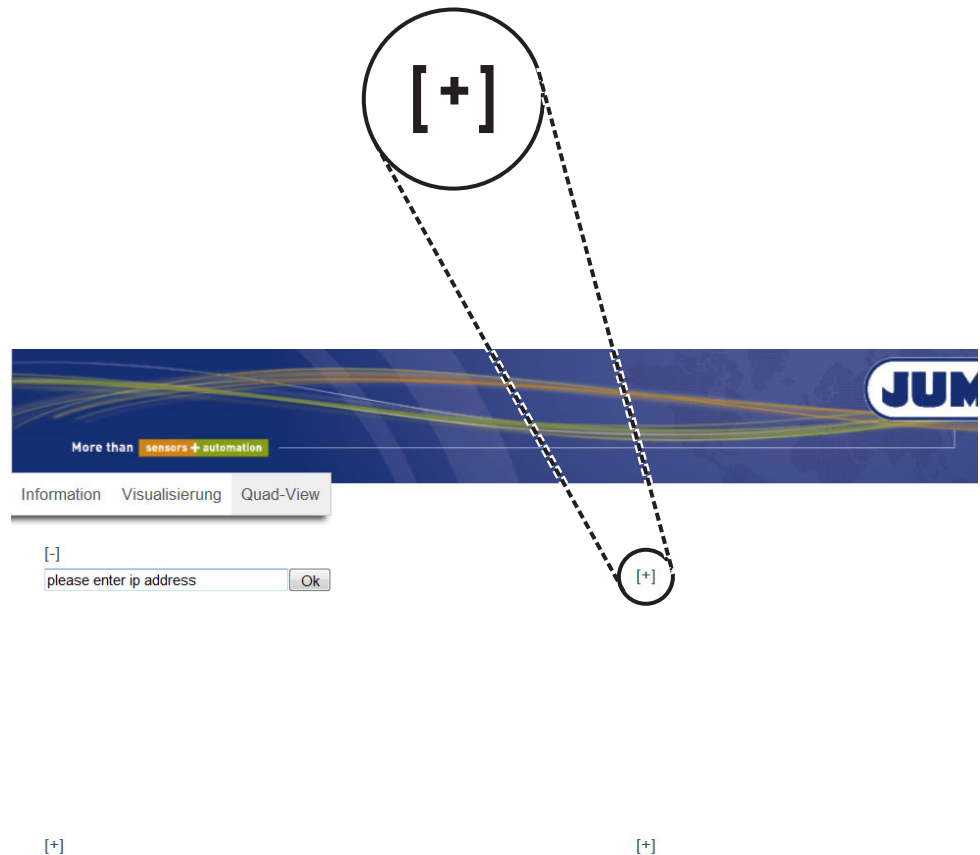

Example of a Quad View:

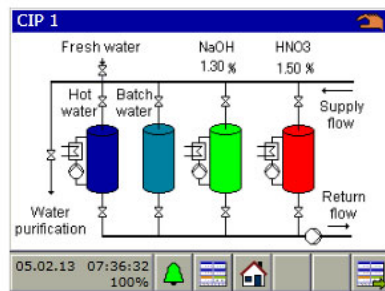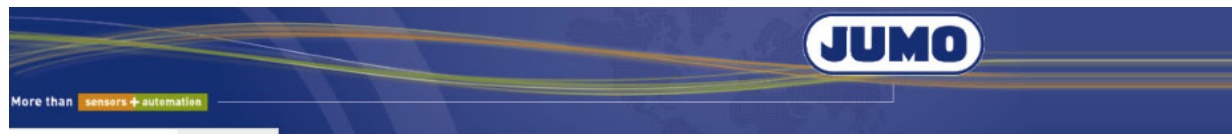

313.01.01-022



313.01.01-022

Kalibrierlogbuch

Exit Detail

Datum	rel.ZK %	TK %/K	T1 °C	T2 °C
21.01.2013	50,00			

313.01.01-022

Alarmliste - Ganzes Gerät

Zurück Details

Datum	Uhrzeit	Beschreibung

313.01.01-022

Control variables (parameters) for the device's functions are set here.

These include:

- Date and time
- Controller parameters (two parameter sets per controller)
- Controller setpoint values (two setpoint values per controller)
- manual values (for storing fixed numerical values, e.g. altered equipment data or conversion factors)

9.1 Date and time

The following table explains the parameters for setting the date and time. "Date and time" parameter list

Parameter	Selection/ Value range	Explanation
Current date/time	Date/time entry dialog	Setting the current date and time
Time zone GMT	-720 to +720 min	Difference between local time and GMT
Switch daylight saving time	inactive, automatic	activate/deactivate daylight saving time automatically
Start DST <ul style="list-style-type: none"> • Switch time Month • Switch time Weekday • Day in month • Switch time 	January to December Monday to Sunday First to fourth, last hh:mm:ss	Month for switch to daylight saving time Weekday for switch to daylight saving time Number of the selected weekday for switch to daylight saving time in the respective month Time to switch to daylight saving time
End DST <ul style="list-style-type: none"> • Switch time Month • Switch time Weekday • Day in month • Switch time 	January to December Monday to Sunday First to fourth, last hh:mm:ss	Month to switch to standard time Weekday to switch to standard time Number of the set weekday for switch to standard time in the month concerned Time to switch to standard time



NOTE!

The date and time are set in the online parameters in the JUMO PC setup program.

⇒ See chapter 22.10.1 "Date and time", page 390

9 Parameterization

9.2 Parameter Sets (Controller parameter)

The parameters for the controller channels determine the control response of the individual control circuits. For stable control response, these parameters must be matched to the prevailing process conditions. Each controller channel has two parameter sets; the selection is made by means of a digital signal. "Parameter set 1" is active by default. The second set can be activated as an alternative via the digital signal. In this way, it is possible to match each control channel to the changing process conditions to maintain a stable control response.

The best parameter settings can usually be found by the controllers' self-optimization function. This approach, however, works only with linear processes.

⇒ Operating the controllers Page 119

For non-linear processes (control paths), it is advisable to set the parameters manually.

The following table provides an overview of the parameter sets for the controller channels. Depending on the configuration of the particular controller channel, only valid parameters are active for entry. Those not used appear in light gray, but cannot be edited. Duplicate parameters refer to the first and second controller output.

Open: Device menu > Parameterization > Parameter sets > Controller 1 to 4 > Parameter set 1 and 2

Parameter (Formula sym.)	Possible settings	Explanation
Proportional band 1 (X_{p1})	0 to 9999.9 (Unit dependent on the actual value input variable) factory setting: 0.0	Spa of control deviation (actual value - setpoint value) in which the output level is proportional to the control deviation. The smaller the proportional band selected, the larger is the output level change with the control deviation. If the proportional band is set to a value of 0, the controller functions automatically as a limit monitor without a PID controller structure.
Proportional band 2 (X_{p2})		
Derivation time 1 (T_{v1})	0 to 9999 s customer: 80.0 s	Affects the derivative component (D-term) of the controller output signal. The purpose of the D-term is to damp the change of the actual value with time, and thereby suppress the hunting tendency. The effect of the D-term increases as the derivation time increases
Rate time 2 (T_{v1})		
Reset time 1 (T_{n1})	0 to 9999 s factory setting: 350.0 s	Affects the integral component (I-term) of the controller channel. The purpose of the I-term is to minimize the remaining control deviation. The larger the reset time the lower the effectiveness of the I component.
Reset time 2 (T_{n1})		

9 Parameterization

Parameter (Formula sym.)	Possible settings	Explanation
Switching period 1 (C _{y1})	0 to 9999 s factory setting: 20.0 s	If an output of a controller channel is configured as a Pulse length output, the period between the switching pulses is fixed. The cycle time should be selected such that, on the one hand, the cyclic controller output signal (e.g. for heating, cooling, feeding etc.) does not cause any disturbing fluctuations of the actual value, while, at the same time, the switching outputs and the equipment being controlled are not stressed unduly.
Switching period 2 (C _{y1})		
Contact distance (X _{sh})	-0 to 999.9 (Unit dependent on the actual value input variable) factory setting: 0.0	Minimum control deviation at which switching controller outputs become active Used to protect switching outputs and the connected equipment when controlled by modulating and continuous controllers with pulse outputs. With very small control deviations, switching of the controller output is suppressed.
Switching hysteresis 1 (X _{d1})	0 to 999.9 (Unit dependent on the actual value input variable) factory setting: 1.0	Switching distance between the output states (on/off) In switching controllers (proportional band = 0) The switching hysteresis should be selected such that the actual value resulting from the switching controller output signal does not vary too much, while, on the other hand, the switching outputs and the equipment being controlled are not stressed unduly.
Switching hysteresis 2 (X _{d2})		
Actuator run-time (TT)	5 to 3000 s factory setting: 60 s	Time required by an actuator to cover the entire output level range.
Working point (Y0)	-100 to +100% factory setting: 0%	constant value used to correct the controller working point The set value corresponds to the output level when the actual value and setpoint value are identical (control deviation = 0). In control structures without an I-term, serves as manual output level offset to correct remaining control deviations.
max. output level (Y1)	0 to 100% customer: 100%	maximum output level not active, limit monitor response (proportional band = 0)
Min. output level (Y2)	-100 to +100% customer: -100%	minimum output level not active, limit monitor response (proportional band = 0)

9 Parameterization

Parameter (Formula sym.)	Possible set- tings	Explanation
Min. relay switch-on time 1 (T_{k1})	0 to 60 s customer: 0.0 s	Depending on the Min. relay pick-up time, a lower limit is set for the pulse length or an upper limit is set for the pulse frequency. This limits the switching frequency for switching outputs.
Min. relay switch-on time 2 (T_{k2})		
max. pulse fre- quency 1	0 to 240 min ⁻¹ factory setting: 60 min ⁻¹	for continuous controllers with a pulse frequency output: maximum pulse frequency
max. pulse fre- quency 2		
Switch-on delay 1	0 to 999.9 s Customer: 0.0 s	Delay of the energizing edge with limit monitor response (proportional band = 0)
Switch-up delay 2		
Switch-off de- lay 1	0 to 999.9 s Customer: 0.0 s	Delay of the drop-out edge with limit monitor response (proportional band = 0)
Switch-off de- lay 2		
Alarm tolerance	0 to 999.9 (Unit dependent on the actual value input variable) factory setting: 0.0	maximum value of the control deviation without triggering an alarm, if this value is exceeded, the controller monitoring function triggers a "Dosing alarm"
Alarm delay	0 to 9999 s factory setting: 0 s	Delay of the dosing alarm allows violation of the alarm tolerance for a limited time.

9.3 Setpoint values

The "Setpoint values" submenu allows two setpoint values for each controller channel to be entered. As with the parameter sets, it is also possible to switch between setpoint values by means of a digital signal. "Setpoint value 1" is active by default. The second setpoint value can be activated as an alternative via the digital signal. The setpoint value that is currently active can be changed from the corresponding "controller screen".

Open: Device menu > Parameterization > Setpoint values > Setpoint value controller 1 to 4

Setpoint changeover via a digital signal is set in the Setpoint value configuration.

⇒ Setpoint value configuration Page 204

⇒ Operating the controllers Page 119

9.4 Manual values

Up to 16 constant numerical values that are available for device functions can be stored here. The "Manual values" menu provides simple and clearly organized access to stored numerical values in order to change them as necessary.

Open: Device menu > Parameterization > Manual values

For "Manual values", settings such as comma format, unit etc. must be made in the configuration.

⇒ See chapter 10.23 "Manual values (configuration)", page 214

Examples of practical use of "Manual values":

- "Mathematical formula" are used to control a process. These contain process-relevant equipment information (e.g. tank capacities). If the equipment configuration is modified, these data can be changed in the "Manual values" menu and even edited from the user level.

⇒ See chapter 8.2.2 "User levels", page 98

- Another application example is the storage of constant process values (e. g. the duration of a chemical reaction), the value of which is also known without a measurement. If the process conditions change (e.g. through use of a catalyst), the stored process values can be modified accordingly.

10.1 Notes

**WARNING!**

After every configuration change, the device restarts functions affected by the changes. Analog and digital outputs can assume undesired states during start-up.

Therefore, configuration changes must never be made while equipment is operating!

**CAUTION!**

Besides incorrect installation, incorrectly set values on the device can impair performance of the connected process or cause damage. Therefore, always provide safety devices independent of the device and allow only qualified personnel to make settings.

**CAUTION!**

When changing configuration data that are relevant for the data monitoring and recording function, data recording is terminated and a new recording session begun.

**NOTE**

Changes to the configuration settings described in this chapter can be made directly on the device or via the JUMO PC setup program.

**NOTE**

Settings in the "Configuration" menu can be changed only if a user with corresponding user rights is logged in.

⇒ Chapter 8.1.1 "Passwords and user rights", page 83

**NOTE**

Changes to the configuration go into effect only after you leave the configuration menu ("Exit" menu item or "Close window" button).

10 Configuration

10.2 Basic settings

Open: Device Menu > Configuration > Basic Settings

Configuration point	Selection/ setting option	Explanation
Device name	up to 20 text characters	Device ID, e.g. for identification of exported measurement data in the JUMO PCA 3000 evaluation software
Language	German English	Setting the operating language Additional languages can be installed on the device using the setup program. ⇒ Chapter 22.8.4 "Country settings", page 352
Language select after power on	Yes No	Specifies whether a prompt for selecting the operating language should appear when the device is switched on
Supply frequency	50 Hz 60 Hz	Supply frequency of the electric power grid serving the mounting site The supply frequency must be specified to suppress EMC interference caused by the mains voltage. Setting the correct supply frequency is thus also necessary when supplying the device with direct voltage.
Device temp.	Degrees Celsius Degrees Fahrenheit	Setting the default on the temperature unit for all temperature values in the device
Interface temperature	Degrees Celsius Degrees Fahrenheit	Setting the default on the temperature unit for all temperature values communicated via interfaces
Memory alarm limit	0 to 100 %	If the available memory display reaches this value, the memory alarm is triggered.
The following settings can be edited only with the aid of the JUMO PC setup program		
Setup quick info	up to 20 text characters	Brief information text about setup
Setup info	up to 501 text characters	Detailed information text about setup
Version online-visualization	No online-vis. Standard online-vis.	Selection of a saved online-visualization Online-visualization permits remote control of the operation screens via a web browser ⇒ Chapter 8.7 "Online visualization", page 130 When the webserver is active on the device, the website of the webserver is displayed in the web browser instead of the online-visualization. ⇒ Chapter "Checking the e-mail function", page 386

10.3 Display

10.3.1 General information

Open: Device Menu > Configuration > Display > General

Configuration point	Selection/ setting option	Explanation
Lock touchscreen	Selection from binary selector	Digital signal that blocks operation of the touch-screen (e.g. key switch for locking operation)
Simulation of inputs	Yes No	When this function is activated, alternating on/off signals are simulated automatically at the binary inputs and continuous value changes at the analog inputs This function is used for troubleshooting. Deactivate it during normal operation.
Main view	Selection of an operation screen from the operation loop	Selection of the operation screen as main screen The main screen appears after the device has been switched on or the "Home" button has been pressed.
Display 1 and 2 general screen	Yes No	Individual operation screens can be shown or hidden in the operation loop here.
Show detailed screen 1 to 6		
Show diagram 1 and 2		
Show process screen 1 to 8		
Show controller overview		
Show controller 1 to 4		
Show alarms	Yes No	Activation or deactivation of alarm visualization in the title bar of the operation screens

10 Configuration

10.3.2 Screen

Open: Device Menu > Configuration > Display > Screen

Configuration item	Selection/ setting option	Explanation
Activation of screen-saver	inactive time to switch off control signal	Type of screensaver activation
Wait time for screen-saver	10 to 32767 s	only with activation of the screensaver after wait time: Time to wait before displaying the screensaver when there is no activity on the device
Signal screensaver	Selection from binary selector	only with control signal screensaver activation: Signal for activating the screensaver
Brightness	1 to 10	Display brightness (10 levels)

10.3.3 Colors

Open: Device Menu > Configuration > Display > Colors

Configuration point	Selection/ setting option	Explanation
Alarm 1 to 2	Selection from color palette	Color setting for signaling alarms 1 to 2 of the measuring inputs Upon reaching the set alarm values, the measured value displays and bar graphs appear in the set colors.
Recording: Analog channel 1 to 4 Binary channel 1 to 3 Background, analogue Background, binary Color t-stamp diagr Color diag. traces	Selection from color palette	Color setting for the visualization elements of the individual recorder screens
Controller Background Setpoint value Actual value Output level Heating contact Cooling contact	Selection from color palette	Color setting for the visualization elements of the individual controller screens

10.4 Operation loop

10.4.1 General screens

Open: Device Menu > Configuration > Operation Loop > General Screen > General Screen 1 to 2

Configuration point	Selection/ setting option	Explanation
Gener. screen type	2-part screen 4-part screen	Selection of the type of overview screen; 2-part screen: Display of 2 main values, 2 second values, 1 additional value and 3 binary values; 4-part screen: Display of 4 main values, 4 second values, 1 additional value and 3 binary values
Screen title	up to 31 text characters	Title of the overview screen
Value title 1 to 2(4)	up to 20 text characters	Titles of the individual main value display fields
Signal main value 1 to 2(4)	Selection from analog selection	Signal source of the analog value for each main value displayed
Color main value 1 to 2(4)	Selection from color palette	Color of the measured value display for each main value
Signal sec. value 1 to 2(4)	Selection from analog selection	Signal source of the analog value for each second value displayed
Color sec. value 1 to 2(4)	Selection from color palette	Color of the measured value display for each second value
Title additional value	up to 20 text characters	Title of the additional value display field
Signal add value	Selection from analog selection	Signal source of the analog value displayed as additional value
Color addit. value	Selection from color palette	Color of the measured value display for the additional value
Title binary value	up to 20 text characters	Title of the binary value display field
Signal binary val. 1 to 3	Selection from binary selector	Signal sources of the binary values visualized in the binary value display field

10 Configuration

10.4.2 Detailed screens

Open: Device menu > Configuration > Operation Loop > Individual screen > Individual screen 1 to 6

Configuration point	Selection/ setting option	Explanation
Screen title	up to 31 text characters	Title of the individual screen
Input signal main value	Selection from analog selection	Signal source of the analog value displayed as the main value and visualized as a bar graph
Color main value	Selection from color palette	Color of the measured value display and the bar graph for the main value
Second value input signal	Selection from analog selection	Signal source of the analog value displayed as the second value
Color sec. value	Selection from color palette	Color of the measured value display for the second value
Title additional value	up to 20 text characters	Title of the additional value display field
Additional value	Selection from analog selection	Signal source of the analog value displayed as additional value
Color addit. value	Selection from color palette	Color of the measured value display for the additional value
Title binary value	up to 20 text characters	Title of the binary value display field
Signal binary val. 1 to 3	Selection from binary selector	Signal sources of the binary values visualized in the binary value display field

10.5 Analog inputs

10.5.1 Base unit temperature inputs

Base unit temperature inputs: IN 4/5

Open: Device Menu > Configuration > Analog Inputs > Temperature Inputs 1 to 2

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Designation for the input
Signal type	IN 4/5: Pt100 Pt1000 400 Ω 4000 Ω	Type of sensor connected For Pt100, Pt1000 and NTC , corresponding linearizations are provided.
	IN 5 : 100 k Ω NTC 8k55 NTC 22k Resistance potentiometer ^a	For 400 Ω, 4000 Ω and 100 kΩ , a customer-specific linearization must be configured. For resistance transmitters^a a customer-specific linearization can be configured if necessary. ⇒ "Customer-specific linearization", in this table
Connection type	2-wire, 3-wire	only for signal types Pt100, Pt1000, 400 Ω, 4000 Ω, 100 kΩ and NTC: Connection variants for the connected resistance thermometer
Customer-specific linearization	Selection of a linearization table	only for signal types 400 Ω , 4000 Ω , 100 kΩ or resistance transmitters^a: Linearization tables contain up to 40 value pairs in any measurement characteristic line. Each value pair assigns a display value (Y-column) to a measuring value (X-column). Up to 8 linearization tables can be stored. To create a linearization table, you need the JUMO PC setup program.
Start of display range	-99999 to +99999 ^b	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	-99999 to +99999 ^b	
Comma format	Auto, Fixed comma format	Decimal points in the display
Offset	-999 to +999 ^b	Correction value added to measured value
		This value can be used, for instance, to compensate for measurement errors resulting from the resistance of wires.
Filter time const.	0.0 to 25.0 s	Optimization of measuring value updating
		The higher the value of the filter time const., the slower the measured value is updated.

10 Configuration

Configuration point	Selection/ setting option	Explanation
Ra	0 to 99999 Ω	only for IN 5: Resistance value between the slider (S) and start point (A) in a resistance transmitter/potentiometer ^a when the slider is at the start point.
Rs	6 to 99999 Ω	only for IN 5: Span of the variable resistance value between the slider (S) and start point (A)
Re	0 to 99999 Ω	only for IN 5: Resistance value between the slider (S) and end point (E) in a resistance transmitter/potentiometer ^a when the slider is at the end point.
Alarms 1/2	Analog input alarms are used to monitor measured values in relation to adjustable limit values. The alarm settings for all analog device functions are explained together. ⇒ Chapter 10.12.2 "Alarms for analog signals and digital sensors", page 191	

^a Resistance transmitter

^b The temperature unit specified in the basic settings appears in the entry field.
⇒ Chapter 10.2 "Basic settings", page 142

10 Configuration

10.5.2 Universal inputs of base unit and optional boards

Base unit universal input: IN 6

Optional board universal inputs: IN 11/12

Open: Device Menu > Configuration > Analog Inputs >
Universal Input 1 to 3 > Configuration

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Designation for the input
Operating mode	linear scaling, temp. measurement, pH-value measurement, conductivity measure- ment, free chlorine pH/T-compensated	<p>Type of measuring</p> <p>linear scaling: Standard signals (for IN 11/12 and resistance transmitter^a) with linear measurement characteristic line or customer-specific linearization</p> <p>For standard signals the scale start point, scale end point and unit must be specified.</p> <p>Temp. measurement: Measurement made with a resistance thermometer</p> <p>The type of sensor is selected in the "Signal type" configuration item. The unit for the temperature is specified in the "Basic Settings" menu. ⇒ Chapter 10.2 "Basic settings", page 142</p> <p>pH value, conductivity, and free chlorine: The values measured by the individual analysis sensors are received in the form of a standard signal. Outside factors affecting the individual analysis process variables are compensated. It is thus necessary to make appropriate compensation settings in the configuration of the universal input.</p>
Signal type	<p>IN 6/11/12: 0 to 20 mA 4 to 20 mA 20 to 0 mA 20 to 4 mA</p> <p>only IN 11/12: 0 to 10 V 10 to 0 V Pt100 Pt1000 400 Ω 4000 Ω Resistance potentiometer</p>	<p>Type of sensor connected</p> <p>Correct scale settings are required for the standard signals. ⇒ "Scale start/end" in this table.</p> <p>Appropriate linearizations are available for Pt100, Pt1000 and resistance transmitters^a.</p> <p>For 400 Ω and 4000 Ω, a customer-specific linearization must be configured. ⇒ "Customer-specific linearization" in this table</p>

10 Configuration

Configuration point	Selection/ setting option	Explanation
Connection type	2-wire, 3-wire	only for signal types Pt100, Pt1000, 400 Ω and 4000 Ω: Connection variants for the connected resistance thermometer
Customer-specific linearization	Selection of a linearization table	Linearization tables contain up to 40 value pairs in any measurement characteristic line. Each value pair assigns a display value (Y-column) to a measuring value (X-column). Up to 8 linearization tables can be stored. To create a linearization table, you need the JUMO PC setup program.
Unit	up to 5 text characters	Process variable unit not adjustable for pH measurement The temperature unit is specified in the basic settings. ⇒ Chapter 10.2 "Basic settings", page 142
Scaling start	-99999 to +99999 ^b	only for standard signals: Measured value from sensor (uncomp.) that corresponds to the lower limit of the standard signal range [0 V or 0(4) mA]; Refer to the technical data for the sensor.
Scaling end	-99999 to +99999 ^b	only for standard signals: only for standard signals: Measured value from sensor (uncomp.) that corresponds to the upper limit of the standard signal range [10 V or 20 mA] Refer to the technical data for the sensor.
Start of display range	-99999 to +99999 ^b	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	-99999 to +99999 ^b	
Comma format	Auto Fixed comma format	Decimal points in the display
Offset	-999 to +999 ^b	only for temperature and conductivity measurement: Correction value added to measured value
Filter time const.	0.0 to 25.0 s	Optimization of measured value updating The higher the value of the filter time const., the slower the measured value is updated.
Ra	0 to 4000 Ω	only for IN 11/12: Resistance value between the slider (S) and start point (A) in a resistance potentiometer when the slider is at the start point

10 Configuration

Configuration point	Selection/ setting option	Explanation
Rs	6 to 4000 Ω	only for IN 11/12: Span of the variable resistance value between the slider (S) and start point (A)
Re	0 to 4000 Ω	only for IN 11/12: Resistance value between the slider (S) and end point (E) in a resistance potentiometer when the slider is at the end point.
Manual compensation	Yes No	Activation of manual temperature compensation With manual temperature compensation (setting "yes"), the temperature value set in the configuration item "Manual compensation temperature" is used for temperature compensation. The configuration item "Compensation temperature" is grayed out. With the "no" setting, the temperature value of the signal selected in the configuration item "Compensation temperature" is used and the configuration item "Manual compensation temperature" is grayed out.
Manual compensation temperature	-25.00 up to 150 °C	Temperature value for manual temperature compensation (see configuration item "Manual compensation")
Compensation temperature	Selection from analog selection	Analog input of the compensation thermometer for temperature-compensated measurement of pH value, free chlorine or conductivity (see configuration item "Manual compensation")
Compensation	TC linear, TC-curve, natural water, natural water with expanded temperature range, ASTM neutral, ASTM acid, ASTM alkaline, NaOH 0 to 12 %, NaOH 25 to 50 %, HNO ₃ 0 to 25 %, HNO ₃ 36 to 82 %, H ₂ SO ₄ 0 to 28 %, H ₂ SO ₄ 36 to 85 %, H ₂ SO ₄ 92 to 99 %, HCL 0 to 18 %, HCL 22 to 44 %	Type of temperature compensation for conductivity measurement
Reference temperature	15 to 30 °C	required only for conductivity measurement with "TC linear" or "TC curve" temperature compensation: Temperature at which the (temperature-compensated) conductivity value displayed was set

10 Configuration

Configuration point	Selection/ setting option	Explanation
Compensation pH value	Selection from analog selection	Analog input of the pH-value sensor for pH-compensated measurement of free chlorine
Alarms 1/2	Analog input alarms are used to monitor measured values in relation to adjustable limit values. The alarm settings for all analog device functions are explained together. ⇒ Chapter 10.12.2 "Alarms for analog signals and digital sensors", page 191	

^a Resistance transmitter

^b The unit for the particular sensor value appears in the entry field.

10.5.3 Calibration timer

Open Calibration Timer Settings Universal Inputs:

Device Menu > Configuration > Analog Inputs >
Universal Input 1 to 3 > Calibration Timer

Calibration timers prompt the user to calibrate sensors on a regular basis. The settings for all analysis inputs and the universal inputs are explained together.
⇒ Chapter 10.13 "Calibration timer", page 196

10 Configuration

10.5.4 Analysis inputs pH/Redox/NH₃

Open: Device Menu > Configuration > Analog Inputs >
Analysis Input 1 to 4 > Configuration

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Designation for the input
Electrode type	pH standard pH antimony pH ISFET redox ammonia	Type of electrode connected
Redox unit	mV percent	mV: unit for the redox potential percent: concentration percentage that can be derived from the redox measurement This requires a two-point calibration. ⇒ Chapter 14.2.1 "Calibration methods for Redox sensors", page 247
Filter time const.	0.0 to 25.0 s	Optimization of measured value updating The higher the value of the filter time const., the slower the measured value is updated.
Start of display range	-99999 to +99999 ^a	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	-99999 to +99999 ^a	
Manual compensation	Yes No	Activation of manual temperature compensation With manual temperature compensation (setting "yes"), the temperature value set in the configuration item "Manual compensation temperature" is used for temperature compensation. The configuration item "Compensation temperature" is grayed out. With the "no" setting, the temperature value of the signal selected in the configuration item "Compensation temperature" is used and the configuration item "Manual compensation temperature" is grayed out.
Manual compensation temperature	-25.00 up to 150 °C	Temperature value for manual temperature compensation (see configuration item "Manual compensation")
Compensation temperature	Selection from analog selection	Analog input of the temperature sensor for compensation of the effect of temperature on the pH-value measurement (see configuration item "Manual compensation")

10 Configuration

Configuration point	Selection/ setting option	Explanation
Glass electrode monitoring	off minimum impedance maximum impedance min./max. impedance	configurable monitoring of pH glass electrodes without impedance converter minimum impedance: monitoring for soft short/sensor failure maximum impedance: monitoring for aging/pollution/wire break
Reference electrode monitoring	On Off	Activation of reference electrode impedance monitoring A high-impedance symmetrical connection is required.
max. reference impedance	0 to 100 kΩ	upper impedance limit for monitoring a reference electrode
Alarm/Event list	off event alarm	Assignment of sensor failure notification to alarm list or event list
Sensor alarm delay	0 to 999 s	The sensor alarm is suppressed for the set duration of the alarm delay.
Text sensor alarm	up to 21 text characters	Text for the alarm/event list in case of sensor error
Alarms 1/2	Analog input alarms are used to monitor measured values in relation to adjustable limit values. The alarm settings for all analog device functions are explained together. ⇒ Chapter 10.12.2 "Alarms for analog signals and digital sensors", page 191	

^a The entry field units depend on the configuration items "Electrode type" and "Redox unit".

10.5.5 Calibration timer

Open Calibration Timer Settings Analysis Inputs pH/Redox/NH3:

Device Menu > Configuration > Analog Inputs >
Analysis Input 1 to 4 > Calibration Timer

Calibration timers prompt the user to calibrate sensors on a regular basis. The settings for all analysis inputs and the universal inputs are explained together.
⇒ Chapter 10.13 "Calibration timer", page 196

**NOTE**

The following points must be observed for correct operation of glass electrode monitoring via impedance measurement (see preceding table):

- Impedance measurements are possible only with glass-based sensors.
- Sensors must be connected directly to an analysis input for pH/Redox/ NH_3 on the device.
- Impedance converters must not be installed in the measuring circuit.
- The maximum admissible cable length between sensor and device is 10 m.
- Fluid resistances have a direct impact on the measurement result. It is therefore advisable to activate the impedance measurement in liquids at a minimum conductivity of approx. 100 $\mu\text{S}/\text{cm}$.

10 Configuration

10.5.6 CR/Ci analysis inputs (conductive/inductive conductivity)

Open: Device Menu > Configuration > Analog Inputs >
Analysis Input 1 to 4 > Configuration

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Designation for the input
Manual compensation	Yes No	Activation of manual temperature compensation With manual temperature compensation (setting "yes"), the temperature value set in the configuration item "Manual compensation temperature" is used for temperature compensation. The configuration item "Compensation temperature" is grayed out. With the "no" setting, the temperature value of the signal selected in the configuration item "Compensation temperature" is used and the configuration item "Manual compensation temperature" is grayed out.
Manual compensation temperature	-25 to 150 °C	Temperature value for manual temperature compensation (see configuration item "Manual compensation")
Compensation temperature	Selection from analog selection	Analog input of the compensation thermometer for temperature-compensated conductivity measurement (see configuration item "Manual compensation")
Reference temperature	15 to 30 °C	required only for conductivity measurement with "TDS", "TC linear" or "TC curve" temperature compensation: The temperature at which the conductivity value displayed was set
Filter time const.	0.0 to 25.0 s	Optimization of measured value updating The higher the value of the filter time const., the slower the measured value is updated.
nominal cell constant	for CR: 0.01 to 10 cm ⁻¹ for Ci: 4.00 to 8.00 cm ⁻¹	nominal cell constant of the conductivity sensor (can be read from the sensor nameplate) If an ASTM test certificate showing precisely-measured cell constants is available, in addition to entering the nominal cell constants the relative cell constants of all measuring ranges in the calibration values must be manually entered (cf. Chapter "Manual entry of calibration values", page 234).
Cell type	2 electrodes 4 electrodes	For conductivity sensors with 4 electrodes, pollution detection is made available.

10 Configuration

Configuration point	Selection/ setting option	Explanation
Pollution detection	OFF ON	possible only for conductive conductivity measurement in a 4-wire circuit: When this function is activated, a sensor alarm is triggered in case of soiling.
Wire break detection	OFF ON	possible only for conductive conductivity measurement: When this function is activated, a sensor alarm is triggered in case of a sensor wire break.
Alarm/Event list	off event alarm	possible only for conductive conductivity measurement: Assignment of the sensor failure notification to alarm list or event list
Sensor alarm delay	0 to 999 s	possible only for conductive conductivity measurement: The sensor alarm is suppressed for the set duration of the alarm delay.
Text sensor alarm	up to 21 text characters	possible only for conductive conductivity measurement: Text for the alarm/event list in case of sensor error
Measuring range selection 1	Selection from binary selector	Measuring range selection permits selection of the measuring ranges 1 to 4 by controlling the binary signals. ⇒ Chapter "CR/Ci measuring range switching", page 158
Measuring range selection 2	Selection from binary selector	
Measuring ranges 1 to 4	-	Four ranges each can be configured for conductive/inductive (CR/Ci) conductivity measurements. The settings for all CR-/Ci analysis inputs are explained together. ⇒ "CR / Ci measuring range configuration for analysis inputs", page 159
Alarms 1/2 per measuring range 1 to 4	Analog input alarms are used to monitor measured values in relation to adjustable limit values. The alarm settings for all analog device functions are explained together. ⇒ Chapter 10.12.2 "Alarms for analog signals and digital sensors", page 191	

10.5.7 Calibration timer

Open Calibration Timer Settings Analysis Inputs CR/Ci:

Device Menu > Configuration > Analog Inputs >
Analysis Input 1 to 4 > Calibration Timer

Calibration timers prompt the user to calibrate sensors on a regular basis. The settings for all analysis inputs and the universal inputs are explained together.
⇒ Chapter 10.13 "Calibration timer", page 196

10 Configuration

10.5.8 CR/Ci measuring ranges

Four configurable measuring ranges are available for each CR/Ci analysis input for measuring electrolytic conductivity. The measuring range is switched by means of 2 selectable digital signals. These signals are specified in the configuration of the individual conductivity measurement inputs.

⇒ Chapter 10.5.6 "CR/Ci analysis inputs (conductive/inductive conductivity)", page 156

CR/Ci measuring range switching

The following table shows which binary value combinations activate the individual measuring ranges:

Active measuring range	Binary signal Measuring range selection 1	Digital signal Measuring range switching 2
Measuring range 1	0	0
Measuring range 2	1	0
Measuring range 3	0	1
Measuring range 4	1	1

10 Configuration

CR / Ci measuring range configuration for analysis inputs

Open: Device Menu > Configuration > Analog Inputs >
Analysis Input 1 to 4 > Measuring Range 1 to 4

Configuration point	Selection/ setting option	Explanation
TDS factor	0.01 to 2.00	only for conductive conductivity with TDS compensation: Conversion factor from measured conductivity to display unit (see configuration item "Unit" in this table)
Compensation	for CR/Ci analysis inputs: from, TC linear, natural water, natural water with expanded temperature range for CR analysis input only: TDS, ASTM neutral, ASTM acid, ASTM alkaline for Ci analysis input only: TC curve, NaOH 0 to 12 %, NaOH 25 to 50 %, HNO3 0 to 25 %, HNO3 36 to 82 %, H2SO4 0 to 28 %, H2SO4 36 to 85 %, H2SO4 92 to 99 %, HCL 0 to 18 %, HCL 22 to 44 %	Type of temperature compensation for conductivity measurement
Unit for calculation	for CR/Ci: µS/cm mS/cm for CR only: kΩ/cm MΩ/cm	Unit in which the conductivity is displayed
Unit	up to 5 text characters	only for conductive conductivity measurement with TDS compensation: Unit for the process variable to be displayed for TDS measurements or when using customer-specific linearization (e.g. ppm or mg/l)

10 Configuration

Configuration point	Selection/ setting option	Explanation
Customer-specific linearization	Selection of a linearization table	Linearization tables contain up to 40 value pairs in any measurement characteristic line. Each value pair assigns a display value (Y-column) to a measuring value (X-column). Up to 8 linearization tables can be stored. To create a linearization table, you need the JUMO PC setup program.
Start of display range	-99999 to +99999 ^a	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	-99999 to +99999 ^a	
Comma format	Auto Fixed comma format	Decimal points in the display
Offset	-99999 to +99999 ^a	Correction value added to measured value
Alarms 1/2 per measuring range 1 to 4	Analog input alarms are used to monitor measured values in relation to adjustable limit values. The alarm settings for all analog device functions are explained together. ⇒ Chapter 10.12.2 "Alarms for analog signals and digital sensors", page 191	

^a The unit set for the conductivity measurement input appears in the entry field.

10.6 Analog outputs of base unit and optional boards

Open: Device Menu > Configuration > Analog Outputs >
Analog Output 1 to 9

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Designation for the output
Signal output value	Selection from analog selection	Analog signal source of the output
Analog signal	0 to 10 V 0 to 20 mA 4 to 20 mA 10 to 0 V 20 to 0 mA 20 to 4 mA	Type of standard signal to be generated
Enable manu. mode	Yes No	The manual mode for the specific output is enabled/locked here. The manual mode permits fixed analog values to be set for the output for testing purposes. ⇒ Chapter 8.2.3 "Functional level", page 99
Safety value 1 to 4	0 to 10.7 V or 0 to 22 mA	Specifies an analog value that the output assumes at hold, at calibration or in case of a fault If an analysis input for conductivity measurement is set as "Signal output value", the safety values 1 to 4 are assigned to the conductivity measuring ranges 1 to 4. Pairs with the same number belong together. Otherwise, the safety value 1 applies.
Scale start 1 to 4	-99999 to +99999 ^a	Analog value of the analog signal source (see configuration item "Signal output value") that corresponds to the lower limit of the standard signal range generated [0 V or 0(4) mA]
Scale end 1 to 4	-99999 to +99999 ^a	Analog value of the analog signal source (see configuration item "Signal output value") that corresponds to the upper limit of the standard signal range generated (10 V or 20 mA)
Digital signal for hold	Selection from binary selector	Digital signal for activating the hold function When the hold function is activated, the analog output assumes the state defined in the "Response at hold" setting.

10 Configuration

Configuration point	Selection/ setting option	Explanation
Response at hold	low high NAMUR low NAMUR high hold safety value	Specification of the analog output value when the hold function is activated, during calibration of one of the sensors for the particular output or at error (overrange/underrange) low: lower limit of the standard signal value range [0 V or 0(4) mA] high: upper limit of the standard signal value range (10 V or 20 mA) NAMUR low: lower NAMUR limit of the standard signal [0 V or 0(3.4) mA] NAMUR high: upper NAMUR limit of the standard signal (10.7 V or 22 mA) hold: unchanging analog value Safety value: see configuration item "Safety value" in this table
Response during calibration	Moving Frozen Safe value	
Response in case of an error	low high NAMUR low NAMUR high hold safety value	

^a The unit for the value set for the "Signal output value" appears in the entry field.

10.7 Digital inputs of base unit and optional boards

Open: Device Menu > Configuration > Digital Inputs > Digital Input 1 to 9

Configuration point	Selection/ setting option	Explanation
Designation	up to 21 text characters	Designation for the input
Polarity inversion	Yes No	Invert/do not invert state
Contact	Base unit: potential-free contact, external voltage source Optional boards: potential-free contact	Type of digital signal connected
Alarm	Binary inputs alarms are used to monitor input-side switching signals. The alarm settings for all digital device functions are explained together. The alarm settings for all digital device functions are explained together. The alarm settings for all digital device functions are explained together. ⇒ Chapter 10.12.3 "Digital signal alarms", page 195	

10.8 Digital outputs of base unit and optional boards

Open: Device Menu > Configuration > Digital Outputs >
Digital Output 1 to 17


Configuration point	Selection/ setting option	Explanation
Designation	up to 21 text characters	Designation for the output
Signal output value	Selection from binary selector	Digital signal source for the output
Polarity inversion	Yes No	Invert/do not invert state
Enable manu. mode	Yes No	The manual mode for the specific output is enabled/locked here. Manual mode permits fixed binary values (switching states) to be set for the output for testing purposes. ⇒ Chapter 8.2.3 "Functional level", page 99

10 Configuration


10.9 Alias values

Open: Device menu > Configuration > Alias values > Alias value 1 to 16

An alias value is a useful tool for distributing an analog signal of the JUMO AQUIS touch S to several internal functions and analog outputs of the device. It serves primarily as a unique distribution node between a signal source (analog input or output signal of a device-internal function) and several signal destinations (e.g. inputs of device-internal functions and analog outputs). This simplifies management of the signal flow in the device. For instance, the signal source for a group of device-internal functions and analog outputs can easily be changed in an alias value if the corresponding alias value is set as the input signal in the associated functions and analog outputs. In the figure, the alias value 1 is set as input signal for a controller, a recording group and an analog output. The alias value allows the signal source to be changed from temperature input 1 to temperature input 2 at a central location. It is simply a matter of changing the input value of the alias value.

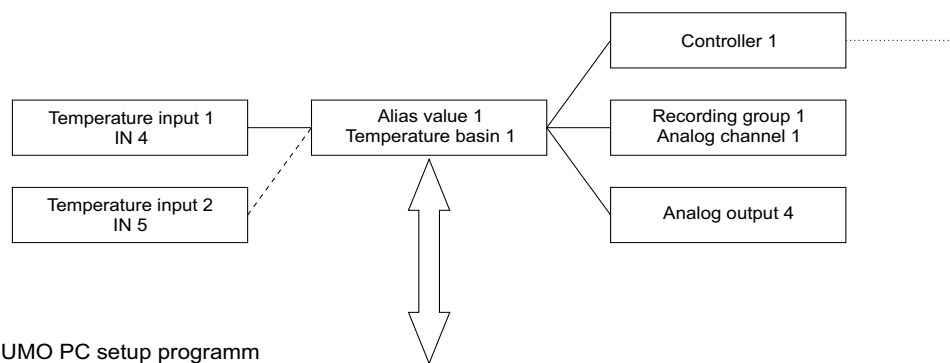

JUMO PC setup programm

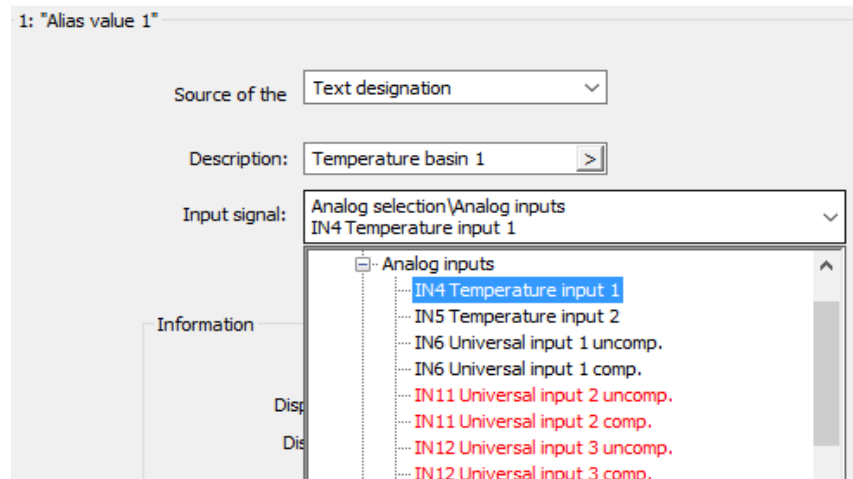

10 Configuration

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Naming for the alias value
Source of the designation	Text designation Signal designation	<p>Selection of the designator text to be displayed for the alias value</p> <p>For the designator text of the alias value in the analog selection and in the unit functions, you can select between "Text designation" (designation of the alias value) and "Signal designation" (designation of the signal selected in the configuration item "Input signal").</p>
Input signal	Selection from Analog selector	<p>Signal source of the alias value</p> <p>Input value equals output value; the alias value represents the input signal.</p>

10 Configuration

10.10 Salinity



NOTE

The 4 salinity functions are based on the "Practical Salinity Scale" (PSS-78, UNESCO 1981) and are valid for the temperature range of -2 to +35 °C and the salinity range of 0 to 42 g/kg or PSU.

Configuration point	Selection/ setting option	Explanation
Function	inactive active	Activation/deactivation of the salinity function
Designation	up to 20 text characters	Plain text designation of the salinity function This designation is displayed in menus, e. g. analog or binary selection.
Unit	PSU ^a g/kg	Selection of the unit in which the salinity is displayed.
Comma format	Auto Fixed comma format	Decimal points in the display
Start of display range	-99999 to +99999 ^b	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	-99999 to +99999 ^b	
Signal conductivity	Selection from Analog selection	Selection of an uncompensated conductivity measurement as a signal source for the salinity function
Compensation	Fixed temperature analog selector	Selection of the signal source for temperature compensation in the salinity function Fixed temperature: Compensation using a fixed temperature value that is entered in the configuration item "Compensation temperature". Analog selector: Selection of the signal source from the Analog selector of the JUMO AQUIS touch S for temperature compensation of the salinity function
Compensation temperature	Selection from Analog selection	only if "Compensation" is set to "Analog selector": Selection of the signal source from the Analog selector of the JUMO AQUIS touch S for temperature compensation of the salinity function

10 Configuration

Configuration point	Selection/ setting option	Explanation
fixed compensation temp.	-2 to 35 °C	only if "Compensation" is set to "Fixed compensation temperature": constant temperature value, for temperature compensation of the salinity function

^a PSU stands for **P**ractical **S**alinity **U**nit. The value of the "PSU" unit corresponds to the "g/kg" unit.

^b The unit displayed in the entry field corresponds to the setting in the "unit" parameter.

10 Configuration

10.11 Digital sensors

**NOTE**

For operation of digital sensors, you need the extra code "JUMO digiLine protocol activated" (see Chapter 4.2 "Order details", page 25)

**NOTE**

Only one serial interface of the device can be configured for operation of digital sensors. If your device has 2 serial interfaces (base unit and possibly an optional board), select 1 interface for connection of digital sensors and configure it appropriately.

**NOTE**

Correct functioning of digital sensors depends on correctly setting the interface to which the digital sensors are connected and are to be operated. Make sure the selected serial interface is configured correctly.

10.11.1 General settings for digital sensors

The inputs for digital sensors 1 to 6 are prepared for startup in the general settings for digital sensors. The type of digital sensor is selected here. Only then can the JUMO digiLine electronics recognized on a JUMO digiLine bus be assigned to an input for digital sensors.

⇒ Chapter 7.2 "Digital sensors", page 76

⇒ Chapter 8.2.7 "Digital sensors", page 103

Open General Settings Digital Sensors:

Device Menu > Configuration > Digital Sensors > Digital Sensors 1 to 6 > General

Configuration point	Selection/ setting option	Explanation
Parameter	No sensor pH ORP Temperature O-DO Turbidity Free chlorine pH-dependent Free chlorine pH-neutral Total chlorine Ozone tenside-dependent Ozone tenside-neutral Peracetic acid Hydrogen peroxide Chlorine dioxide tenside-dependent Chlorine dioxide tenside-neutral Bromide Free chlorine, open CR (Conductive conductivity) Ci (inductive conductivity)	Sensor type selection Digital sensors can only be linked if these settings match the type information of the sensor to be linked. If this setting is changed during operation of a linked sensor, the sensor involved loses its link and must be put into operation anew.
with temperature input	Yes No	The setting "with temperature input" is only available upon selection of pH sensors.
VdN number	0 to 999	
O-DO-subtype	O-DO ecoLine O-DO S10	For oxygen sensors only: select the oxygen sensor type

10 Configuration

10.11.2 Configuration of digital sensors

Open Configuration Digital Sensors:

Device Menu > Configuration > Digital Sensors > Digital Sensors 1 to 6 > Configuration

Gen. settings for all types of digital sensors

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Plain text designation for the digital sensor input This designation is displayed in menus, e. g. analog or binary selection.
Alarms 1/2	Alarms for measured values from digital sensors are used for monitoring the measured values with respect to adjustable limits. Except for JUMO digiLine CR/Ci, the alarm settings for all digital sensors can be found in the configuration of the individual digital sensor (see above). For the JUMO digiLine CR/Ci, the alarm settings can be found in the measuring range configuration: Device Menu > Configuration > Digital Sensors > Digital Sensors 1 to 6 > Configuration > Measuring Range 1 to 4 The alarm settings for all measured values from digital sensors are explained together. ⇒ Chapter 10.12.2 "Alarms for analog signals and digital sensors", page 191	

10 Configuration

10.11.3 Configuration for sensors with JUMO digiLine electronics

Only for sensors with JUMO digiLine pH/ORP/T

Configuration point	Selection/ setting option	Explanation
TAG checking	inactive active	If desired, this function can be activated to assign JUMO digiLine electronics to measuring points. When it is activated, the "TAG number" of the sensor is compared with the entry in the "Sensor Tag" field of the digital sensor inputs on connection of a sensor to a master device. If these differ, the JUMO digiLine electronics are not linked. The "TAG number" of the JUMO digiLine electronics can be entered and edited in the JUMO digiLine electronics only with the JUMO-DSM software.
Sensor TAG	up to 20 text characters	
Filter time const. ^a	0 to 25 s	Optimization of measured value updating in the JUMO digiLine electronics The higher the value of the filter time const., the slower the measured value is updated.
Start of display range	-99999 to +99999 ^b	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	-99999 to +99999 ^b	

10 Configuration

Configuration point	Selection/ setting option	Explanation
Compensation ^a	Fixed compensation temperature Sensor temperature Interface	<p>For pH sensors only: Selection of the signal source for temperature compensation in the JUMO digiLine electronics</p> <p>Fixed compensation temperature: Compensation with a fixed temperature value that is entered in the configuration item "Compensation temperature".</p> <p>Sensor temperature: The integrated temperature probe of the pH sensor supplies the compensation temperature.</p> <p>Interface: The AQUIS touch S transmits the compensation temperature to the JUMO digiLine electronics via the serial interface. The source of the compensation temperature is set in the configuration point "Compensation temperature".</p>
fixed compensation temp. ^a	-25 to +150 °C	<p>only if "Compensation" is set to "Fixed compensation temperature": constant temperature value, for temperature compensation of the pH value measurement in the JUMO digiLine electronics</p>
Compensation temperature	Selection from Analog selection	<p>only if "Compensation" is set to "Interface": Selection of the signal source from the Analog selection of the JUMO AQUIS touch S for temperature compensation of the pH value measurement in the JUMO digiLine electronics</p>
Temperature input filter time ^a	0 to 25 s	<p>Optimization of measured temperature value updating in the JUMO digiLine electronics</p> <p>The higher the value of the filter time const., the slower the measured value is updated.</p>
Temperature offset ^a	-10 to +10 °C	Correction value that is added to the measured temperature value

^a This setting is saved in the configuration of the JUMO digiLine electronics.

^b The unit for the item set in "Parameter" appears in the entry field.

10 Configuration

Only for sensors with JUMO digiLine CR/Ci

Configuration point	Selection/ setting option	Explanation
TAG checking	inactive active	If desired, this function can be activated to assign JUMO digiLine electronics to measuring points. When it is activated, the "TAG number" of the sensor is compared with the entry in the "Sensor Tag" field of the digital sensor inputs on connection of a sensor to a master device. If these differ, the JUMO digiLine electronics are not linked.
Sensor TAG	up to 20 text characters	The "TAG number" of the JUMO digiLine electronics can be entered and edited in the JUMO digiLine electronics only with the JUMO-DSM software.
Compensation ^a	Fixed compensation temperature Sensor temperature Interface	<p>Selection of the signal source for temperature compensation in the JUMO digiLine electronics</p> <p>Fixed compensation temperature: Compensation with a fixed temperature value that is entered in the configuration item "Compensation temperature".</p> <p>Sensor temperature: The integrated temperature probe of the conductivity sensor supplies the compensation temperature.</p> <p>Interface: The AQUIS touch S transmits the compensation temperature to the JUMO digiLine electronics via the serial interface. The source of the compensation temperature is set in the configuration point "Compensation temperature".</p>
Compensation temperature	Selection from Analog selection	<p>only if "Compensation" is set to "Interface":</p> <p>Selection of the signal source from the Analog selection of the JUMO AQUIS touch S for temperature compensation of the conductivity measurement in the JUMO digiLine electronics</p>

10 Configuration

Configuration point	Selection/ setting option	Explanation
fixed compensation temp. ^a	-50 to +150 °C	only if "Compensation" is set to "Fixed compensation temperature": constant temperature value, for temperature compensation of the conductivity measurement in the JUMO digiLine electronics
Reference temperature ^a	15 to 30 °C	required only for conductivity measurement with "TC linear", "TC curve" or TDS temperature compensation: Temperature at which the (temperature-compensated) conductivity value displayed was set
Wire break detection ^a	OFF ON	for CR sensors only: A sensor alarm is activated in the event of a sensor wire break when this function is activated.
Conductivity filter time constant ^a	0 to 25 s	Optimization of measured value updating in the JUMO digiLine electronics The higher the value of the filter time const., the slower the measured value is updated.
nominal cell constant ^a	for CR: 0.01 to 10 cm ⁻¹ for Ci: 4.00 to 8.00 cm ⁻¹	nominal cell constant of the conductivity sensor (can be read from the sensor nameplate) If an ASTM test certificate showing precisely-measured cell constants is available, in addition to entering the nominal cell constants the relative cell constants of all measuring ranges in the calibration values must be manually entered (cf. Chapter "Manual entry of calibration values", page 234).
rel. cell constant (mode) ^a	for all MR one per MR	This parameter can be used to specify whether one relative cell constant should be used for all 4 measuring ranges, or whether each measuring range should have its own cell constant and that is used for the measured value calculation. ⇒ Chapter "Manual entry of calibration values", page 234

10 Configuration

Configuration point	Selection/ setting option	Explanation
Install. factor	80 to 120 %	for Ci sensors only: This factor helps to correct for measuring errors by the sensor when the sensor cannot be mounted as indicated in the installation instructions for the particular sensor. Always refer to the documentation for the sensor type associated with your device for the setting. You can identify the sensor type for your device from the order code on the nameplate of the device. ⇒ Chapter 4.2 "Order details", page 25
Measuring range selection 1	Selection from binary selector	Measuring range selection permits selection of the measuring ranges 1 to 4 by controlling the binary signals. ⇒ Chapter "CR/Ci measuring range switching", page 176
Measuring range selection 2	Selection from binary selector	
Temperature input function	On Off	only for hardwired device versions: Activation of the temperature input
Temperature input filter time ^a	0 to 25 s	Optimization of measured temperature value updating in the JUMO digiLine electronics The higher the value of the filter time const., the slower the measured value is updated.
Temperature offset ^a	-10 to +10 °C	Correction value that is added to the measured temperature value
Connection type ^a	2-wire, 3-wire	only for device versions with a separate CR sensor Connection variants for the connected resistance thermometer

^a This setting is saved in the configuration of the JUMO digiLine electronics.

10 Configuration

CR/Ci measuring ranges

Four separately configurable measuring ranges are available for the JUMO digiLine CR/Ci for measuring electrolytic conductivity. The measuring range is switched by means of 2 selectable digital signals. These are specified in the configuration of the individual input of the digital sensor, which is configured for the JUMO digiLine CR/Ci concerned.

⇒ Chapter "Only for sensors with JUMO digiLine CR/Ci", page 173

CR/Ci measuring range switching

The following table shows which binary value combinations activate the individual measuring ranges:

Active measuring range	Binary signal Measuring range selection 1	Digital signal Measuring range switching 2
Measuring range 1	0	0
Measuring range 2	1	0
Measuring range 3	0	1
Measuring range 4	1	1

CR/Ci measuring range configuration

Opening JUMO digiLine CR/Ci: Device Menu > Configuration > Digital Sensors >

Digital Sensor 1 to 6 > Measuring Range 1 to 4

Configuration point	Selection/ setting option	Explanation
TDS factor	0.01 to 2.00	only for TDS compensation: Conversion factor from measured conductivity to display unit (see configuration item "Unit" in this table)
Compensation	for JUMO digiLine CR/Ci: off, TC linear, TC curve, natural water, natural water with expanded temperature range, TDS	Type of temperature compensation for conductivity measurement
	for JUMO digiLine CR: ASTM neutral, ASTM acidic, ASTM alkaline	

10 Configuration

Configuration point	Selection/ setting option	Explanation
Compensation	for JUMO digiLine Ci: NaOH 0 to 12 % NaOH 25 to 50 % HNO ₃ 0 to 25 % HNO ₃ 36 to 82 % H ₂ SO ₄ 0 to 28 % H ₂ SO ₄ 36 to 85 % H ₂ SO ₄ 92 to 99 % HCl 0 to 18 % HCl 22 to 44 % NaCl 0 to 25 % MgCl ₂ 0 to 17,5 % MgCl ₂ 18.5 to 25 %	Type of temperature compensation for conductivity measurement
Start of display range	-99999 to +99999 ^a	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	-99999 to +99999 ^a	
Unit for calculation	µS/cm mS/cm kΩ×cm MΩ×cm	Unit in which the conductivity is displayed
Unit for table and TDS	up to 5 text characters	only for conductivity measurement with TDS compensation: Unit for the process variable to be displayed for TDS measurements or when using customer-specific linearization (e.g. ppm or mg/l)
Customer-specific linearization	Selection of a linearization table	Linearization tables contain up to 40 value pairs in any measurement characteristic line. Each value pair assigns a display value (Y-column) to a measuring value (X-column). Up to 8 linearization tables can be stored. To create a linearization table, you need the JUMO PC setup program.
Comma format	Auto Fixed comma format	Decimal points in the display
Offset	-99999 to +99999 ^a	Correction value added to measured value

^a The unit for the item set in the parameter "Unit for calculation" appears in the entry field.

10 Configuration

Only for sensors of the JUMO digiLine O-DO S10 types

Configuration point	Selection/ setting option	Explanation
TAG checking	inactive active	If desired, this function can be activated to assign JUMO digiLine electronics to measuring points. When it is activated, the "TAG number" of the sensor is compared with the entry in the "Sensor Tag" field of the digital sensor inputs on connection of a sensor to a master device. If these differ, the JUMO digiLine electronics are not linked. The "TAG number" of the JUMO digiLine electronics can be entered and edited in the JUMO digiLine electronics only with the JUMO-DSM software.
Sensor TAG	up to 20 text characters	
Oxygen unit	% Vol % SAT ppm hPa	Selection of the unit in which the oxygen concentration is displayed. If the unit "hPa" is selected, the oxygen partial pressure is measured in hectopascals.
Start of display range	-99999 to +99999 ^a	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	-99999 to +99999 ^a	
Comma format	Auto Fixed comma format	Decimal points in the display
Temperature compensation source	Sensor temperature Analog selector	Selection of the signal source for temperature compensation in the JUMO digiLine electronics Sensor temperature: The integrated temperature probe of the oxygen sensor supplies the compensation temperature. Analog selector: The JUMO AQUIS touch S transmits the compensation temperature to the JUMO digiLine electronics via the serial interface. The source of the compensation temperature is set in the configuration point "Compensation temperature".

10 Configuration

Configuration point	Selection/ setting option	Explanation
Compensation temperature	Selection from Analog selection	<p>only if "Temperature compensation source" is set to "Analog selector": Selection of the signal source from the Analog selection of the JUMO AQUIS touch S for temperature compensation of the oxygen measurement in the JUMO digiLine electronics</p>
Pressure compensation source	Fixed compensation pressure Analog selector	<p>only if "Oxygen unit" is set to "% Vol" or "% SAT": Selection of the signal source for the pressure compensation of the JUMO digiLine electronics</p> <p>Fixed compensation pressure: Compensation using a fixed pressure value entered in the "Fixed compensation pressure" configuration item.</p> <p>Analog selector: The JUMO AQUIS touch S transmits the compensation pressure to the JUMO digiLine electronics via the serial interface. The source for the compensation pressure is set in the "Compensation pressure" configuration item.</p>
Compensation pressure	Selection from Analog selection	<p>only if the "Oxygen unit" is set to "% Vol" or "% SAT", and "Pressure compensation source" is set to "Analog selector": Selection of the signal source from the Analog selection of the JUMO AQUIS touch S for pressure compensation of the oxygen measurement in the JUMO digiLine electronics</p>
Fixed compensation pressure	10 to 2000 hPa	<p>only if the "Oxygen unit" is set to "% Vol" or "% SAT", and "Pressure compensation source" is set to "Fixed compensation pressure": constant pressure value, for pressure compensation of the oxygen measurement in the JUMO digiLine electronics</p>

10 Configuration

Configuration point	Selection/ setting option	Explanation
Salt content compensation source	Fixed salt content Analog selector	<p>only if "Oxygen unit" is set to "ppm": Selection of the signal source for the salt content compensation of the JUMO digiLine electronics</p> <p>Fixed salt content: Compensation using a fixed salt content entered in the "Fixed compensation salt content" configuration item.</p> <p>Analog selector: The JUMO AQUIS touch S transmits the compensation salt content to the JUMO digiLine electronics via the serial interface. The source for the compensation salt content is set in the "Compensation salt content" configuration item.</p>
Salt content compensation	Selection from Analog selection	<p>only if "Oxygen unit" is set to "ppm", and "Salt content compensation source" is set to "Analog selector": Selection of the signal source from the Analog selection of the JUMO AQUIS touch S for salt content compensation of the oxygen measurement in the JUMO digiLine electronics</p> <p>As a signal source for the salt content, the JUMO AQUIS touch S offers 4 salinity functions, which can determine the salt content in the process solution with the aid of a conductivity sensor and a temperature sensor (see Chapter 10.10 "Salinity", page 166).</p>
Fixed salt content compensation	0 to 60 mS/cm	<p>only if "Oxygen unit" is set to "ppm" and "Salt content compensation source" are set to "Fixed salt content compensation": constant conductivity value, for salt content compensation of the oxygen measurement in the JUMO digiLine electronics</p>

^a The unit set as the unit in the parameter "Oxygen unit" appears in the entry field.

10 Configuration

10.11.4 Configuration of JUMO ecoLine sensors

For JUMO ecoLine O-DO sensors only

Configuration point	Selection/ setting option	Explanation
Oxygen unit	% Sat mg/l ppm	Selection of the unit in which the oxygen concentration is displayed.
Salt content	0 to 10000 g/kg	Indication of the salt content (salinity) of the measurement solution for compensation of the effect of the salinity on the measured value of the oxygen concentration in the measurement solution
Air pressure	500 to 1500 hPa	Indication of the ambient air pressure for compensation of the effect of the air pressure on the measured value of the oxygen concentration in the measurement solution
Compensation	Fixed compensation temperature Sensor temperature Interface	Fixed compensation temperature: Compensation with a fixed temperature value that is entered in the configuration item "Compensation temperature". Sensor temperature: The integrated temperature probe of the O-DO sensor supplies the compensation temperature. Interface: The AQUIS touch S transmits the compensation temperature to the sensor electronics via the interface. The source of the compensation temperature is set in the configuration point "Compensation temperature".
fixed compensation temp.	-25 to +150 °C	only if "Compensation" is set to "Fixed compensation temperature": constant temperature value for temperature compensation of the oxygen measurement in the O-DO sensor

10 Configuration

Configuration point	Selection/ setting option	Explanation
Compensation temperature	Selection from Analog selection	only if "Compensation" is set to "Interface": Selection of the signal source from the Analog selection of the JUMO AQUIS touch P for temperature compensation of the oxygen measurement in the O-DO sensor
Start of display range	-99999 to +99999 ^a	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	-99999 to +99999 ^a	
Sampling rate	1 to 999 s	Indication of the length of the interval between 2 measurements A slower "sampling rate" contributes to a longer operating life of the sensor. With faster "sampling rates, the measured value is updated frequently.
Filter time const.	0 to 25 s	Optimization of measured value updating in the JUMO digiLine electronics The higher the value of the filter time const., the slower the measured value is updated.

^a The unit set as the unit in "Oxygen unit" appears in the entry field.

For JUMO ecoLine NTU sensors only

Configuration point	Selection/ setting option	Explanation
Turbidity measuring range	automatic 0 to 50 NTU 0 to 200 NTU 0 to 1000 NTU 0 to 4000 NTU	Selection of the measuring range for the turbidity measurement The user can choose a fixed measuring range or automatic measuring range selection.
Turbidity unit	NTU FNU	Selection of the unit in which the measured turbidity value is displayed.
Comma format	Fixed comma format	Decimal points in the display

10 Configuration

Configuration point	Selection/ setting option	Explanation
Filter time const.	0 to 25 s	Optimization of measured value updating in the JUMO digiLine electronics The higher the value of the filter time const., the slower the measured value is updated.
Start of display range	-99999 to +99999 ^a	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	-99999 to +99999 ^a	

^a The unit set as the unit in "Turbidity unit" appears in the entry field.

10 Configuration

10.11.5 Configuration of JUMO techLine sensors

Configuration point	Selection/ setting option	Explanation
Measuring range Free chlorine pH-dependent Open chlorine measurement Total chlorine Chlorine dioxide Chlorine dioxide tenside-neutral Bromide Free chlorine pH-neutral Ozone tenside-dependent Ozone tenside-neutral Peracetic acid Hydrogen peroxide	2 ppm 20 ppm 2 ppm 20 ppm 200 ppm 10 ppm 20 ppm 2 ppm 10 ppm 200 ppm 2000 ppm 20000 ppm 20000 ppm 20 %	Setting of the measuring range for the various measurands of digital JUMO tecLine sensors This is where you set the measuring range of your digital JUMO tecLine sensor according to the order details for the sensor.
Comma format	Auto fixed comma format	Decimal points in the display
Filter time const.	0 to 25 s	Optimization of measured value updating in the JUMO digiLine electronics The higher the value of the filter time const., the slower the measured value is updated.
Start of display range	0 to 20000 ^a	Upper/lower limit for labeling the scale when displaying measured values, e.g. in recorder diagrams and bar graphs
End of display range	0 to 20000 ^a	
pH-compensated chlorine measurement	On Off	available only for pH-dependent measurements of free chlorine: Activation/deactivation of the pH-compensation for the free chlorine measurement

10 Configuration

Configuration point	Selection/ setting option	Explanation
pH compensation source	Selection from Analog selection	available only with pH-compensation activated: Analog input of the pH-value sensor for pH-compensated measurement of free chlorine

^a The unit for the particular sensor value appears in the entry field.

10 Configuration

10.11.6 Sensor alarms

Digital sensors cyclically transmit a number of alarm and status bits. In the settings for the sensor alarms, it is possible to set which of these signals should be indicated on the JUMO AQUIS touch S. The settings for the alarm conditions themselves are made in the configuration of the individual sensor electronics or stipulated by the specifications for the particular sensor. More detailed information on configuration can be found in the operating manual for the particular sensor type.

Open Sensor Alarms Digital Sensors:

Device Menu > Configuration > Digital Sensors > Digital Sensors 1 to 6 > Sensor Alarms

Every alarm transmitted by the digital sensors has the following configuration parameters:

Configuration point	Selection/ setting option	Explanation
Alarm/Event list	off event alarm	Assignment of alarm notification to alarm list or event list
Sensor alarm delay	0 to 999 s	time delay from receipt of the alarm signal from the sensor and triggering of the alarm on the device
Alarm text	up to 21 text characters	Text for the alarm/event list Displayed only and cannot be changed.

The range of alarm types that can be transmitted by a digital sensor depends on the sensor type. The individual alarm lists for the various sensor types are provided in the following.

10 Configuration

JUMO digiLine pH

Alarm	Explanation
pH sensor alarm	Alarm for pH value out of range
Temperature sensor alarm	Alarm for temperature out of range
pH min. warning	Lower pH limit value pre-alarm from sensor (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
pH min. alarm	Lower pH limit value alarm from sensor (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
pH max. warning	Upper pH limit value pre-alarm from sensor (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
pH max. alarm	Upper pH limit value alarm from sensor (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
Min. temperature warning	Lower temperature limit value pre-alarm from sensor (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
Min. temperature alarm	Lower temperature limit value alarm from sensor (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
Max. temperature warning	Upper temperature limit value pre-alarm from sensor (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
Max. temperature alarm	Upper temperature limit value alarm from sensor (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
Calibration timer alarm	Alarm for sensor calibration due (see "Calibration data" in the JUMO digiLine pH operating manual)
CIP/SIP/Autoclaving warning	Pre-alarm for maximum number of CIP/SIP/autoclaving cycles (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
CIP/SIP/Autoclaving alarm	Alarm for maximum number of CIP/SIP/autoclaving cycles (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
Sensor stress warning	Sensor stress pre-alarm (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
Sensor stress alarm	Sensor stress alarm (see "Sensor monitoring" in the JUMO digiLine pH operating manual)
Digital input state	Signal state of the digital input of the sensor electronics

10 Configuration

JUMO digiLine ORP

Alarm	Explanation
ORP sensor alarm	Alarm for redox value out of range
Calibration timer alarm	Alarm for sensor calibration due (see "Calibration data" in the JUMO digiLine ORP operating manual)
Digital input state	Signal state of the digital input of the sensor electronics

JUMO digiLine T

Alarm	Explanation
Temperature sensor alarm	Alarm for temperature value out of range
Digital input state	Signal state of the digital input of the sensor electronics

JUMO digiLine CR/Ci

Alarm	Explanation
Conductivity alarm	Alarm for conductivity value out of range
Temperature alarm	Alarm for conductivity value out of range
Compensation range left	Alarm for temperature limits violated for the configured temperature compensation type
Pre-alarm for max. CIP/SIP	Pre-alarm for maximum number of CIP/SIP (see "Sensor monitoring" configuration in the JUMO digiLine CR/Ci operating manual)
Alarm for max. CIP/SIP	Alarm for maximum number of CIP/SIP (see sensor monitoring configuration in the JUMO digiLine CR/Ci operating manual)
Sensor stress pre-alarm	Sensor stress pre-alarm (see sensor monitoring configuration in the JUMO digiLine CR/Ci operating manual)
Sensor stress alarm	Sensor stress alarm (see sensor monitoring configuration in the JUMO digiLine CR/Ci operating manual)
Calibration timer expired	Alarm for sensor calibration due (see "Calibration data" in the JUMO digiLine CR/Ci operating manual)
Operating data acquisition alarm	Alarm for violation of allowed limits for operating data acquired for the sensor type (extreme conditions). You can find more on this in the operating manual for the JUMO digiLine CR/Ci.
Contamination alarm	Alarm for heavy contamination of 4-pin conductive conductivity sensors

10 Configuration

JUMO digiLine O-DO S10

Alarm	Explanation
Oxygen error flag	There is a fault with the oxygen sensor
Temperature error flag	There is a fault with the temperature sensor.
Alarm sensor element	Sensor cap missing.
Oxygen outside the measuring range	The oxygen measured value is outside the sensor specification
Temperature outside the measuring range	The temperature measured value is outside the sensor specification
Sensor element warning status	The sensor cap is worn and should be replaced.

JUMO ecoLine O-DO

Alarm	Explanation
Warning: Value out of spec	The measured value is out of the sensor specification
Warning: Measurement interrupted	The measurement process was interrupted
Error: Measurement impossible	Error due to measured values being outside sensor specification
Error: Membrane cap missing	Error due to missing membrane cap

JUMO ecoLine NTU

Alarm	Explanation
Warning: Value out of spec	The measured value is out of the sensor specification
Warning: Extraneous light	Warning: Measurement process disrupted by extraneous light
Error: Measurement impossible	Error due to measured values being outside sensor specification
Error: Extraneous light	Error in measurement process due to extraneous light

10 Configuration

10.11.7 CIP/SIP definition (for JUMO digiLine pH and JUMO digiLine CR/Ci only)

For sensor monitoring of JUMO digiLine pH and JUMO digiLine CR/Ci, the parameters listed in the following can be set from the JUMO AQUIS touch S. They are used to count the CIP/SIP cycles in the JUMO digiLine electronics. You can find more on this in the operating manual for the JUMO digiLine pH or JUMO digiLine CR/Ci.



NOTE

Sensor monitoring requires plant-specific empirical values for the sensor stress caused by process conditions. Configure the sensor monitoring parameters on the basis of these empirical values.

Open CIP/SIP Definition Digital Sensors:

Device Menu > Configuration > Digital Sensors > Digital Sensors 1 to 6 > CIP/SIP Definition

Configuration point	Selection/ setting option	Explanation
CIP min. temperature ^a	-20 to +150 °C	Temperature thresholds for identifying CIP/SIP cycles If the CIP/SIP cycle takes place above one of these values during the set duration of a CIP/SIP cycle, the values identify a successfully completed CIP/SIP cycle and the CIP or SIP counter in the JUMO digiLine electronics is incremented. The respective counter is reset only after the value has dropped below the CIP/SIP temperature.
SIP min. temperature ^a		
CIP cycle duration ^a	0 to 65535 s	Duration of a CIP/SIP cycle
SIP cycle duration ^a		
CIP/SIP alarming ^a	inactive active	Setting for alarming on the JUMO AQUIS touch S, if the CIP, SIP, or autoclaving counters in the JUMO digiLine electronics have reached the maximum number of permissible cycles.

^a This setting is saved in the configuration of the JUMO digiLine electronics.

10.11.8 Calibration timer

Open Calibration Timer Settings Digital Sensors:

Device Menu > Configuration > Digital Sensors > Digital Sensors 1 to 6 > Calibration Timer

Calibration timers prompt the user to calibrate sensors on a regular basis. The settings for all analysis inputs and the universal inputs are explained together.

⇒ Chapter 10.13 "Calibration timer", page 196

10.12 Limit monitoring and alarms

10.12.1 Limit value monitoring functions

Open Limit Monitoring:

Device Menu > Configuration > Limit Monitoring >
Limit Value Monitoring 1 to 8

Configuration point	Selection/ setting option	Explanation
Designation	up to 21 text characters	Designation for the limit monitoring
Input signal	Selection from Analog selector	Signal source of the analog value that is monitored by limit monitoring
Alarms 1/2	Limit monitoring alarms are used to monitor any output signals with respect to adjustable limit values. The alarm settings for all analog device functions are explained together. ⇒ "Alarms for analog signals and digital sensors", page 191	

10.12.2 Alarms for analog signals and digital sensors

Open Limit Monitoring Alarm Configuration:

Device Menu > Configuration > Limit Monitoring >
Limit Value Monitoring 1 to 8

Open Temperature Inputs Alarm Configuration:

Device Menu > Configuration > Analog Inputs >
Temperature Inputs 1 to 2

Open Universal Inputs Alarm Configuration:

Device Menu > Configuration > Analog Inputs >
Universal Input 1 to 3 > Configuration

Open pH/Redox/NH₃ Analysis Inputs Alarm Configuration:

Device Menu > Configuration > Analog Inputs >
Analysis Input 1 to 4 > Configuration

Open CR / Ci Analysis Inputs Alarm Configuration:

Hold function

Device Menu > Configuration > Analog Inputs >
Analysis Input 1 to 4 > Configuration

Alerts

Device Menu > Configuration > Analog Inputs >
Analysis Input 1 to 4 > Configuration > Measuring Range 1 to 4

Open alarm configuration of measured values for digital sensors (all except JUMO digiLine CR/Ci):

Device Menu > Configuration > Digital Sensors >
Digital Sensors 1 to 6 > Configuration

Open alarm configuration of measured values for digital sensors of the type JUMO digiLine CR/Ci:

10 Configuration

Hold function

Device Menu > Configuration > Digital Sensors > Digital Sensors 1 to 6 > Configuration

Alerts

Device Menu > Configuration > Digital Sensors > Digital Sensors 1 to 6 > Measuring Range 1 to 4

Open Alarm Configuration For External Analog Inputs:

Device Menu > Configuration > External Analog Inputs > External Analog inputs 1 to 8

Open Alarm Configuration For Flow Rate:

Device Menu > Configuration > Flow Rate > Flow Rate 1 to 2


Configuration point	Selection/ setting option	Explanation
Digital signal for hold	Selection from the binary selector	Digital signal for activating the hold function When the hold function is activated, the alarm assumes the state defined in the "Response at hold" setting.
Response at hold	inactive active hold	Specification of the alarm state when the hold function is activated, at calibration of the particular input or at error (out of range) inactive: alarm suppressed active: alarm forced hold: alarm state is maintained regardless of alarm condition changes normal: alarm in acc. with alarm condition
Response at calibration	inactive active hold normal	
Response at error	inactive active hold	
Alarm type	inactive minimum alarm maximum alarm alarm window invert alarm window	Four alarm types (comparator functions) can be selected to monitor measured values for violation of limit values. ⇒ Characteristic lines after the table
	only for CR analysis inputs: USP Pre-alarm USP cleaned water prealarm cleaned Water	Limit value alarms to USP <645> or European Pharmacopoeia (Ph. Eur.) for cleaned water
Alarm/Event list	off event alarm	Assignment of alarm notification to alarm list or event list
Alarm text	up to 21 text characters	Text for the alarm/event list
Limit value	-99999 to +99999	Limit value for the particular alarm type

10 Configuration


Configuration point	Selection/ setting option	Explanation
Hysteresis	0 to 99999	Spacing between switch-on and switch-off points for the alarm types ⇒ Characteristic lines after the table
Window range	0 to 99999	Range of the alarm window ⇒ Characteristic lines after the table
Pulse function	Yes No	Time limit for alarm with the wiper time as maximum alarm duration
Pulse time	0 to 999 s	Duration of alarm with pulse function activated
Alarm delay On	0 to 999 s	Time delay between occurrence of the alarm condition and triggering of the alarm
Alarm delay Off	0 to 999 s	Time delay between ending of the alarm condition and clearing of the alarm

10 Configuration


Minimum alarm (On-signal when value drops below lower limit)

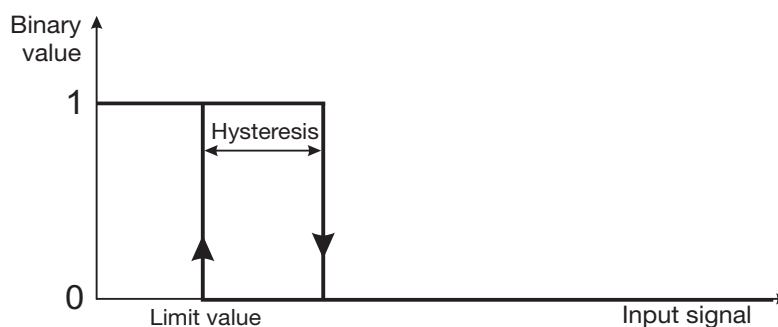


Maximum alarm (On-signal when value exceeds upper limit)

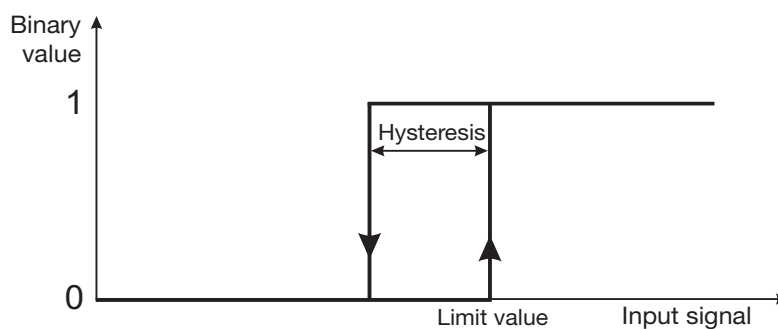

Alarm window (On-signal within a configurable value range)

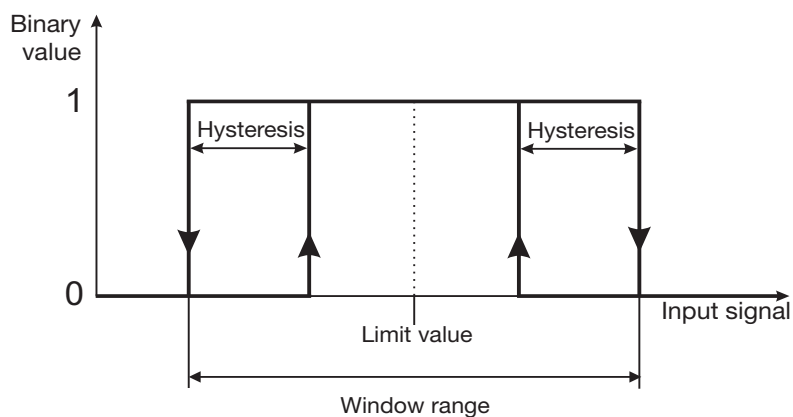

Invert alarm window (On-signal outside a configurable value range)

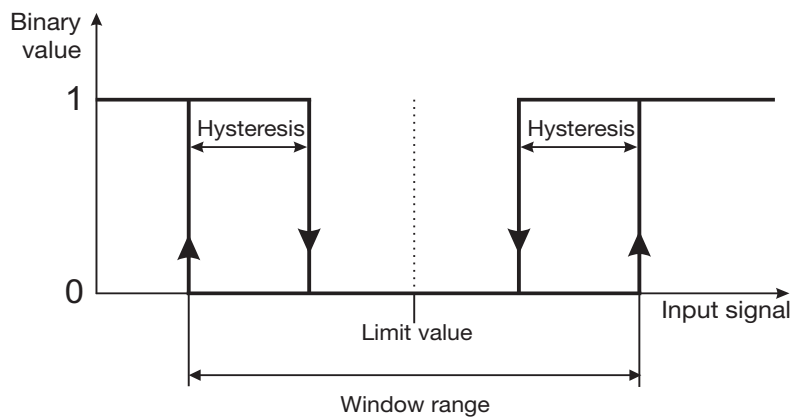

10.12.3 Digital signal alarms

Open Alarm Configuration For Binary Inputs:

Device Menu > Configuration > Binary Inputs >
Binary Inputs 1 to 9

Open Alarm Configuration For External Binary Inputs:

Device Menu > Configuration > External Binary Inputs >
External Binary Inputs 1 to 8

Open Alarm Configuration For Logic Formula:

Device Menu > Configuration > Logic Formula > Formula 1 to 30

Configuration point	Selection/ setting option	Explanation
Digital signal for hold	Selection from the binary selector	Digital signal for activating the hold function When the hold function is activated, the alarm assumes the state defined in the "Response at hold" setting.
Response at hold	inactive active hold normal	Specification of the alarm state when the hold function is activated inactive: alarm suppressed active: alarm forced hold: alarm state is maintained regardless of alarm condition changes normal: alarm in acc. with alarm condition
Alarm type	active inactive	Arming or disarming an alarm
Alarm/Event list	off event alarm	Assignment of alarm notification to alarm list or event list
Alarm text	up to 21 text characters	Text for the alarm/event list
Alarm active at	high low	Digital input alarm condition
Alarm delay	0 to 9999 s	Time delay between occurrence of the alarm condition and triggering of the alarm

10 Configuration

10.13 Calibration timer

Every input for analysis measurands has its own calibration timer. Inputs for temperature sensors do not have a calibration timer, since they do not need to be calibrated. Calibration timers signal when sensor calibration is due via a calibration alarm. Once a particular input has been calibrated successfully, its calibration timer is reset. The signal for a calibration due can be generated, for instance, by binary outputs with external indicator lights or the alarm/event list. The structure of the calibration timer configuration of types JUMO digiLine ORP, JUMO digiLine pH and JUMO digiLine CR/Ci differs from that of all other analysis sensors. In this case, there is only the "Calibration interval" parameter. Observe the following configuration table.

10.13.1 Configuration of the calibration timers

Open Calibration Timer Configuration Universal Inputs:

Device Menu > Configuration > Analog Inputs >
Universal Input 1 to 3 > Calibration Timer

Open Calibration Timer Configuration Analysis Inputs:

Device Menu > Configuration > Analog Inputs >
Analysis Input 1 to 4 > Calibration Timer

Open Calibration Timer Settings Digital Sensors:

Device Menu > Configuration > Digital Sensors > Digital Sensors 1 to 6 > Calibration Timer

Configuration point	Selection/ setting option	Explanation
Function ^a	inactive active	Activation/deactivation of the calibration timer for an analog input
Alarm/Event list ^a	off event alarm	Assignment of calibration timer timeout notification to alarm list or event list
Alarm text ^a	21 text characters	Text for the alarm/event list upon timeout of calibration timers
Calibration interval ^a	0 to 9999 days	Time from one calibration to the next. When a calibration is due is indicated by the calibration alarm on the JUMO AQUIS touch S.

^a For sensors with JUMO digiLine electronics of types JUMO digiLine-ORP, -pH, and -CR/Ci, only the calibration interval can be set. With these types, the calibration alarm is active automatically. The texts for alarm and event list are preset.

10.14 Controller

10.14.1 Configuration of the controllers

Open: Device Menu > Configuration > Controller > Controller 1 to 4 > Configuration

Configuration point	Selection/ setting option	Explanation
Controller type	Two-point controller Three-state controller, Coarse-/fine controller, Modulating controller, continuous controller with integrated position controller, Continuous controller	Selection of controller type
Control direction	Inverse Direct	invers: Output level increase with negative control deviation (actual value < setpoint value), Output level decrease with positive control deviation direct: Output level increase with positive control the deviation (actual value > setpoint value), Output level decrease with negative control deviation
Output type 1	Pulse length output	Signal type of controller output signal The output types are explained with the aid of diagrams after this table.
Output type 2	Impulse frequency output Continuous output	
Output contact type 1 to 2	Normally-closed contact Normally open contact	Contact type (control direction) of the binary controller outputs (K1,K2) Working contact corresponds to a normally-open contact Resting contact corresponds to a normally-closed contact
Manual mode	Enabled Disabled	Enabling of manual mode
Transfer manual output 1	Yes No	Acceptance of the preconfigured manual output level (for the 1st controller output on coarse-/fine controllers) upon activation of the manual mode
Man. output level 1	-100 to +100 %	Preconfigured manual output level (for the 1st controller output on coarse/fine controllers) Accepted automatically on activation of the "manual mode" if acceptance of the manual output level is set to "Yes". Otherwise, the controller accepts the last output level from the automatic control mode.

10 Configuration


Configuration point	Selection/ setting option	Explanation
Acceptance of manual output 2	Yes No	only for coarse/fine controllers: Acceptance of the preconfigured manual output level for the 2nd controller output upon activation of the manual mode
Man. output level 2	0 to 100 %	only for coarse/fine controllers: Preconfigured manual output level for the 2nd controller output Accepted automatically on activation of the "manual mode" if acceptance of the manual output level is set to "Yes". Otherwise, the controller accepts the last output level from the automatic control mode.
Acceptance of hold output level 1	Yes No	Acceptance of the preconfigured hold output level (for the 1st controller output on coarse/fine controllers) upon activation of the hold mode
Hold output level 1	-100 to +100 %	Preconfigured hold output level (for the 1st controller output on coarse-/fine controllers) Accepted automatically upon activation of the hold mode if acceptance of the hold output level is set to "Yes"; otherwise, the controller accepts the last output level from the automatic control mode.
Acceptance of hold output level 2	Yes No	only for coarse/fine controllers: Acceptance of the preconfigured hold output level for the 2nd controller output upon activation of the hold mode
Hold output level 2	0 to 100 %	only for coarse/fine controllers: Preconfigured hold output level for the 2nd controller output Accepted automatically upon activation of the hold mode if acceptance of the hold output level is set to "Yes"; otherwise, the controller assumes the last output level from the automatic control mode.
Autotuning	Enabled Disabled	Enabling of self-optimization
Alarm monitoring	Inactive Active	Activation/deactivation of alarm monitoring Alarm monitoring provides a continuous plausibility check of the control deviation. A dosing alarm is triggered when the control deviation is greater than the value of the alarm tolerance set in the controller parameters. If "Alarm ack." is activated (see next configuration item), the controller switches to hold mode on a holding alarm.

10 Configuration

Configuration point	Selection/ setting option	Explanation
Alarm ack.	Inactive Active	<p>Activation/deactivation of the acknowledgment function</p> <p>Dosing alarms of the respective controller must be acknowledged in the "Alarm list" when "Alarm acknowledgement" is activated. Dosing alarms are not cleared automatically when the control deviation drops to a value that is less than or equal to the alarm tolerance. The alarm tolerance is set in the controller parameters.</p> <p>⇒ Chapter 9.2 "Parameter Sets (Controller parameter)", page 136.</p>

Pulse length output


With a pulse width output, the output level generated by the controller has the form of the pulse/pause ratio of a square-wave signal with a fixed frequency (pulse width modulation). Output of this type of signal from the device uses a binary output.

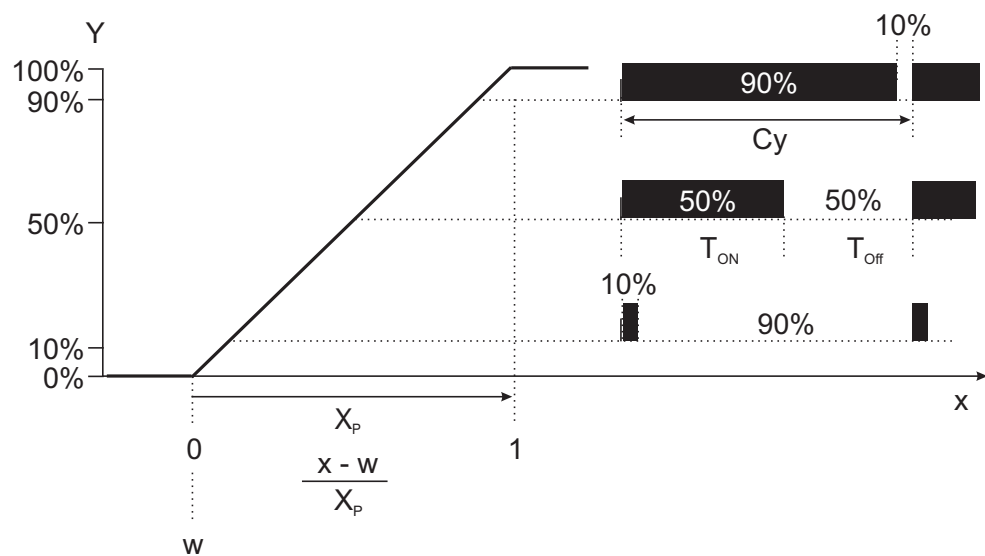

10 Configuration

Impulse frequency output

With a pulse frequency output, the output level generated by the controller has the form of the frequency of a square-wave signal with a fixed pulse/pause ratio. Output of this type of signal from the device uses a binary output.

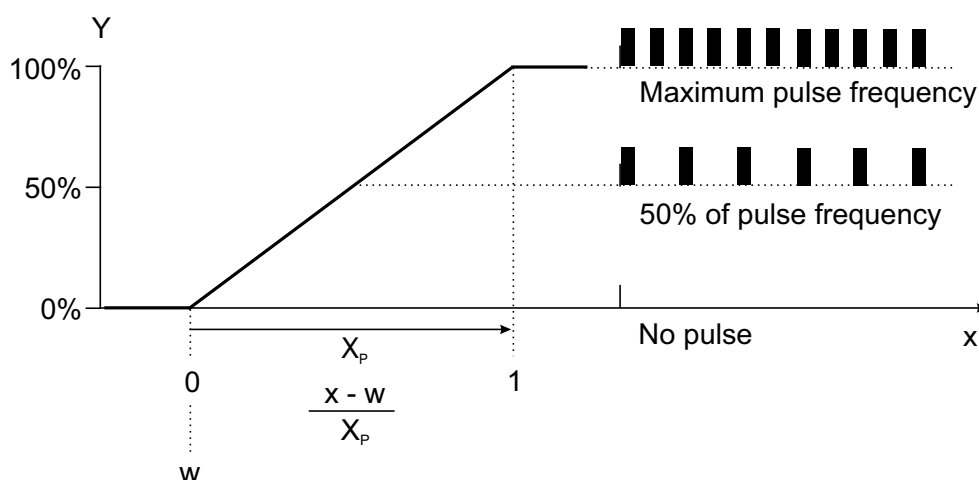

Continuous output

With a continuous output, the output level generated by the controller is transmitted directly to connected functions. Output of this type of signal from the device uses an analog output. The proportionality between the min/max span of the controller output level and the signal strength is specified by the scaling of the analog output.

For more detailed information on the subject of control technology, you can download the technical article "Control technology - Basic principles and tips for the practitioner" (FAS 525) as a PDF document for free from the JUMO website.

10.14.2 Controller inputs


Open: Device Menu > Configuration > Controller > Controller 1 to 4 > Input

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Designation of the controller input
Actual value	Selection from Analog selector	Selection of the analog signal source for the actual value
Output level feedback signal	Selection from Analog selector	only for modulating controller and continuous controller with integrated position controller Selection of the analog signal source for the current output level (e.g. universal input with resistance transmitter or analog input with standard signal) On continuous controllers with an integrated position controller, output level feedback is necessary.
Parameter block switching	Selection from binary selector	Selection of the digital signal source for switching from parameter set 1 to parameter set 2 Two parameter sets are stored for each controller and can be switched via this digital signal. ⇒ Chapter 9.2 "Parameter Sets (Controller parameter)", page 136
Digital signal for manual	Selection from binary selector	Selection of the digital signal source to switch the controller to manual mode In addition to the button on the respective controller screen, it is also possible to activate manual mode with a digital signal (e.g. key switch for a digital input) binary signal.
Digital signal for hold	Selection from binary selector	Selection of the digital signal source to switch the controller to hold mode
Manual text	up to 20 text characters	Text for the alarm/event list upon activation of manual mode
Alarm text	up to 20 text characters	Text for the alarm/event list upon occurrence of a dosing alarm

10 Configuration

10.14.3 Disturbance feedforward control

Open: Device Menu > Configuration > Controller > Controller 1 to 4 >
Disturbance feedforward control

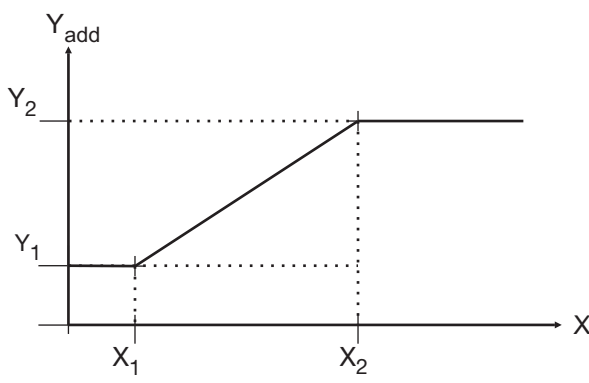Configuration point	Selection/ setting option	Explanation
additive var. disturb.	Selection from Analog selector	<p>Analog input for the additive variable disturbance The additive output component Y_{add} is added to the output. This is calculated as follows:</p> $Y_{add} = X \times [(Y_2 - Y_1) \div (X_2 - X_1)] + Y_1$  <p>The graph shows the relationship between the variable disturbance X and the additive output level component Y_{add}. The x-axis is labeled X and has points X_1 and X_2. The y-axis is labeled Y_{add} and has points Y_1 and Y_2. The function is zero for $X < X_1$, increases linearly from (X_1, Y_1) to (X_2, Y_2), and remains constant at Y_2 for $X > X_2$.</p> <p>Y_{add}: Additive output level component X: Variable disturbance value X_1: Additive var. disturb. X start value X_2: Additive var. disturb. X end value Y_1: Additive var. disturb. Y start value Y_2: Additive var. disturb. Y end value</p>
Additive var. disturb. X Start value	-99999 to +99999	Smallest value of the variable disturbance
Additive var. disturb. X End value	-99999 to +99999	Largest value of the variable disturbance
Additive var. disturb. Y Start value	-100 to +100 %	Additive output level component with largest variable disturbance value
Additive var. disturb. Y End value	-100 to +100 %	Additive output level component with largest variable disturbance value

10 Configuration

Configuration point	Selection/ setting option	Explanation
Multiplicative Disturbance	Selection from Analog selector	<p>Analog input for the multiplicative variable disturbance</p> <p>The ratio of the variable disturbance value at the working point of the variable disturbance is multiplied by the proportional gain of the controller. Changes in the variable disturbance affect the total gain of the controller.</p> $K_{Tot} = K_p \times (X \div A)$ <p> K_{Tot}: Total gain of the controller K_p: Proportional gain X: Variable disturbance value A: Working point </p>
Working point	0 to 99999	<p>Stationary variable disturbance value (variable disturbance value under steady-state, normal operating conditions of the system)</p> <p>If the variable disturbance equals the value of the working point ($X = A$), the following holds:</p> $K_{Tot} = K_p \times 1$

10.14.4 Autotuning

Open: Device Menu > Configuration > Controller > Controller 1 to 4 > Autotuning

Configuration point	Selection/ setting option	Explanation
Standby output	-100 to +100 %	Output level at start of self-optimization
Output level for step	10 to 100 %	<p>Sudden output value increase issued by the controller as a test signal</p> <p>For automatic parameterization of the controller, the response (step response) of the process (section) is evaluated.</p>
Transfer CY	Yes No	Acceptance of the switching cycle (C_y) for pulse width outputs from self-optimization into the controller parameters

10 Configuration

10.15 Setpoint value configuration

Open: Device Menu > Configuration > Setpoint Value Configuration > Setpoint Value Configuration, Controller 1 to 4


Configuration point	Selection/ setting option	Explanation
external Setpoint 1 to 2	Selection from Analog selector	<p>Selection of the analog value as setpoint value source</p> <p>If external setpoint values 1 to 2 are selected, they replace setpoint values 1 to 2 of the controller parameters in the respective controllers. ⇒ Chapter 9.2 "Parameter Sets (Controller parameter)", page 136</p> <p>With external setpoint values, the "Manual entry" button on the controller screen is hidden. ⇒ Chapter 8.5.1 "Automatic control mode", page 120</p>
Signal Setpoint changeover	Selection from binary selector	<p>Digital signal for switching from setpoint value 1 to Setpoint value 2</p> <p>Binary value = 0 activates (external) setpoint value 1 Binary value = 1 activates (external) setpoint value 2</p>
Start Setpoint value limit	-99999 to +99999	lower limit for setpoint values
End Setpoint value limit	-99999 to +99999	upper limit for setpoint values

10.16 Timer

Open timer: Device Menu > Configuration > Timer > Timer 1 to 12 > Timer


Configuration point	Selection/ setting option	Explanation
Timer function	Inactive Timer Control timer Control timer with run-time	Operating principle of the timer Control timer: Functions as weekly time switch Settings for a time program during the week ⇒ Chapter 10.16.1 "Control timer", page 207 Timer: Functions as timing element; the chronological progression of the output signal can be flexibly matched to the application via the Nm. A detailed timing diagram follows this table.
Description	up to 20 text characters	Timer designation
Response after Power off	Program stop Continue running Restart	Response of the timer upon interruption of the Voltage supply
Timer time	hh:mm:ss	Elapsed time from timer start until the timer generates the set binary value
Lead time Timer start	0 to 65535 s	Delay time before the timer time starts
After-run time timer end	-1 to 32767 s	Time interval after timeout of the timer time Special feature: If the "After-run time after timer end" is set to the value -1, the time interval is infinitely long.
Signal Timer quit signal	Selection from binary selector	only for "after-run time, timer end" > 0: Binary signal for resetting the timer during the after-run time after timer end.
Timer start signal	Selection from binary selector	Digital signal to start the timer Retriggering with "Timer start" is possible only if the "Lead time" and the "Timer time" have timed out.
Timer stop signal	Selection from binary selector	Digital signal to reset the timer
Timer hold signal	Selection from binary selector	Interrupts timer operation
Timer restart signal	Selection from binary selector	Binary signal to reset and restart the timer during the "Lead time" or "Timer time"
Output signal	high low	Polarity inversion of the timer output signal high: the output signal is not polarity inverted. low: the output signal is polarity inverted.

10 Configuration

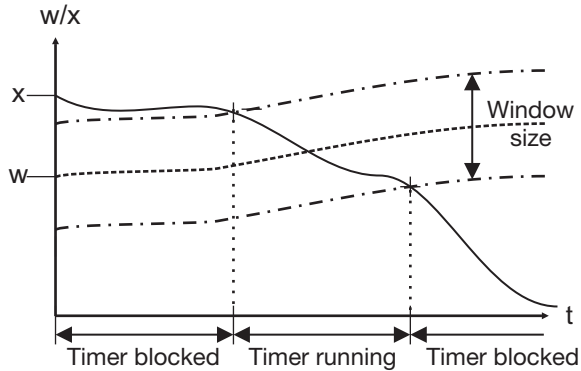Configuration point	Selection/ setting option	Explanation
Signal Tolerance band x	Selection from Analog selector	<p>Selection of an analog signal the deviation of which from the "Tolerance band w signal" is to be monitored</p> <p>The timer starts and continues running only if the amount of deviation is not greater than the set window range. If the deviation is greater than the window range, running timers are interrupted and timer start for timers that have not yet started is prevented.</p> 
Signal Tolerance band w	Selection from Analog selector	Selection of the analog signal from which the "Tolerance band x signal" may not deviate by more than the "Window range" in order for the timer to run
Window range	0 to 99999 ^a	maximum amount of deviation $ x - w $
Enable wash event	Yes No	Activation/deactivation of event list entries with On-signal from "Timer start signal"
Event list text	up to 21 text characters	Text for the event list with On-signal from "Timer start signal"

^a The unit for the window range is obtained from the "Tolerance band x signal" parameter in this table.

Timing diagram

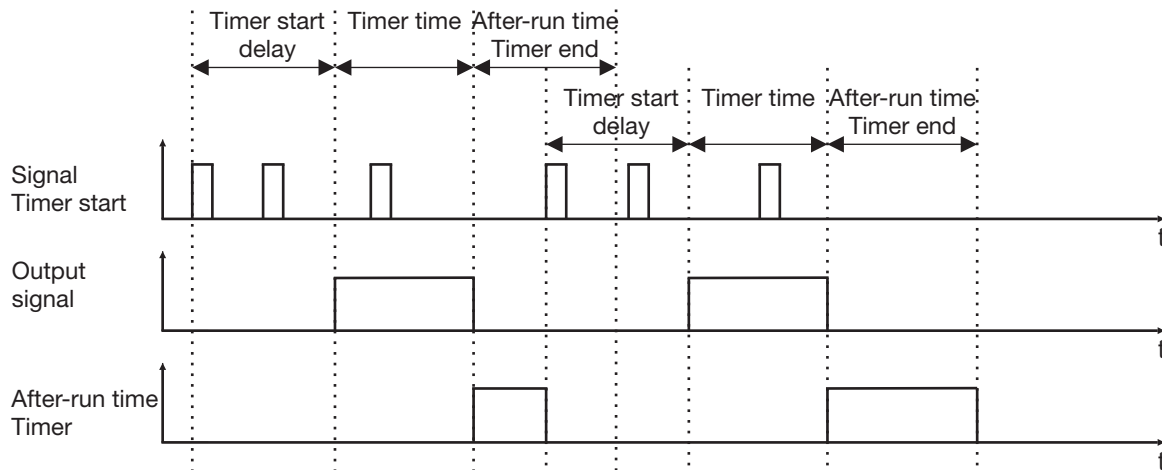

10.16.1 Control timer

Timer settings for a timed program during the week

Prerequisite: The "Timer function" must be configured as a "Control timer" or "Control timer with runtime".

⇒ Chapter 10.16 "Timer", page 205

Up to 4 Switch-on and Switch-off times can be specified separately for each weekday.

Open Switching Time Settings: Device Menu > Configuration > Timers > Timer 1 to 12 > Control Timer > Monday to Sunday

Configuration point	Selection/ setting option	Explanation
Switch-on times 1 to 4	hh:mm:ss	When the time passes the On-time, the control timer sets the binary value = 1 (switched on).
Switch-off times 1 to 4	hh:mm:ss	only for "Control timer" (without runtime): When the time passes the Switch-off time, the control timer sets the binary value = 0 (switched off).
Runtime	hh:mm:ss	only for "Control timer with runtime": Time during which the control timer with runtime has a binary value = 1 after the switch-on time; After the "Runtime" elapses, the binary value changes back to 0.

10 Configuration

10.17 Washtimer

Open: Device Menu > Configuration > Washtimer > Washtimer 1 to 2

Configuration point	Selection/ setting option	Explanation
Washtimer active	Yes No	Activation/deactivation of the washtimer Washtimers are used to clean analysis sensors regularly and can actuate external equipment for cleaning sensors via binary outputs.
Designation	up to 20 text characters	Timer designation
Time interval	0 to 999 h	Cycle for automatically repeated sensor cleaning
Washing time	0 to 999 min	Duration of sensor cleaning
Hold time after washing	0 to 999 s	After-run time of the washtimer hold signal upon timeout of the washing time The washtimer hold signal provides an On-signal for the duration of the washing time plus the hold time. The hold signal is intended primarily to activate the hold mode for controllers and analog outputs. These functions are held in a safe mode until the washed analysis sensor provides stable measured values once again.
Signal for interval restart	Yes No	Activation/deactivation of event list entries during sensor cleaning
Event list text	up to 21 text characters	Text for the event list during sensor cleaning

10.18 Counter

Open: Device Menu > Configuration > Counter > Counter 1 to 4

Configuration point	Selection/ setting option	Explanation
Function	Inactive Service counter Operation hours counter	Counter operation mode Service counter: The positive edges (switch-on operations) of a digital signal are counted (E.g. for checking the wear status of relays) Operation hours counter: The On-time of a digital signal is measured and the number of completed operating hours displayed.
Designation	up to 20 text characters	Counter designation
Input signal	Selection from the binary selector	Digital signal, the switch-on operations or operating hours of which are to be counted
Alarm type	If a counter has reached its limit value, appropriate notifications can be configured for the alarm/event list. The alarm settings for all digital device functions are explained together. ⇒ Chapter 10.12.3 "Digital signal alarms", page 195	
Alarm/event list		
Alarm text		
Service count. limit value	0 to 99999	Alarm threshold for number of positive edges (activations)
Operating hours counter limit value	0 to 99999 h	Alarm threshold for the number of operating hours

10 Configuration

10.19 Ethernet

The Ethernet settings must be requested from the administrator of the network in which the device is installed.

Open: Device Menu > Configuration > Ethernet

Configuration point	Selection/ setting option	Explanation
Config. IP address	Manual Automatic	manual: If no DHCP server is installed or a dedicated IP configuration is desired and the IP address configuration is known (e.g. from the network administrator), the data can be entered manually. automatic: A DHCP server is installed in the network. During power-up and booting, the JUMO AQUIS touch S receives the IP configuration from the DHCP server; the IP configuration takes place automatically.
Manual IP address	Valid IP address ^a	IP configuration of the Ethernet optional board Manual entry of known configuration data or automatic configuration by the DHCP server (see configuration item "IP address assignment")
Subnet mask	Valid subnet mask ^a	
Standard gateway	Valid IP address ^a	
DNS server	Valid IP address ^a	
Transfer rate	Automatic 10 Mbit/s half duplex 10 Mbit/s full duplex 100 Mbit/s half duplex 100 Mbit/s full duplex	Transmission speed (bit rate) and duplex mode of the Ethernet optional board This setting must match the setting of the switch or router port to which the JUMO AQUIS touch S is connected.

^a To enter an IP configuration manually for the JUMO AQUIS touch S, a valid available IP address in the network must be known. Please contact your network administrator in this regard.



NOTE

The Ethernet settings are entered in the online parameters in the JUMO PC setup program.

The IP configuration of the device can also be changed from the PC if the PC and device are connected via Ethernet. In this case, changing the IP address or subnet mask can interrupt the PC-device connection.

⇒ See chapter 22.10.3 "Ethernet", page 391

10.20 Serial interfaces

The serial interface settings of all participating devices on a bus must match.

Open: Device Menu > Configuration > Serial Interfaces > Serial Interfaces 1 to 2

Configuration point	Selection/ setting option	Explanation
Protocol	Modbus slave Modbus digital sensors	<p>Communication protocol of the bus system</p> <p>Modbus Slave: For operation of the device as a slave in a Modbus system</p> <p>Modbus digital sensors: For operation of JUMO digiLine sensors on the serial interface (see order details for extra code "JUMO digiLine protocol activated")</p> <p>In the JUMO AQUIS touch S, either the interface on the base unit or the optional serial interface (if present) can be configured for digital sensors (JUMO digiLine operation). Simultaneous use of both interfaces for JUMO digiLine operation is not possible.</p>
Baud rate	9600 19200 38400	<p>Transmission speed (symbol rate) of the serial interface^a</p> <p>For all bus users (device and digital sensors) to communicate with one another, they must have the same baud rate.</p> <p>The baud rates of JUMO tecLine and JUMO digiLine sensors are automatically set by the JUMO digiLine master device during the scanning process.</p> <p>When connecting digital JUMO ecoLine sensors, the baud rate of the JUMO AQUIS touch S must be set to "9600" prior to startup. Otherwise, the sensors will not begin operation.</p> <p>supported baud rates of JUMO digital sensors</p> <ul style="list-style-type: none">• JUMO ecoLine: 9600• JUMO tecLine and JUMO digiLine: 9600, 19200, 38400

10 Configuration

Configuration point	Selection/ setting option	Explanation
Data format	8 - 1 - no parity 8 - 1 - odd parity 8 - 1 - even parity	<p>Format of the data word^a</p> <p>For all bus users (device and digital sensors) to communicate with one another, they must have the same data format.</p> <p>The data formats of JUMO tecLine and JUMO digiLine sensors are automatically set by the JUMO digiLine master device during the scanning process.</p> <p>When connecting digital JUMO ecoLine sensors, the data format of the JUMO AQUIS touch S must be set to "8-1-no parity" prior to startup. Otherwise, the sensors will not begin operation.</p> <p>Format: Useful bit – stop bit – parity bit</p>
Min. response time	0 to 500 ms	<p>Minimum time from receiving a query to sending a response</p> <p>This parameter is used to adjust the response speed of the device to slower bus users.</p>
Device address	1 to 254	<p>For "Modbus Slave" protocol only:</p> <p>Unambiguous specification of a bus participant</p>

^a For all users to communicate with one another, this setting be the same on all users.

10.21 Formula

Mathematical formula are created with the JUMO PC setup program and loaded to the device. The configuration of a formula can then also be edited on the device itself.

Open: Device Menu > Configuration > Mathematical Formula > Formula 1 to 16

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Formula designation
Temperature	None Relative Absolute	For automatic conversion of temperature units, it is necessary to know whether the calculated result is an absolute temperature (temperature value on the Celsius scale) or a relative temperature (temperature difference in °C). If the result of the calculation not a temperature, " none " must be set here.
Unit	up to 5 text characters	Entry of the unit for temperatures inactive: Unit for the output value of the mathematical formula (calculation result)
Start Display range	-99999 to +99999 ^a	Upper/lower limit for labeling the scale For representation of measured values as recorder diagrams and bar graphs
End Display range	-99999 to +99999 ^a	
Response at error	No output Safety value	Control of value output for error (E.g. division by zero). The value in the configuration item "Value for error" serves as substitute value.
Value for error	-99999 to +99999 ^a	Safety value for the output of a mathematical formula for error
Secure using power OFF	Yes No	Nonvolatile storage of the calculation If "Yes" is set here, the formula last calculated before the device was switched off will be saved. Once the device is switched back on, the calculation will start with the saved value and continue with the current value in real time.

^a The unit set for the particular mathematical formula appears in the entry field.

10 Configuration

10.22 Logic formula

Logic formula are created with the JUMO PC setup program and loaded to the device. Following this, the configuration of a logic formula can also be edited directly on the device.

Open: Device Menu > Configuration > Logic Formula > Formula 1 to 30

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Logic formula designation
Alarm type	Corresponding notifications for the alarm/event list can be configured for logic formulas The alarm settings for all digital device functions are explained together. ⇒ Chapter 10.12.3 "Digital signal alarms", page 195	
Alarm/Event list		
Alarm text		
Alarm delay		
Digital signal for hold		
Response at hold		

10.23 Manual values (configuration)

Open: Device menu > Configuration > Manual Values (config.) > Manual Value (config.) 1 to 16

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Designation of the manual value
Temperature	None Relative Absolute	For automatic conversion of temperature units, it is necessary to know whether the manual value is an absolute temperature (temperature value on the Celsius scale) or a relative temperature (temperature difference in °C). If the manual value not a temperature, " none " must be set here.
Unit	up to 5 text characters	Entry of the unit for temperatures inactive: Unit for the manual value
Comma format	Auto Fixed comma format	Decimal points in the display
Start Display range	-99999 to +99999 ^a	Upper/lower limit for labeling the scale when displaying measuring values, e.g. in recorder diagrams and bar graphs
End Display range	-99999 to +99999 ^a	

^a The unit set for the particular manual value appears in the entry field.

10.24 External analog inputs

Open: Device Menu > Configuration > External Analog Inputs >
External analog inputs 1 to 8

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Designation of the external analog input
Temperature	None Relative Absolute	For automatic conversion of temperature units, it is necessary to know whether the analog value received via the external analog input is an absolute temperature (temperature value on the Celsius or Fahrenheit scale) or a relative temperature (temperature difference). If this analog value is not a temperature, "none" must be entered here.
Unit	up to 5 text characters	Unit for the analog value received via the external analog input
Comma format	Auto Fixed comma format	Decimal points in the display
Start Display range	-99999 to +99999 ^a	Upper/lower limit for labeling the scale when displaying measuring values, e.g. in recorder diagrams and bar graphs
End Display range	-99999 to +99999 ^a	
Hold value	No Yes	Nonvolatile storage of the last analog value received when the device restarts
Alarms 1/2	Alarms for external analog inputs are used to monitor analog values received via the individual external analog inputs in relation to adjustable limit values. The alarm settings for all analog device functions are explained together. ⇒ Chapter 10.12.2 "Alarms for analog signals and digital sensors", page 191	

^a The unit set for the particular manual value appears in the entry field.

10 Configuration

10.25 External digital inputs

Open: Device Menu > Configuration > External Digital Inputs > External Digital Inputs 1 to 8

Configuration point	Selection/ setting option	Explanation
Designation	up to 20 text characters	Designation of the external digital input
Hold value	No Yes	Nonvolatile storage of the last binary value received when the device restarts
Alarm	Alarms for external digital inputs are used to monitor input-side binary signals. The alarm settings for all digital device functions are explained together. ⇒ Chapter 10.12.3 "Digital signal alarms", page 195	

10.26 Flow

Open: Device Menu > Configuration > Flow Rate > Flow Rate 1 to 2

Configuration point	Selection/ setting option	Explanation
Input type	Inactive Digital input 2 Digital input 3 Analog input	Selection of the signal source for the flow rate measurement Digital input 1/2: Pulse frequency signals via Digital inputs Analog input: An analog signal is specified in the configuration item "Analog signal".
Designation	up to 20 text characters	Designation of the flow rate function
Analog signal	Selection from Analog selector	only for "Analog input" as "Input type": Selection of the analog signal source as the flow rate signal
Measuring principle	Period measurement 3 to 300 Hz Pulse counting 300 Hz to 10 kHz	only for "Digital input 2/3" as "Input type": Measurement method for determining the flow rate Pulse frequency signals are provided by paddle-wheel sensors, for instance.
Time base	0 to 9999 s	only for "Pulse counting" as "Measuring principle": Duration of a counting segment The pulses counted within a counting segment divided by the time base yields the pulse frequency value. With a setting of 0 s, the time base is 250 ms.

10 Configuration

Configuration point	Selection/ setting option	Explanation
K-factor	0 to. 99999 l ⁻¹	<p>Ratio of the pulse count to flow rate (pulses per liter)</p> <p>The K-factor can be obtained from the documentation for the fitting in which the flow rate sensor (e.g. paddle wheel sensor) is installed.</p> <p>If the flow rate signal is transmitted as a standard signal or via an interface (external analog inputs), be aware that the K-factor affects analog values as well. For reliable handling of the flow rate as an analog signal, it is recommended that the flow value be generated as a standard signal and the K-factor set to a value of 1.</p>
Unit	l / s l / min l / h m ³ / s m ³ / min m ³ / h gal / s gal / min gal / h Customer-specific	<p>Unit for the flow rate value</p> <p>Customer-specific unit: In the individual measured display, the flow value in liters per second is multiplied by the factor from the "Conversion factor" setting and the unit displayed on the basis of the "Unit description" setting.</p>
Conversion factor (flow)	-99999 to +99999	only for "customer-specific" as "Unit": Conversion factor from the unit "l / s" for the flow to the customer-specific unit
Unit description (flow)	up to 5 text characters	only for "customer-specific" as "Unit": Entry of an arbitrary customer-specific unit for the flow rate
Comma format (flow)	Auto, Fixed comma format	Decimal points in the display
Start Display range (flow)	-99999 to +99999 ^a	Upper/lower limit for labeling the scale when displaying measuring values, e.g. in recorder diagrams and bar graphs
End Display range (flow)	-99999 to +99999 ^a	

10 Configuration

Configuration point	Selection/ setting option	Explanation
Total quantity	Off hourly daily weekly monthly annually unlimited	only available with flow measurement activated: Activation of the flow rate quantity counter The setting establishes the automatic reset cycle. In addition, the flow rate quantity counters can be reset manually at the functional level or via a digital signal (reset input). The last counter state is saved during resetting and is available in the analog selection as "Total quantity - Periods 1/2".
Reset input	Selection from binary selector	only for "unlimited" as "Total quantity": Digital signal for resetting the current counter state
Conversion factor (totalized flow rate)	-99999 to +99999	only for "customer-specific" as "Unit": Conversion factor from the unit "l" for the flow rate quantity to the customer-specific unit
Unit designation (totalized flow rate)	up to 5 text characters	only for "customer-specific" as "Unit": Entry of an arbitrary customer-specific unit for the flow rate quantity
Comma format (totalized flow rate)	Auto, Fixed comma format	Decimal points in the display
Start Display range (totalized flow rate)	-99999 to +99999 ^b	Upper/lower limit for labeling the scale when displaying measuring values, e.g. in recorder diagrams and bar graphs
End Display range (totalized flow rate)	-99999 to +99999 ^b	
Alarms 1/2	Flow rate function alarms are used to monitor flow values in relation to adjustable limit values. The alarm settings for all analog device functions are explained together. ⇒ Chapter 10.12.2 "Alarms for analog signals and digital sensors", page 191	

^a The unit set for the particular flow rate function appears in the entry field.

^b The unit set as the flow rate for the particular flow function appears in the entry field.

11 Retrofitting optional boards

11.1 Installing optional boards



DANGER!

Installation and removal of optional boards must be performed only by qualified personnel. To ensure electrical safety, country-specific regulations must be observed.



CAUTION!


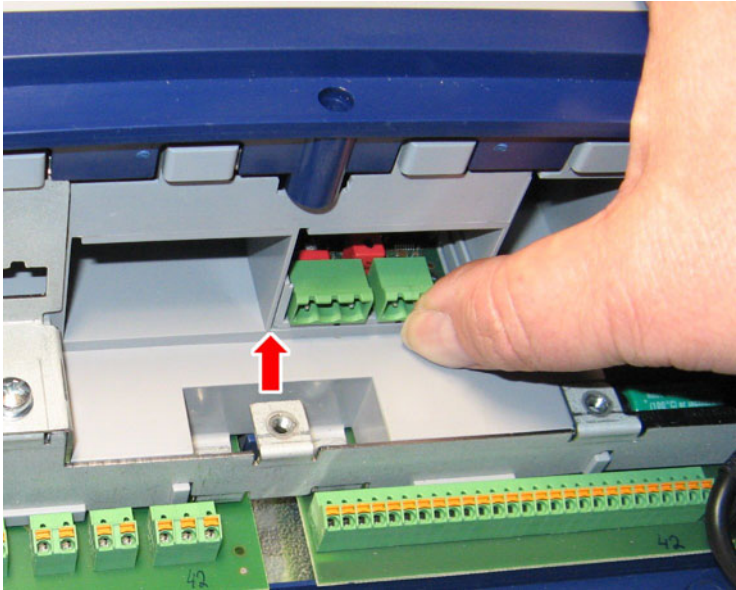
Optional boards must be carefully inserted into the SMK plug connections on the device's motherboard without tilting. Failure to do this can cause the SMK plug connections on the device's motherboard to break off. This applies in particular for the optional board of the COM 2 slot (serial interface RS422/485 and PROFIBUS-DP). In order to avoid damage:

- always use the plastic board frame provided
- Carefully slide the plastic board frame with the optional board into the slot without tilting
- Apply uniform pressure to insert into the SMK plug connection on both sides of the optional board front and do not tilt.

The following step-by-step table explains in detail the procedure for retrofitting optional boards:

Step	Action
1	Before changing or expanding the number of optional boards being used, please perform an energy balance test. ⇒ Chapter 11.2 "Energy balance test", page 222
2	Disconnect all phases of the power being supplied to the device (power grid, outside power supply sources for relays/solid-state relays etc.).
3	Identify the assembly from the part number on the sticker attached to the packaging as well as from the accessories table. ⇒ Chapter 4.4 "Accessories", page 29 Using the block diagram, select a suitable slot for the optional board. ⇒ Chapter 3.2 "Block diagram", page 21
4	Open the terminal compartment on the device. ⇒ Chapter 6.2.1 "Opening the terminal compartment on the device", page 43
5	Localize the selected slot in the device from the labeling on the cover plate over the optional board slots or the connection diagram. ⇒ Chapter 6.4.1 "Overview of connections", page 51
6	Unplug all plug-in screw terminals and interface cables that prevent removal of the cover plate.

11 Retrofitting optional boards

Step	Action
7	<p>Unscrew the 2 screws in the cover plate over the selected optional board slot and remove the cover plate.</p> 
8	<p>Insert the optional board into the selected slot straight and without tilting. Apply uniform pressure to insert at the right and left corners of the optional board front and allow it to engage gently into the SMK plug connection. Ensure that the board is seated correctly. For better guidance of the board, you can fill empty slots with plastic board frames. The plastic board frame must be flush with the front page of the plastic bodies of the optional board slots (see arrow).</p> 

11 Retrofitting optional boards

Step	Action
9	Fill all empty slots with plastic board frames, reinstall the cover plate and secure it in place with screws. For "Ci analysis input" optional boards (inductive conductivity), continue at Step 10; otherwise, at Step 14
10	Install the M12 socket supplied with the optional board in a suitable cable entry opening in the case.
11	Connect the 2-wire temperature sensor cable from the socket to an appropriate analog input (e. g. temperature measurement input). Observe the information regarding the integrated temperature sensor in the conductivity sensor.
12	Insert the plug-in screw terminal for the M12 socket into the Ci optional board. The factory-installed wiring must not be changed.
13	Connect the inductive conductivity sensor to the M12 socket.
14	Reinsert all other plug-in screw terminals and interface cables.
15	Reattach the terminal compartment cover. Tighten all 6 screws in the terminal compartment cover to a torque of 1 Nm.
16	Now, reconnect the power supply and check whether the new hardware has been recognized. ⇒ Chapter 7.3.1 "Checking the optional boards", page 81
17	Only for Ci optional boards (inductive conductivity): Perform a Ci base calibration. ⇒ Chapter "Performing the Ci base calibration", page 228
18	Only for optional boards for analysis inputs: Calibrate the analysis inputs. ⇒ Chapter 12 "Calibration in general", page 233

11 Retrofitting optional boards

11.2 Energy balance test

Depending on the number and type optional boards selected, a varying amount of heat is generated in the device as a result of the heat generated by the electronic modules. This heat can be cooled and removed from the hermetically sealed IP67 case to only a limited degree.

Using the **JUMO PC setup program**, a prediction of the maximum possible heating of the device electronics can be made before installing optional boards. You only need to specify which optional boards you are planning and the maximum ambient temperature to which the device will be exposed during operation.

This energy balance calculation assumes a worst-case scenario. The maximum possible amount of heat generated by the individual optional boards is assumed; the maximum ambient temperature assumed can be set to either 40 °C or 50 °C. If the planned complement of optional boards exceeds the energy balance limit, this equipping should be used continuously only if the worst-case (ambient temperature always 40 or 50 °C and all optional boards at max. load simultaneously) can occur for only a limited period of time. This must be decided by the system planner.

Comparable practical example: a car's engine should not be operated continuously in the "red" RPM range. Nevertheless, this is possible for a brief period of time. Increased wear, however, must be expected.

A demo version of the JUMO PC setup program is provided on the CD included with the JUMO AQUIS touch S. Alternatively, you can also download the software from the JUMO home page free of charge.

Tips for avoiding increased heat buildup:

- Install the device in an environment with moderate temperatures
- Prevent exposure to direct sunlight, as this can result in an extremely high temperature rise in the device
- Reduce the equipping of optional boards to only what is necessary
- Instead of analog current/voltage outputs, it is better to use digital interfaces (Ethernet, RS422/485 etc.) for transmitting measured values to PLCs/control systems
- Reduce the brightness of the liquid crystal display to only what is necessary
- Use the screensaver

11 Retrofitting optional boards

11.2.1 Monitoring the internal temperature

The temperature inside the device can be monitored in the Device Info menu. To do so requires corresponding user rights. The factory settings authorize the "Master" and "Service" users for this.

Open the board temperature display:

Device Menu > Service > Service Data > "Internal Data" tab




If the inside of the device becomes overheated, the "Internal temperature too high" alarm is triggered. The signal for this alarm is accessible in the binary selection and can be used to send a signal from the device to external indicating instruments or control rooms.

Selecting the "Internal temperature too high" alarm during configuration of binary outputs and internal functions:



Binary Selection > Alarm and Internal Signals > Internal temp. too high

11 Retrofitting optional boards

11.2.2 Performing the energy balance test

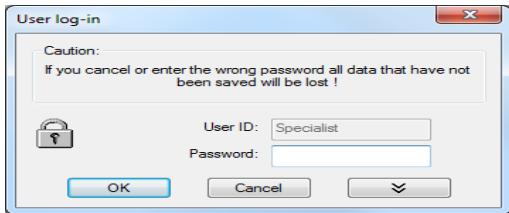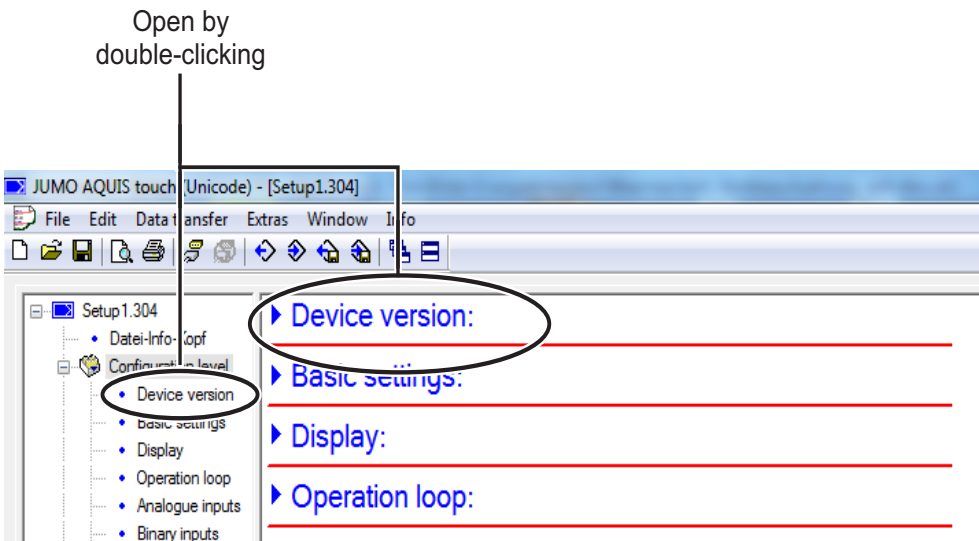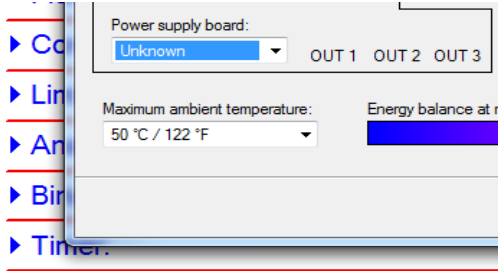Step	Action
1	Launch the JUMO PC setup program from the Windows® Start menu ^a .
2	<p>If you are using the demo version of the JUMO PC setup program, enter "Demo" as user ID and confirm by pressing "OK".</p>  A "User log-in" dialog box with a "Caution" message: "If you cancel or enter the wrong password all data that have not been saved will be lost!". It contains fields for "User ID" (with "Specialist" entered) and "Password". There are "OK", "Cancel", and a help icon button.
3	<p>Open the "Device Version" menu item by double-clicking on it.</p>  A screenshot of the "JUMO AQUIS touch" setup window. The "Device version" menu item in the left sidebar is circled. A callout line points to it with the text "Open by double-clicking". The main area shows a list of menu items: "Device version", "Basic settings", "Display", "Operation loop", "Analogue inputs", and "Binary inputs". The "Device version" item is highlighted.
4	In the "Hardware Selection" window, activate the "User-Defined Settings" option and click on "Next".
5	In the "Specification of Device Characteristics" window, click on "Next".
6	<p>In the "Power supply unit board" field, set the device voltage supply in acc. with the information on device nameplate.</p>  A screenshot of the "Power supply unit board" settings window. It shows a dropdown menu set to "Unknown" with buttons for "OUT 1", "OUT 2", and "OUT 3". Below it, "Maximum ambient temperature" is set to "50 °C / 122 °F". There is also a field for "Energy balance at n".

11 Retrofitting optional boards

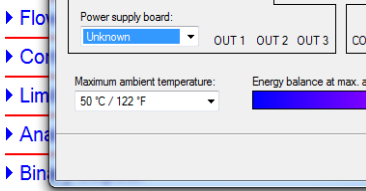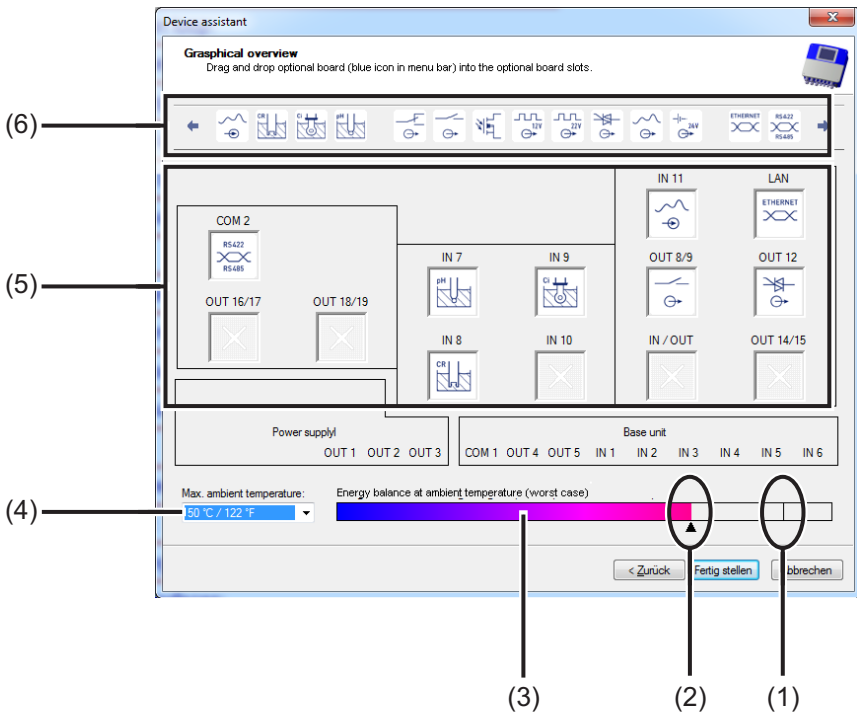Step	Action
7	<p>In the "Configuration of Optional Plug-in Cards" window, set the ambient temperature acc. to the prevailing conditions at the planned installation site. For temperatures up to 40 °C or 104 °F, select "40 °C / 104 °F". For temperatures in the range of 40 to 50 °C or 104 to 122 °F, select "50 °C / 122 °F".</p> 
8	<p>Here, you can now easily insert in, reposition to and remove the desired optional boards (7) from the corresponding slots (6) symbolically via drag and drop. Make sure the setting on the power supply unit board (5) is correct. The supply voltage level must match the information on the device nameplate. To remove optional boards from slots, simply pull the slot icons out of their slots via drag and drop and release once they are outside the slot. The "Energy Balance" bar graph (3) displays the heating to be expected inside the case. All heat generated by the base and power supply unit and the optional boards is taken into account along with the effect of the preset ambient temperature (4). The small vertical line in this display (1) represents the limit that may not be exceeded. If this limit is exceeded, the color of the pointer in the bar graph (2) changes from black to red.</p> 

11 Retrofitting optional boards

Step	Action
9	Installation of the planned complement of optional boards poses no concerns if the energy balance limit has not been exceeded.

^a Microsoft and Windows 7 are registered trademarks of Microsoft Corporation.

11 Retrofitting optional boards

11.3 Ci base calibration

Analysis inputs for inductive conductivity sensors must undergo a Ci base calibration during startup. A Ci base calibration must be performed when:

- A new sensor or a new Ci optional board is being installed for the first time
- The sensor or a Ci optional board was replaced
- A Ci optional board was repositioned to a different optional board slot
- Data loss occurred as the result of failure of the buffer battery while the power was switched off
- Device software was updated

After the basic calibration has been performed, the measurement input can be calibrated. Following successful calibration, the measurement input is ready for use.



NOTE

For the Ci base calibration, you need the JUMO Type 202711/21 calibration adapter for inductive conductivity sensors (TN 00543395).




CAUTION!




A buffer battery is built into the device. Its purpose is to maintain data when the device is switched off or if the voltage supply is interrupted. If the battery approaches the end of its operating life (approximately 7 years) then a battery prealarm will indicate that status. When the battery is empty a battery alarm will indicate that status. The battery must be exchanged before it is empty. The battery must be exchanged by the JUMO Service department! In this case, send in the device!

11 Retrofitting optional boards



Performing the Ci base calibration

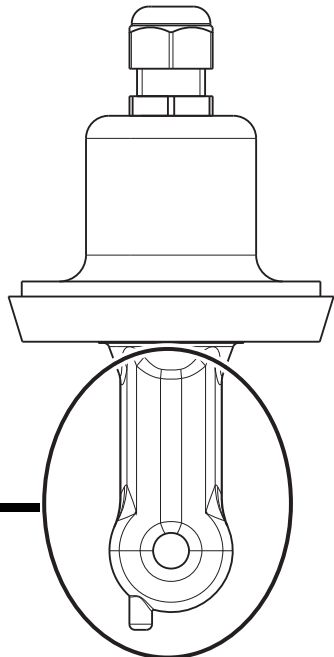Step	Action
1	<p>Ensure that you have user rights for calibration settings. The default settings authorize the "Master" and "Service" users for this.</p> <p>⇒ Chapter 8.1.1 "Passwords and user rights", page 83</p>
2	<p>Ensure that the electronics of the JUMO AQUIS touch S have reached operating temperature. You can view the board temperature at:</p> <p>Device Menu > Service > Service Data > "Internal Data" tab</p> <p>Ensure that the ambient temperature specified for the device corresponds to the conditions for the normal operating mode. Wait until the board temperature has reached an approximately constant value.</p>
3	<p>Place the sensor such that the sensor body is suspended freely in air. Observe the following rules during the entire calibration:</p> <ul style="list-style-type: none">• Keep all objects away from the sensor body• Do not touch the sensor body• Do not allow the sensor body to lie flat on a surface <div><p>Sensor body of a Ci sensor</p></div>



11 Retrofitting optional boards

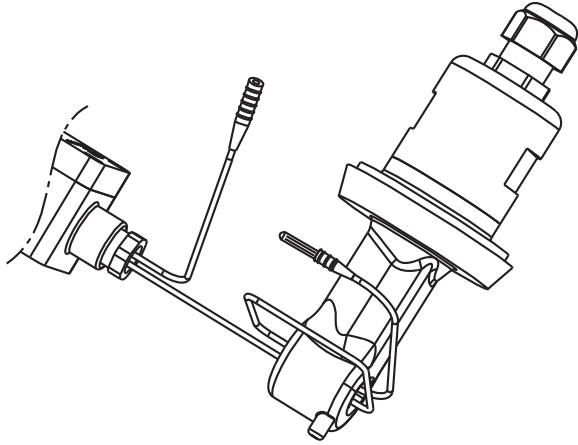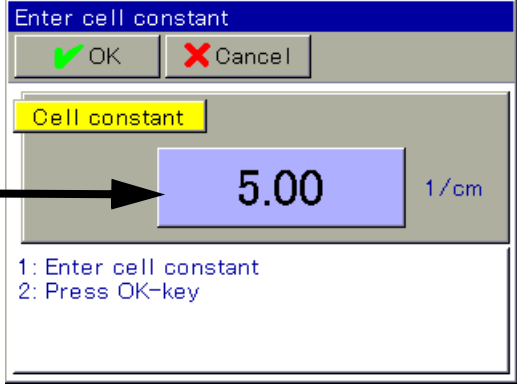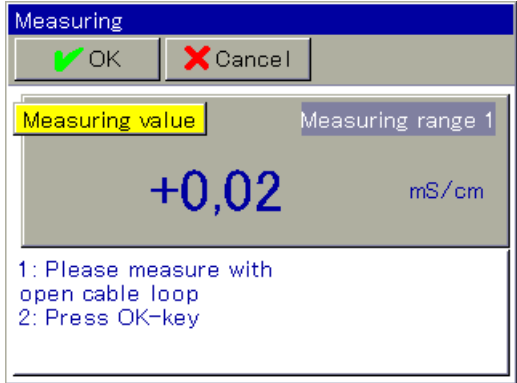Step	Action
4	<p>Place the wire of the calibration sensor with 2 windings through the opening in the Ci sensor without connecting the ends of the wires.</p> 
5	<p>Start the Ci base calibration</p> <p>Device menu > Calibration > Select Ci Analysis Input > Ci Base Calibration</p>
6	<p>Enter the cell constant for the sensor and confirm by pressing "OK".</p> <p>Tap button to enter field</p> 
7	<p>The device now performs a measuring with the open cable loop of the calibration adapter open. Wait until the measured value displayed stabilizes and then confirm by pressing "OK".</p> 

11 Retrofitting optional boards

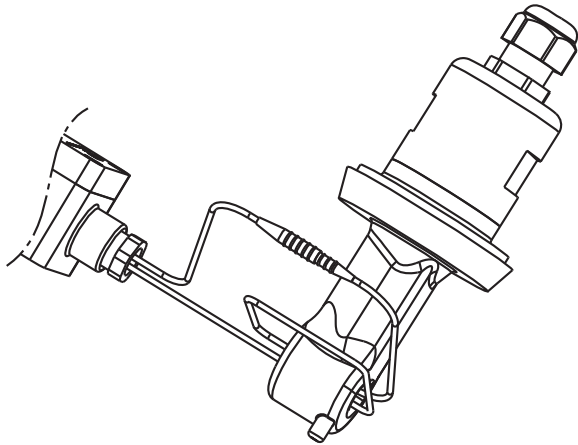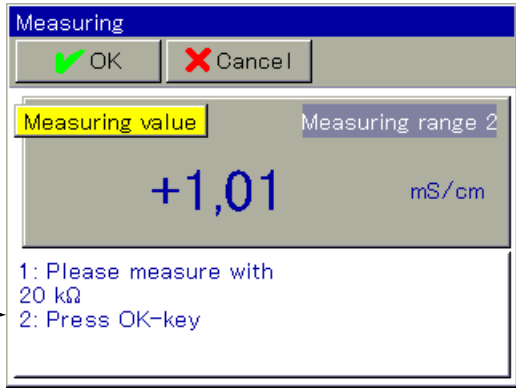Step	Action
8	<p>Connect the ends of the wires forming the conductor loop of the calibration adapter.</p> 
9	<p>Set the calibration adapter to the resistance value shown in the instruction text in the display (in the example: 20 kΩ). Once the measured value displayed has stabilized, confirm by pressing "OK".</p> <div style="display: flex; align-items: center;"> <div style="margin-right: 20px;">Instructions →</div>  </div>
10	<p>Now follow the instructions on the display. You will be requested to set certain resistance values on the calibration adapter one at a time and then to confirm each measuring by pressing "OK". All resistance value set on the calibration adapter are measured for the end of one measuring range and the beginning of the following measuring range. Each resistance value will thus be confirmed 2 times. Only the last measuring will be confirmed 1 time.</p>

11 Retrofitting optional boards

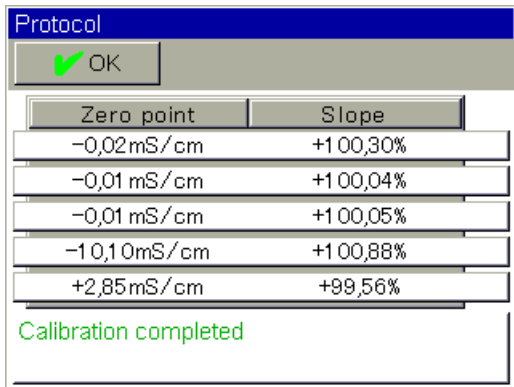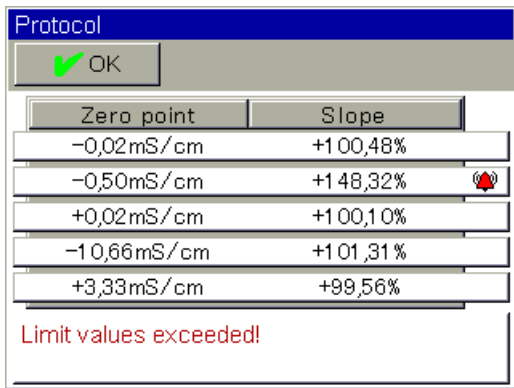Step	Action
11	<p>Once all measurements have been confirmed, a summary of the calibration data acquired appears. Confirm by pressing "OK".</p> <p>If the Ci base calibration fails, the procedure is canceled without acceptance of the calibration data.</p> <div> <p>Protocol after successful Ci base calibration</p>  </div> <div> <p>Protocol after failed Ci base calibration</p>  </div>
12	Accept the calibration data acquired by pressing "Yes"; discard the data by pressing "No".

11 Retrofitting optional boards

12.1 Notes



WARNING!

During the calibration, the relays and analog output signals assume the states configured for the calibration! The response of the output signals is set for each output in its "Response at calibration" configuration point.

⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161

12.2 General information

The actual electrical characteristics of analysis sensors always deviate somewhat from the nominal specifications. The reasons for this include:

- Like every measuring instrument, analysis sensors always have a certain uncertainty of measurement that results from manufacturing tolerances.
- During use, analysis sensors are exposed to chemical processes. Deposits and wear phenomena caused by these processes result in changes of the electrical characteristics of sensors.

To optimize the accuracy of measurements, analysis sensors must be calibrated. Calibrations are required:

- during installation or when changing a sensor
- regularly at time intervals that must be specified by the user
- if implausible measured values are displayed
- if process conditions change, e. g. as the result of equipment modification

Calibration timers can be configured to provide a regular reminder of when calibrations are due.

⇒ Chapter 10.13 "Calibration timer", page 196

Each successfully completed calibration is recorded in the calibration logbook.

⇒ Chapter 12.3 "Calibration logbook", page 235

12.2.1 General procedure for calibration

True calibration (calibrating with routines)

After opening one of the calibration routines in the device, the user is guided through a process with measurements and entries. In the course of this process, the calibration values are determined and saved automatically.

Suitable calibration routines are available for every type of analysis sensor. The individual calibration routines for the various sensor types are described in separate chapters.

⇒ Chapter 13 "Calibrating a pH measuring chain", page 239 to Chapter 17 "Calibrating Ci conductivity sensors", page 265

Execution of calibration routines requires that the following prerequisites be met:

12 Calibration in general

- You must be logged in as a user with the right to perform calibrations. Factory-preset users have all of these rights.
⇒ "Passwords and user rights", page 83
- You must ensure that the calibration default settings for the individual analysis inputs, and, possibly, the universal inputs are set correctly. The explanations of the calibration default settings can be found in the chapters on calibration of the various analysis sensors.
- In the case of Ci analysis inputs, it should be noted that the optional boards must undergo a basic calibration during the initial commissioning. If this has not yet been performed, it is necessary to do so prior to any other calibration.

⇒ Chapter 11.3 "Ci base calibration", page 227

Manual entry of calibration values



NOTE

Incorrectly entered calibration values result in incorrect measured values. Correct measurements are essential for control systems and limit monitoring.

If calibration values are known, they can also be entered manually. This may be the case with temperature-compensated conductivity measurements, for instance, when the temperature coefficient of a liquid is known. Another important application case is the manual entry of relative cell constants of conductivity sensors. If an ASTM test certificate showing precisely-measured cell constants is available, in addition to entering the nominal cell constants in the configuration of the conductivity sensor concerned, the relative cell constants of all measuring ranges in the calibration values must be manually entered.

Configuration of conductivity sensors:

⇒ Chapter 10.5.6 "CR/Ci analysis inputs (conductive/inductive conductivity)", page 156

⇒ Chapter "Only for sensors with JUMO digiLine CR/Ci", page 173

Known calibration values are entered manually under:

Device menu > Calibration > Select Analog Input or Digital Sensor > Calibration Values

12.3 Calibration logbook






A separate logbook is maintained for each analysis and universal input.

The last 10 **successful** calibrations of the input concerned are saved in the calibration logbook. Canceled or failed calibrations (calibrations outside the permissible limits) are not saved in the logbook, but rather noted in the event list. Manual changes of calibration values on the device are also documented. The following data are retained in the logbook:




- Heading with description of the measurement input and calibration method
- Date and time
- Measurand
- Calibration assessment (assessment of the calibration values determined during the true calibration)
- Calibration values determined or entered
- Reference values used
- Calibration mode (true calibration/manual entry of calibration values)

Since this information does not yet fit in a screen line, the logbook entries are listed in abbreviated form with the date and calibration results for the time being. More exact information can be accessed for every entry via the detail view.

Example of a calibration logbook






Calibration logbook				
	Exit			Details
	Date	Zero-Point	Slope 1	Slope 2
	12/01/12	+54.65		
	12/01/12	+7.00	-62.11	-62.11
	12/01/12	+6.71	-59.91	-59.91

Calibration assessment symbols

	Calibration values are valid: Sensor is OK
	The calibration values determined are critical. It is recommended that the sensor be cleaned.
	Manual value input



For Ci analysis inputs (inductive conductivity) and universal inputs that have been configured as a conductivity measurement input, a "TC curve" button is also displayed. Tapping this button opens a list with the temperature coefficients determined from the last "TC curve calibration".

12 Calibration in general

Calibration logbook					
 Exit		 Details		 TC-curve	
	Datum	Rel.Zk %	Tk %/K	T1 °C	T2 °C
	01/01/13		1,50		
	01/01/13		3,00		

Example of a detail view of a logbook entry

The calibration logbook provides an overview of the calibrations performed. Tapping the "Details" button opens the selected logbook entry in the detail view. The detail view displays a table with all calibration values from a calibration procedure. The "Service" button is used for diagnostic purposes by trained personnel or JUMO Service.




Calibration logbook		
 Exit		 Service
Analysis input 4		
Two-point pH calibration		
Time	12/01/14 07:45:11	
Calibration mode	With reference solution	
pH zero point	+7.00 pH	
Slope	-62.11 mV/pH +105.0 %	
pH buffer 1	+5.00 pH	+25.00 °C
pH buffer 2	+7.00 pH	+25.00 °C

12 Calibration in general


Assessment criteria

pH calibrations




(glass electrodes and ISFET connected to analysis measuring inputs as well as standard signals connected to universal inputs)

Calibration value [unit]	<div><div>—</div><div></div><div></div><div></div><div>—</div></div>												
Zero point [pH]	...	<	5	≤	...	<	6 to 8	<	...	≤	9	<	...
Slope [%]	...	<	75	≤	...	<	89.6 to 103.1	<	...	≤	110	<	...

pH calibrations (antimony electrodes connected to analysis measuring inputs)

Calibration value [unit]	—						—
Zero point [pH]	...			<	-2 to +2	<	...
Slope [%]	...			<	10 to 110	<	...

Redox zero-point calibration




Calibration value [unit]	—																	—													
Zero point [mV]	...	<	-200		≤	...	<	-120 to +120		<	...	≤	+200		<	...															



NOTE

There is no assessment of the calibration values in the case of a redox 2-point calibration.




Ammonia calibration


Calibration value [unit]	—																	—													
Zero point [mV]	...	<	-612			≤	...	<	-312 to +588			<	...	≤	+888			<	...												

12 Calibration in general

Calibration of conductivity sensors

(analysis measuring inputs and standard signals connected to universal inputs)

Calibration value [unit]	—    —												
Rel. cell constant (CR) [%]	...	<	50	≤	...	<	75 to 125	<	...	≤	150	<	...
Rel. cell constant (Ci) [%]	...	<	80	≤	...	<	90 to 110	<	...	≤	120	<	...




Calibration value [unit]	—						—
Temperature coefficient (CR) [%/K]	...			<	0 to 8	<	...
Temperature coefficient (Ci) [%/K]	...			<	0 to 5.5	<	...




NOTE

No assessment of the calibration values is performed for universal inputs in the "linear scaling" operation mode.

Calibration of conductivity sensors with JUMO digiLine CR/Ci

Calibration value [unit]	—    —												
Rel. cell constant (CR) [%]	...	<	50	≤	...	<	75 to 125	<	...	≤	150	<	...
Rel. cell constant (Ci) [%]	...	<	80	≤	...	<	90 to 110	<	...	≤	120	<	...

Calibration value [unit]	—						—
Temperature coefficient (CR) [%/K]	...		<	0 to 8	<		...
Temperature coefficient (Ci) [%/K]	...		<	0 to 6	<		...

13 Calibrating a pH measuring chain

13.1 Notes



WARNING!

During the calibration, the relays and analog output signals assume the states configured for the calibration! The response of the output signals is set for each output in its "Response at calibration" configuration point.

⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161

13.2 General information

The calibration of pH electrodes is based on measurements in buffer solutions with a defined pH-value. The pH values of the buffer solutions used are specified either via entry of fixed values into the calibration default settings, entered during the calibration or recognized automatically by "automatic buffer recognition" during the calibration process. For "automatic buffer recognition", a buffer set table must be selected in the calibration default settings. In this case, the buffer solutions used must be listed in the provided buffer set table. Since pH value measurement of liquids is temperature-dependent, the temperature of the buffer solution must be sensed in order to compensate for its effect on the result of the measurement. This requires either manual entry or measurement with the aid of a temperature sensor.

13.2.1 Calibration methods for pH sensors

Zero-point calibration

This calibration method is used to determine the pH zero point on the measurement characteristic curve. The slope is retained.

A buffer solution with a defined pH value is needed as a reference.

Two-point Calibration

By measuring 2 different buffer solutions with defined pH values, the pH zero point and pH slope of the measuring chain are established.

The pH values of the buffer solutions must be at least 2 pH apart. This calibration method is recommended for most applications.

Three-point calibration

With a three-point calibration, the pH zero point as well as the pH slope in the acidic region and the pH slope in the alkaline region are established. The three-point calibration can be performed only for pH sensors on analysis inputs. It is not available for JUMO digiLine pH sensors.

This method requires 3 buffer solutions with defined pH-values as references. One of these must be acidic, one neutral and one alkaline. The pH values of the buffer solution must be at least 2 pH apart from one another. This calibration method is recommended for applications with more demanding accuracy requirements when performing measurements in both the alkaline and acidic regions.

13 Calibrating a pH measuring chain

13.2.2 Calibration default settings for pH sensors

Before you can perform a calibration, you must first enter the necessary calibration default settings. The possible settings for the pH Calibration are described in the following.

Open the calibration default settings:

Device Menu > Calibration > Select Analysis Input or Digital Sensor Input for pH/redox/NH3 > Calibration Presets



NOTE

The "Calibration default settings" menu appears in the Device menu only if a user with corresponding user rights is logged in. The "Calibration default settings" menu for a digital sensor is visible for the digital sensor concerned only when it is linked.

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

⇒ Chapter 8.2.7 "Digital sensors", page 103

Sample screen:
pH calibration default
settings

Calibration default setting	
<input checked="" type="checkbox"/> OK <input checked="" type="checkbox"/> Cancel	
Release calibration routine <input type="checkbox"/>	
Zero-point calibrat	<input checked="" type="checkbox"/>
Two-point calibrati	<input checked="" type="checkbox"/>
Three-point calibra	<input type="checkbox"/>
Buffer set selecti.	No detection
pH buffer 1	+5.0000 pH
pH buffer 2	+7.0000 pH
pH buffer 3	
Temp. compensation	No selection

13 Calibrating a pH measuring chain

pH calibration default settings

The calibration default settings enable the calibration routines to be accessed in the particular calibration menu.

Calibration routines that are not enabled are not visible in the calibration menu. Additional calibration default settings are explained in the following table.

Parameter	Possible settings	Explanation
Buffer set selection	Buffer set 1 to 3 factory-preset: <ul style="list-style-type: none"> • Buffer set 1: Reference buffer solutions for calibrating pH measuring instruments acc. to DIN 19266 • Buffer set 2: Technical buffer solutions, preferably for calibrating and adjusting technical pH measuring instruments acc. to DIN 19267 	Buffer set tables contain pH values for selected buffer solutions as a function of temperature. These tables can be prepared/edited using commercially available standard solutions (DIN 19266, NIST; otherwise, technical buffer solutions etc.) or on the basis of customer-specific information. With their aid, buffer solutions can be recognized automatically when calibrating. The pH value data for the buffer solutions used must be contained in the buffer set table selected. When a buffer set is selected, this activates automatic buffer recognition and the entry fields for the settings "pH buffer 1 to 3" are hidden. You need the JUMO PC setup program to edit buffer set tables.
Buffer 1 pH-value	-2 to +16 pH	manual entry of the pH-values of the buffer solutions being used for the calibration Depending on the selected Calibration routine, the corresponding entry fields for "pH buffer 1 to 3" are displayed. The pH-values of the buffer solutions used must be at least 2 pH apart.
Buffer 2 pH-value	-2 to +16 pH	
Buffer 3 pH-value	-2 to +16 pH	
Compensation	Fixed compensation temperature Temperature input Interface	Fixed compensation temperature: Compensation with a fixed temperature value that is entered in the configuration item "Compensation temperature". Temperature input: The integrated temperature probe of the pH sensor supplies the compensation temperature. Interface: The AQUIS touch S transmits the compensation temperature to the sensor electronics via the interface. The source of the compensation temperature is set in the configuration point "Compensation temperature".

13 Calibrating a pH measuring chain

Parameter	Possible settings	Explanation
Temperature compensation	Selection from Analog selection	Temperature input for automatic acquisition of the test/sample solution temperature during the calibration

13 Calibrating a pH measuring chain

13.3 pH Calibration routines



NOTE


You must be logged in with corresponding user rights to perform calibrations.
⇒ Chapter 8.2.1 "Log-on/Log-out", page 97




NOTE

Digital sensors need to be linked before they can be calibrated.
⇒ Chapter 8.2.7 "Digital sensors", page 103

13.3.1 Zero-point calibration

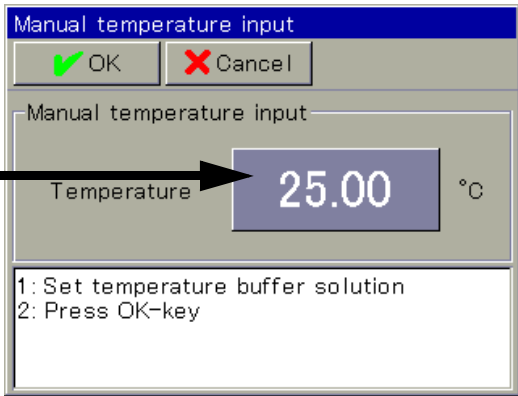
Step	Action
1	<p>Start the Zero-point calibration.</p> <p>for pH sensors on analysis inputs: Device Menu > Calibration > Select Analysis Input for pH/redox/ NH₃ > Open Zero-Point Calibration</p> <p>for pH sensors with JUMO digiLine electronics: Device Menu > Calibration > Digital Sensor 1 to 6 > Open Zero-Point Calibration</p>
2	<p>If temperature compensation was not specified in the calibration default settings, enter the temperature of the buffer solution here manually. If temperature compensation was specified, the temperature of the buffer solution is determined automatically.</p> <p>tap button to enter temperature</p> 
3	<p>Clean the pH electrode and immerse it in the buffer solution.</p>

13 Calibrating a pH measuring chain

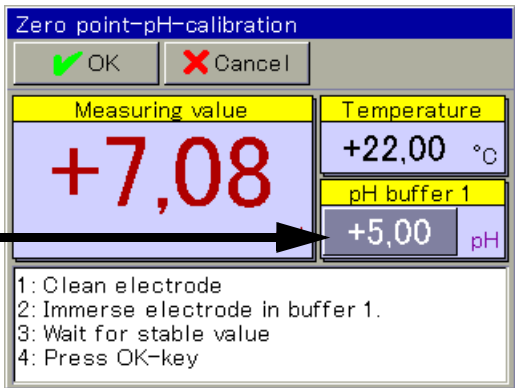
Step	Action
4	<p>Entry of the pH-value of the buffer solution</p> <ul style="list-style-type: none"> without buffer recognition: Check whether the "pH buffer 1" matches the pH-value of the buffer solution used. If a buffer set table was not specified, the "buffer 1 pH" value is taken from the calibration default settings. It is still possible to change this manually here. <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> tap button to enter pH-value of the buffer field </div>  </div> <ul style="list-style-type: none"> with buffer recognition: A prerequisite here is that a buffer set table has been selected in the buffer set table and the pH-value of the buffer solution used is contained in this buffer set table. If these prerequisites are satisfied, the pH value of the buffer solution is determined automatically during the calibration.
5	Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK"
6	A Protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
7	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.

13 Calibrating a pH measuring chain

13.3.2 Two-point and three-point calibration

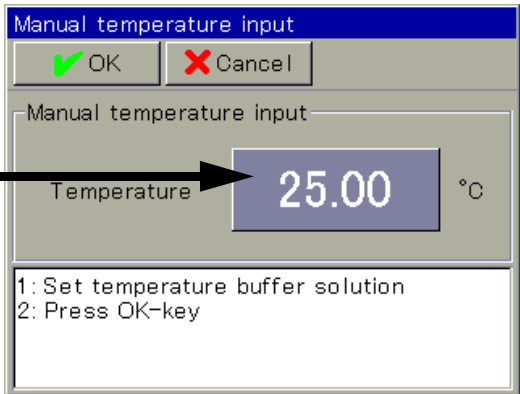Step	Action
1	<p>Start the desired Calibration routine.</p> <p>for pH sensors on analysis inputs: Device Menu > Calibration > Analysis Input Select Analysis Input for pH/redox/NH₃ > Open Two-Point or Three-Point Calibration</p> <p>for pH sensors with JUMO digiLine electronics: Device Menu > Calibration > Digital Sensor 1 to 6 > Open Two-Point Calibration</p>
2	<p>If temperature compensation was not specified in the calibration default settings, enter the temperatures of the buffer solution here manually. If temperature compensation was specified, the temperature of the buffer solution is determined automatically.</p> <p>To enter the temperature, tap the button</p> 
3	<p>Clean the pH electrode and immerse it in one of the buffer solutions.</p> <p>For a Two-point calibration, you need 2 buffer solutions. For a three-point calibration, you need 3 buffer solutions (acidic, neutral, and alkaline).</p>

13 Calibrating a pH measuring chain

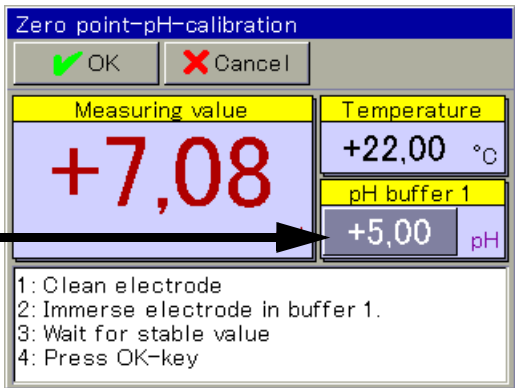Step	Action
4	<p>Entry of the pH-value of the buffer solution</p> <ul style="list-style-type: none"> without buffer recognition: Check whether the "pH buffer 1" matches the pH-value of the buffer solution used. If a buffer set table was not specified, the "buffer 1 pH" value is taken from the calibration default settings. It is still possible to change this manually here. <p>tap button to enter pH-value of the buffer field</p>  <ul style="list-style-type: none"> with buffer recognition: A prerequisite here is that a buffer set table has been selected in the buffer set table and the pH-value of the buffer solution used is contained in this buffer set table. If these prerequisites are satisfied, the pH value of the buffer solution is determined automatically during the calibration.
5	Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".
6	For each additional calibration point, repeat steps 3 to 5 with the required buffer solutions.
7	A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
8	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.

14.1 Notes



WARNING!

During the calibration, the relays and analog output signals assume the states configured for the calibration! The response of the output signals is set for each output in its "Response at calibration" configuration point.

⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161

14.2 General information

The calibration of Redox sensors is based on measurements in test solutions with a defined Redox potential.

14.2.1 Calibration methods for Redox sensors

Zero-point calibration

This calibration method is used to determine the redox zero point.

A test solution with a defined redox potential is needed as a reference.

"mV" must be set as the redox unit in the configuration of the redox measurement input (analysis input or input for digital sensors).

⇒ Chapter 10.5.4 "Analysis inputs pH/Redox/NH₃", page 153

Two-point Calibration

This calibration is used to establish an application-specific measurement characteristic curve where redox potentials are represented as a percentage of concentration values. The redox potentials of 2 solutions are measured. Concentration values in percent are then assigned to the measured values by the user.

Two process-typical sample solutions are needed as calibration solutions as a reference.

"Percent" must be set as the redox unit in the configuration of the redox measurement input (analysis input or input for digital sensors).

⇒ Chapter 10.5.4 "Analysis inputs pH/Redox/NH₃", page 153

Example: In a detoxification plant, the toxicity of a liquid is to be measured on the basis of the Redox potential. The calibration requires 2 solutions:

- the concentration of the highly toxic solution is given as 80 % by the user, for instance
- the concentration of the detoxified solution is given as 10% by the user, for instance

Using the redox potential, the toxicity can now be measured and displayed in percent.

14 Calibrating redox sensors

14.2.2 Calibration default settings for Redox sensors

Before you can perform a calibration, you must first enter the necessary calibration default settings. The possible settings for the Redox calibration are described in the following.

Open the calibration default settings:

Device Menu > Calibration > Select Analysis Input for pH/redox/NH₃ > Calibration Presets



NOTE

The "Calibration default settings" menu appears in the Device menu only if a user with corresponding user rights is logged in. The "Calibration default settings" menu for a digital sensor is visible for the digital sensor concerned only when it is linked.

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

⇒ Chapter 8.2.7 "Digital sensors", page 103

Sample screen:
Redox calibration default
settings
(zero-point calibration)

Redox calibration default settings

The calibration default settings enable the calibration routines to be accessed in the particular calibration menu.

Calibration routines that are not enabled are not visible in the calibration menu. Additional calibration default settings are explained in the following table.

Parameter	Possible settings	Explanation
Redox test solution	-1500 to +1500 mV	Manual entry of the Redox potential of the test solution being used for calibration



NOTE

Remember that the configuration of the redox measurement input must be set to the redox unit "mV" for the zero-point calibration and to "Percent" for the two-point calibration.

⇒ Chapter 10.5.4 "Analysis inputs pH/Redox/NH₃", page 153

14 Calibrating redox sensors

14.3 Redox calibration routines



NOTE

You must be logged in with corresponding user rights to perform calibrations.
⇒ Chapter 8.2.1 "Log-on/Log-out", page 97



NOTE

Digital sensors need to be linked before they can be calibrated.
⇒ Chapter 8.2.7 "Digital sensors", page 103

14.3.1 Zero-point calibration


Step	Action
1	<p>Ensure that</p> <ul style="list-style-type: none"> the calibration default settings are correct, "mV" is set as the Redox unit in the configuration of the Redox measurement input. <p>⇒ Chapter 14.2.2 "Calibration default settings for Redox sensors", page 248. ⇒ Chapter 10.5.4 "Analysis inputs pH/Redox/NH₃", page 153</p>
2	<p>Start the Zero-point calibration.</p> <p>for redox sensors on analysis inputs: Device Menu > Calibration > Select Analysis Input for pH/redox/ NH₃ > Zero-Point Calibration</p> <p>for redox sensors with JUMO digiLine electronics: Device Menu > Calibration > Digital Sensor 1 to 6 > Zero-Point Calibration</p>
3	<p>Check that the "Redox test solution" value displayed matches the Redox value of the test solution. The "Redox test solution" value is taken from the calibration default settings. It is still possible to change this manually here.</p> <p>Tap button to change the Redox value of the test solution manually</p> <div data-bbox="887 1554 1407 1939"> </div>

14 Calibrating redox sensors

Step	Action
4	Clean the Redox electrode and immerse it in the test solution. Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".
5	A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
6	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.

14 Calibrating redox sensors

14.3.2 Two-point Calibration

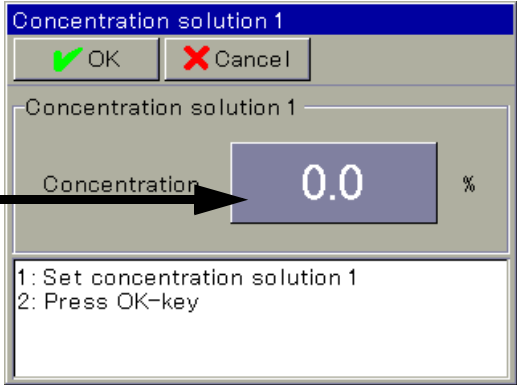Step	Action
1	<p>Ensure that</p> <ul style="list-style-type: none"> the calibration default settings are correct "Percent" is set as the Redox unit in the configuration of the Redox measurement input. <p>⇒ Chapter 14.2.2 "Calibration default settings for Redox sensors", page 248. ⇒ Chapter 10.5.4 "Analysis inputs pH/Redox/NH₃", page 153</p>
2	<p>Start the two-point calibration.</p> <p>for redox sensors on analysis inputs: Device Menu > Calibration > Select Analysis Input for pH/redox/ NH₃ > Two-Point Calibration</p> <p>for redox sensors with JUMO digiLine electronics: Device Menu > Calibration > Digital Sensor 1 to 6 > Two-Point Calibration</p>
3	<p>Enter the concentration value of the first reference solution in percent. Confirm by pressing "OK".</p> <p>Tap button to enter field</p> 
4	<p>Clean the Redox electrode and immerse it in the first test solution. Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".</p>
5	<p>As in step 3, enter the concentration value of the second solution in percent. Confirm by pressing "OK".</p>
6	<p>Clean the Redox electrode and immerse it in the second test solution. Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".</p>
7	<p>A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.</p>
8	<p>Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.</p>

14 Calibrating redox sensors

15 Calibrating ammonia sensors

15.1 Important information



WARNING!

During the calibration, the relays and analog output signals assume the states configured for the calibration! The response of the output signals is set for each output in its "Response at calibration" configuration point.

⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161

15.2 General information

The calibration of ammonia sensors is based on measurements in ammonia-free test solutions.

15.2.1 Calibration methods for ammonia sensors

Zero-point calibration

This calibration method is used to determine the ammonia zero point.

An ammonia-free test solution (e.g. water) is needed as a reference.


15.2.2 Calibration default settings for ammonia sensors

In the ammonia sensor calibration default settings, the zero-point calibration is enabled and preconfigured as the only available calibration routine.

Open the calibration default settings:

Device Menu > Calibration > Select Analysis Input for pH/redox/ NH_3 > Calibration Presets

Sample screen:
Ammonia calibration
default settings

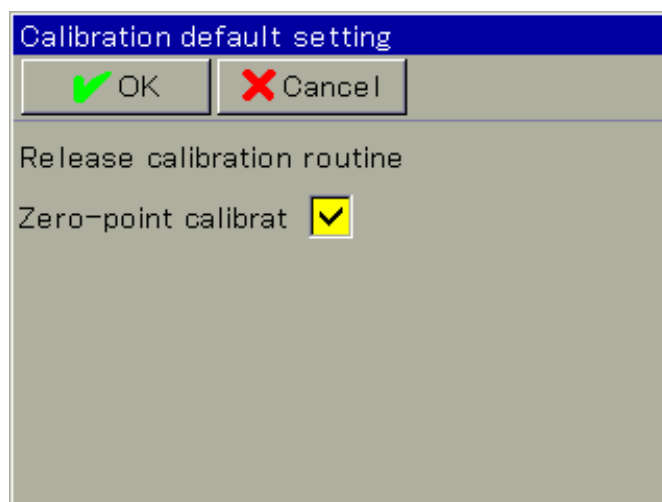

15 Calibrating ammonia sensors

15.3 Ammonia calibration routines



NOTE!

You must be logged in with corresponding user rights to perform calibrations.
⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

15.3.1 Zero-point calibration

Step	Action
1	Start the Zero-point calibration. Device Menu > Calibration > Select Analysis Input for pH/redox/ NH ₃ > Zero-Point Calibration
2	Clean the ammonia electrode and immerse it in the ammonia-free test solution. Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".
3	A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
4	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.

16 Calibrating CR conductivity sensors

16.1 Notes



WARNING!

During the calibration, the relays and analog output signals assume the states configured for the calibration! The response of the output signals is set for each output in its "Response at calibration" configuration point.

⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161

16.2 General information

The calibration of CR sensors is based on measurements in test solutions with a defined electrolytic conductivity. Since the electrolytic conductivity of liquids is temperature dependent, the temperature of the test solution must be sensed. This requires either manual entry or measurement with the aid of a temperature sensor.

16.2.1 Calibration methods for CR conductivity sensors (conductive)

Rel. cell constant

The deviation from the nominal cell constant of a CR sensor is described by the relative cell constant. The rel. cell constant is determined by making a measurement in a test solution with a defined conductivity.

Temperature coefficient

The temperature coefficient is a measure of the temperature dependence of the electrolytic conductivity of a liquid. It is used to compensate for the effect of temperature when measuring the electrolytic conductivity. When performing a temperature-compensated conductivity measurement, the conductivity value measured is always indicated with reference to the fixed reference temperature. With the aid of the temperature coefficient, the value of the electrolytic conductivity displayed at the reference temperature is calculated from the current measured values of conductivity and temperature of the liquid.

The reference temperature is set in the configuration of the individual CR analysis input or digital input with JUMO digiLine CR.

⇒ Chapter 10.5.6 "CR/Ci analysis inputs (conductive/inductive conductivity)", page 156

⇒ Chapter "Only for sensors with JUMO digiLine CR/Ci", page 173

The temperature coefficient is determined from 2 measurements in a test solution at different temperatures (reference and operation temp.).



NOTE

If the temperature coefficient of a sample solution is known, it can be entered directly.


⇒ Chapter 12.2.1 "General procedure for calibration", page 233

16 Calibrating CR conductivity sensors

TC curve for JUMO digiLine CR (for nonlinear temperature coefficients)

If the conductivity of a liquid whose temperature coefficient changes with temperature has to be measured, this method can determine 6 temperature coefficients for 6 temperature intervals. In this way, it is possible to determine a good approximation of the temperature coefficient curve. While the operator brings the sample solution to the temperature values requested by the device, the device determines the temperature coefficient for each interval. This requires installation of a temperature sensor that the device can use to sense the temperature of the sample solution. The series of temperature values consists of 7 values in total:

- Starting temperature and end temperature of the TC curve" (see calibration process for TC curve)
- Reference temp. (see Chapter 10.11.2 "Configuration of digital sensors", page 170)
- 4 additional temperature values between the "starting temperature and end temperature of the TC curve"

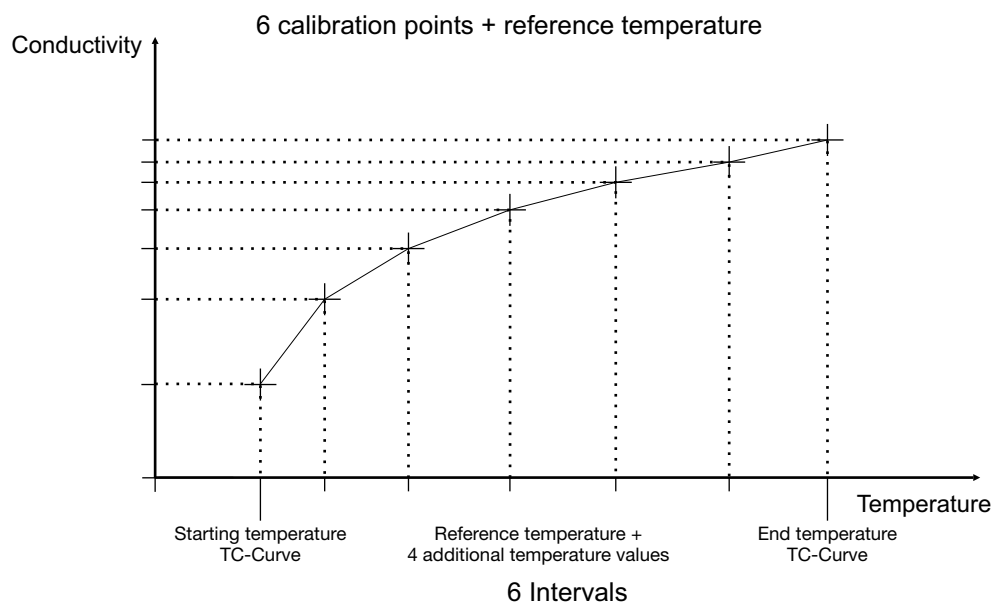

16 Calibrating CR conductivity sensors

16.2.2 Calibration presets for CR conductivity sensors

Before you can perform a calibration, you must first enter the necessary calibration default settings. The possible settings for the CR calibration are described in the following.

Open the calibration default settings:

for conductivity sensors on analysis inputs:

Device Menu > Calibration > Select CR Analysis Input > Calibration Presets

for conductivity sensors with JUMO digiLine electronics:

Device Menu > Calibration > Digital Sensor 1 to 6 > Calibration Default Settings



NOTE

The "Calibration default settings" menu appears in the Device menu only if a user with corresponding user rights is logged in.

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

Sample screen:
CR calibration presets

The calibration default settings enable the calibration routines to be accessed in the particular calibration menu.

Calibration routines that are not enabled are not visible in the calibration menu.

Additional calibration default settings are explained in the following table.

Calibration presets for calibrating the relative cell constant

Parameter	Possible settings	Explanation
Reference conductivity	0 to 9999 mS/cm	Conductivity of the reference solution

16 Calibrating CR conductivity sensors

Calibration presets for calibrating the temperature coefficient

Parameter	Possible settings	Explanation
Temperature compensation	Selection from analog selection	Temperature input for automatic acquisition of the test/sample solution temperature during the calibration
Reference temperature	-50 to +150 °C	The conductivities of a sample solution at reference temperature and working temperature are captured during the calibration process. This yields 2 value pairs (temperature/conductivity). These value pairs provide the basis for calculating the temperature coefficient. The operation temp. must differ from the reference temperature by at least 5 °C.
Operation temp.	-50 to +150 °C	

Calibration presets for calibrating the TC curve for JUMO digiLine CR

Parameter	Possible settings	Explanation
Compensation	Fixed compensation temperature, Temperature input, Interface	<p>Fixed compensation temperature: Compensation with a fixed temperature value that is entered in the configuration item "Compensation temperature".</p> <p>Temperature input: The integrated temperature probe of the conductivity sensor supplies the compensation temperature.</p> <p>Interface: The AQUIS touch S transmits the compensation temperature to the sensor electronics via the interface. The source of the compensation temperature is set in the configuration point "Compensation temperature".</p>
Temperature compensation	Selection from Analog selection	Temperature input for automatic acquisition of the test/sample solution temperature during the calibration
Starting temperature	-50 to +250 °C	The starting and final temperatures of the range for which a temperature coefficient curve is to be determined. The starting temperature must be at least 20 °C lower than the final temperature. The reference temperature for the measurement input must lie between the starting and final temperatures, and differ from the starting and final temperatures by at least 2 °C.
Final temperature	-50 to +250 °C	



NOTE

Calibration of the TC curve is possible only with automatic temperature acquisition.

16 Calibrating CR conductivity sensors

16.3 CR calibration routines



NOTE


Conductivity measuring inputs can be configured with measuring range change-over. Accordingly, calibrations must be performed for all "accessible measuring ranges".




NOTE

You must be logged in with corresponding user rights to perform calibrations.
⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

16.3.1 Calibrating the relative cell constant

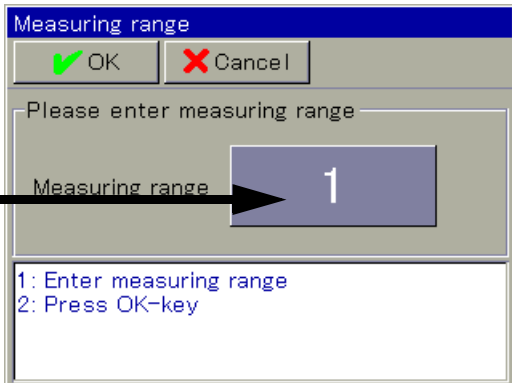
Step	Action
1	<p>Start calibration of the relative cell constant.</p> <p>for conductivity sensors on analysis or universal inputs: Device Menu > Calibration > Select CR Analysis Input or Universal Input > Relative Cell Constant Calibration</p> <p>For CR optional boards, continue with step 2; for universal inputs set to the "conductivity measurement" operation mode, continue with step 3</p> <p>for conductivity sensors with JUMO digiLine electronics: Device Menu > Calibration > Digital Sensor 1 to 6 > Relative Cell Constant Calibration</p>
2	<p>Enter one of the measuring ranges 1 to 4. Confirm the entry by pressing "OK"</p> <p>The calibration values determined apply only to the selected measuring range.</p> <p>Tap button to enter measuring range</p> 

16 Calibrating CR conductivity sensors


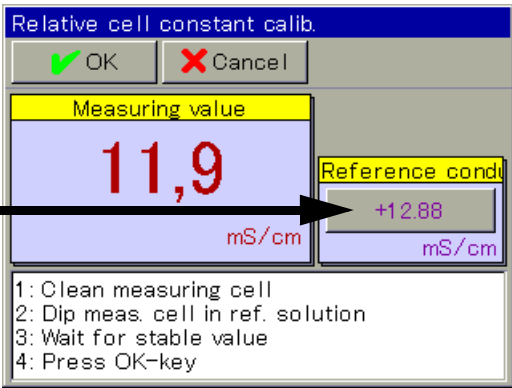
Step	Action
3	<p>Ensure that</p> <ul style="list-style-type: none"> the sensor has been cleaned and is immersed in the test solution, the set reference conductivity matches the conductivity value of the test solution. <p>Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".</p> <p>The preset reference conductivity can be changed here manually if necessary.</p> <div> <div> <p>tap button to change reference conductivity field</p> </div>  </div>
4	<p>A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK".</p> <p>Failed calibrations are canceled at this point and discarded.</p>
5	<p>Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook.</p> <p>Press "No" to discard the results.</p>

16 Calibrating CR conductivity sensors

16.3.2 Calibrating the temperature coefficient


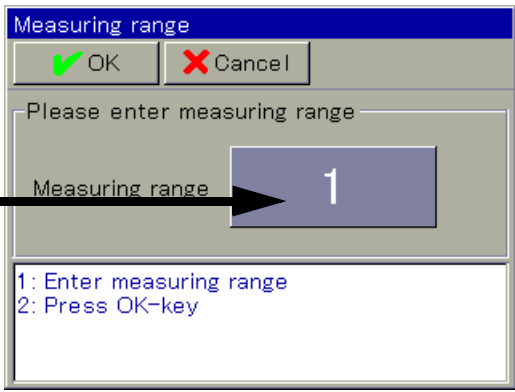
Step	Action
1	<p>Start calibration of the temperature coefficient.</p> <p>for conductivity sensors on analysis or universal inputs: Device Menu > Calibration > Select CR Analysis Input or Universal Input > TC calibration</p> <p>for conductivity sensors with JUMO digiLine electronics: Device Menu > Calibration > Digital Sensor 1 to 6 > TC Calibration</p>
2	<p>Clean the sensor and immerse it in the sample solution. Ensure that the rel. cell constant is calibrated correctly (if necessary, make a trial measurement with a test solution).</p> <p>For CR optional boards, continue with step 3; for universal inputs set to the "conductivity measurement" operation mode, continue with step 4</p>
3	<p>Enter one of the measuring ranges 1 to 4. Confirm the entry by pressing "OK"</p> <p>The calibration values determined apply only to the selected measuring range.</p> <p>tap button to enter measuring field</p> 

16 Calibrating CR conductivity sensors

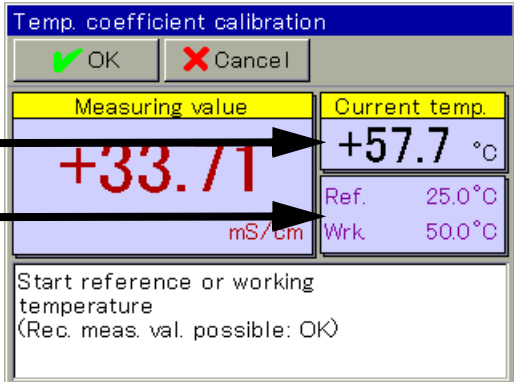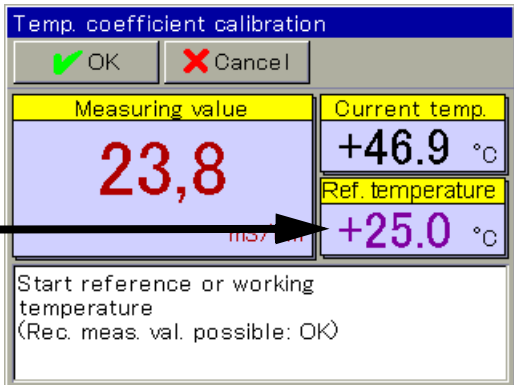Step	Action
4	<ul style="list-style-type: none"> with temperature acquisition <p>A prerequisite is that temperature compensation was specified in the calibration the presets. Bring the temperature of the sample solution to the requested values of the reference and operation temperatures in succession. The order does not matter. Acquisition of the individual values takes place automatically.</p> <p>current temperature value</p>  <p>requested Temperature values</p> <p>Display after acquisition of first value</p>  <p>remaining requested Temperature value</p> without temperature acquisition <p>If temperature compensation was not specified in the calibration presets, you must control acquisition of the value manually. Bring the temperature of the sample solution first to the value of the reference temperature and confirm by pressing "OK". Then proceed in the same manner for the operation temperature.</p>
5	<p>A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.</p>
6	<p>Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.</p>

16 Calibrating CR conductivity sensors

16.3.3 Calibrating the TC curve for JUMO digiLine CR

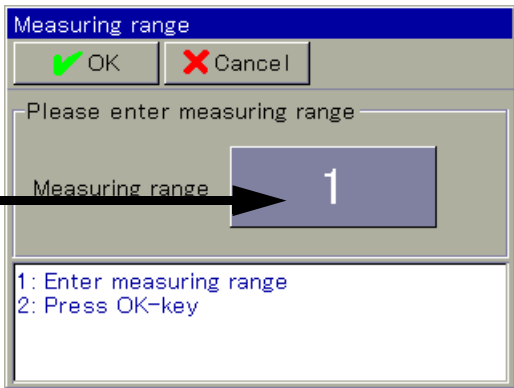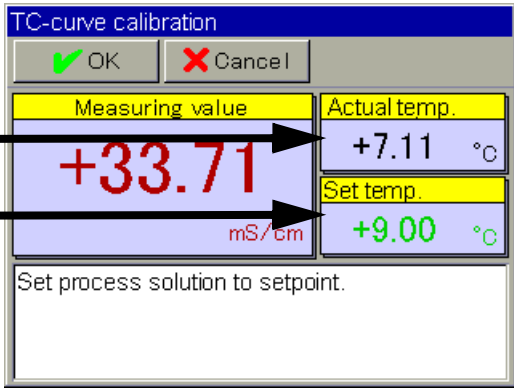Step	Action
1	Start the desired calibration of the TC curve for JUMO digiLine CR for conductivity sensors with JUMO digiLine electronics: Device Menu > Calibration > Digital Sensor 1 to 6 > TC Curve
2	Clean the sensor and immerse it in the sample solution. Ensure that the rel. cell constant is calibrated correctly (if necessary, make a trial measurement with a test solution). for CR optional boards, continue with step 3; for universal inputs set to the "conductivity measurement" operating mode, continue with step 4
3	Enter one of the measuring ranges 1 to 4. Confirm the entry by pressing "OK" The calibration values determined apply only to the selected measuring range. tap button to enter measuring field 
4	Bring the temperature of the sample solution to the requested set-points in succession. Seven temperatures are requested. current temperature value requested Temperature values 
5	A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
6	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.

16 Calibrating CR conductivity sensors

17 Calibrating Ci conductivity sensors

17.1 Notes



WARNING!

During the calibration, the relays and analog output signals assume the states configured for the calibration! The response of the output signals is set for each output in its "Response at calibration" configuration point.

⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161

17.2 General information

The calibration of Ci sensors is based on measurements in test solutions with a defined electrolytic conductivity. Since the electrolytic conductivity of liquids is temperature dependent, the temperature of the test solution must be sensed. This requires either manual entry or measurement with the aid of a temperature sensor.

17.2.1 Calibration methods for Ci conductivity sensors (inductive)

Rel. cell constant

The deviation from the nominal cell constant of a Ci sensor is described by the relative cell constant. The rel. cell constant is determined by making a measurement in a test solution with a defined conductivity.

Temperature coefficient

The temperature coefficient is a measure of the temperature dependence of the electrolytic conductivity of a liquid. It is used to compensate for the effect of temperature when measuring the electrolytic conductivity. When performing a temperature-compensated conductivity measurement, the conductivity value measured is always indicated with reference to the fixed reference temperature. With the aid of the temperature coefficient, the value of the electrolytic conductivity displayed at the reference temperature is calculated from the current measured values of conductivity and temperature of the liquid.

The reference temperature is set in the configuration of the individual Ci analysis input or digital input with JUMO digiLine Ci.

⇒ Chapter 10.5.6 "CR/Ci analysis inputs (conductive/inductive conductivity)", page 156

⇒ Chapter "Only for sensors with JUMO digiLine CR/Ci", page 173

The temperature coefficient is determined from 2 measurements in a test solution at different temperatures (reference and operation temp.).



NOTE


If the temperature coefficient of a sample solution is known, it can be entered directly.

⇒ Chapter 12.2.1 "General procedure for calibration", page 233

17 Calibrating Ci conductivity sensors

TC curve for conductivity sensors on analysis or universal inputs (for nonlinear temperature coefficients)

If the conductivity of a liquid whose temperature coefficient changes with temperature has to be measured, this method can determine 5 temperature coefficients for 5 temperature intervals. In this way, it is possible to determine a good approximation of the temperature coefficient curve. While the operator brings the sample solution to the temperature values requested by the device, the device determines the temperature coefficient for each interval. This requires installation of a temperature sensor that the device can use to sense the temperature of the sample solution.

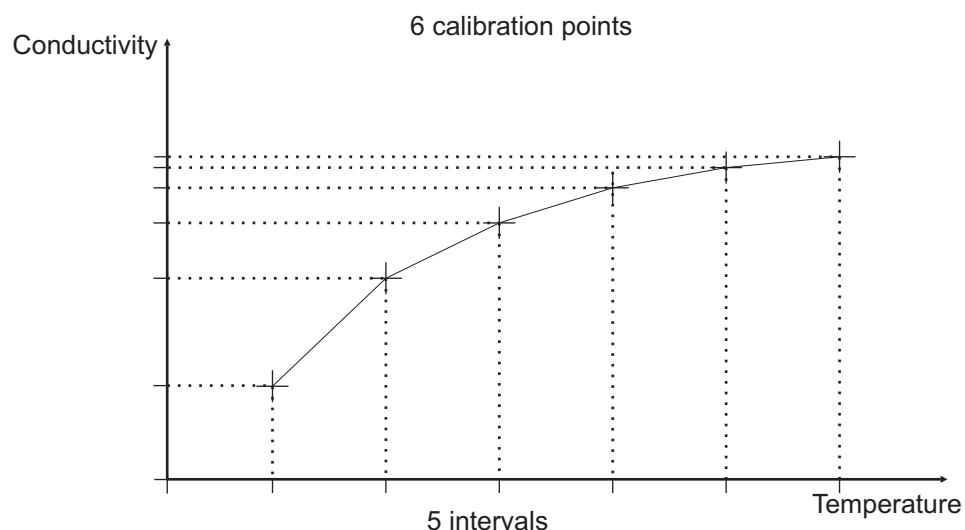


17 Calibrating Ci conductivity sensors

TC curve for JUMO digiLine Ci (for nonlinear temperature coefficients)

If the conductivity of a liquid whose temperature coefficient changes with temperature has to be measured, this method can determine 6 temperature coefficients for 6 temperature intervals. In this way, it is possible to determine a good approximation of the temperature coefficient curve. While the operator brings the sample solution to the temperature values requested by the device, the device determines the temperature coefficient for each interval. This requires installation of a temperature sensor that the device can use to sense the temperature of the sample solution. The series of temperature values consists of 7 values in total:

- Starting temperature and end temperature of the TC curve (see Chapter "Calibration presets for calibrating the TC curve", page 269)
- Reference temp. (see Chapter 10.11.2 "Configuration of digital sensors", page 170)
- 4 additional temperature values between the "starting temperature and end temperature of the TC curve"

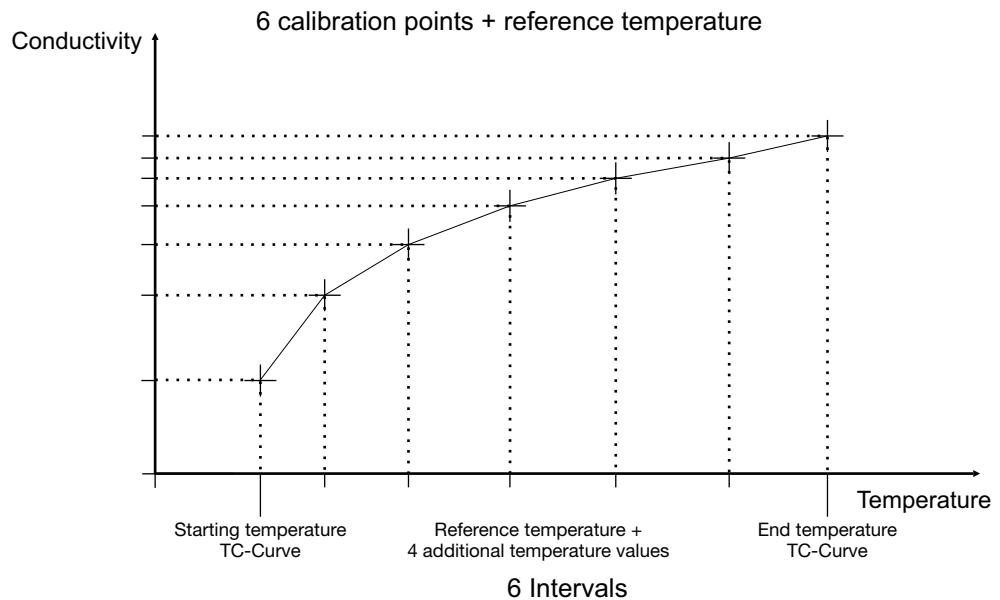

17 Calibrating Ci conductivity sensors

17.2.2 Calibration presets for Ci conductivity sensors

Before you can perform a calibration, you must first enter the necessary calibration default settings. The possible settings for the Ci calibration are described in the following.

Open the calibration default settings:

for conductivity sensors on analysis inputs:

Device Menu > Calibration > Select Ci Analysis Input > Calibration Default Settings

for conductivity sensors with JUMO digiLine electronics:

Device Menu > Calibration > Digital Sensor 1 to 6 > Calibration Default Settings



NOTE

The "Calibration default settings" menu appears in the Device menu only if a user with corresponding user rights is logged in.
⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

Sample screen:
Ci calibration presets

The calibration default settings enable the calibration routines to be accessed in the particular calibration menu.
Calibration routines that are not enabled are not visible in the calibration menu.
Additional calibration default settings are explained in the following table.

Calibration presets for calibrating the relative cell constant

Parameter	Possible settings	Explanation
Reference conductivity	0 to 9999 mS/cm	Conductivity of the reference solution

17 Calibrating Ci conductivity sensors

Calibration presets for calibrating the temperature coefficient

Parameter	Possible settings	Explanation
Temperature compensation	Selection from analog selection	Temperature input for automatic acquisition of the test/sample solution temperature during the calibration
Reference temperature	-50 to +150 °C	The conductivities of a sample solution at reference temperature and working temperature are captured during the calibration process. This yields 2 value pairs (temperature/conductivity). These value pairs provide the basis for calculating the temperature coefficient. The operation temp. must differ from the reference temperature by at least 5 °C.
Operation temp.	-50 to +150 °C	

Calibration presets for calibrating the TC curve

Parameter	Possible settings	Explanation
Compensation	Fixed compensation temperature, Temperature input, Interface	<p>only for JUMO digiLine Ci</p> <p>Fixed compensation temperature: Compensation with a fixed temperature value that is entered in the configuration item "Compensation temperature".</p> <p>Temperature input: The integrated temperature probe of the conductivity sensor supplies the compensation temperature.</p> <p>Interface: The AQUIS touch S transmits the compensation temperature to the sensor electronics via the interface. The source of the compensation temperature is set in the configuration point "Compensation temperature".</p>
Temperature compensation	Selection from analog selection	Temperature input for automatic acquisition of the test/sample solution temperature during the calibration
Starting temperature	-50 to +250 °C	The starting and final temperatures of the range for which a temperature coefficient curve is to be determined. The starting temperature must be at least 20 °C lower than the final temperature. The reference temperature for the measurement input must lie between the starting and final temperatures, and differ from the starting and final temperatures by at least 2 °C.
Final temperature	-50 to +250 °C	



NOTE

Calibration of the TC curve is possible only with automatic temperature acquisition.

17 Calibrating Ci conductivity sensors

17 Calibrating Ci conductivity sensors

17.3 Ci calibration routines



NOTE

Conductivity measuring inputs can be configured with measuring range change-over. Accordingly, calibrations must be performed for all "accessible measuring ranges".



NOTE

You must be logged in with corresponding user rights to perform calibrations.
⇒ Chapter 8.2.1 "Log-on/Log-out", page 97



NOTE



Analysis inputs for inductive conductivity measurements (Ci) must undergo a Ci base calibration in the course of commissioning. Subsequent calibration is not possible without this initial Ci base calibration.

⇒ Chapter 11.3 "Ci base calibration", page 227

17.3.1 Calibrating the relative cell constant


Step	Action
1	<p>Start calibration of the relative cell constant.</p> <p>for conductivity sensors on analysis or universal inputs: Device Menu > Calibration > Select Ci Analysis Input or Universal Input > Relative Cell Constant Calibration</p> <p>For Ci optional boards, continue with step 2; for universal inputs set to the "conductivity measurement" operation mode, continue with step 3</p> <p>for conductivity sensors with JUMO digiLine electronics: Device Menu > Calibration > Digital Sensor 1 to 6 > Relative Cell Constant Calibration</p>

17 Calibrating Ci conductivity sensors

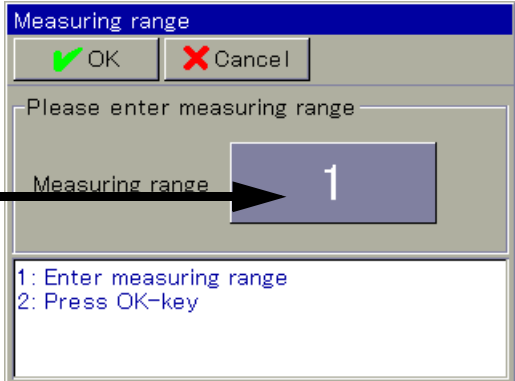
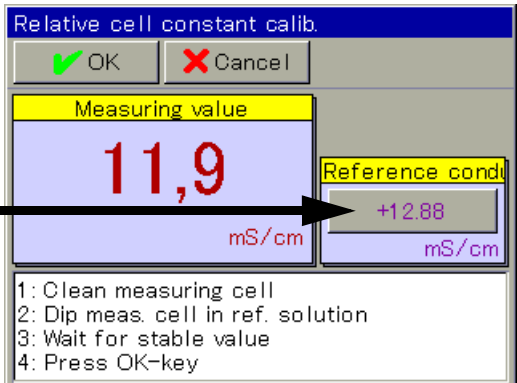
Step	Action
2	<p>Enter one of the measuring ranges 1 to 4. Confirm the entry by pressing "OK"</p> <p>The calibration values determined apply only to the selected measuring range.</p> <p>tap button to enter measuring field</p> 
3	<p>Ensure that</p> <ul style="list-style-type: none"> the sensor has been cleaned and is immersed in the test solution, the set reference conductivity matches the conductivity value of the test solution. <p>Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".</p> <p>The preset reference conductivity can be changed here manually if necessary.</p> <p>tap button to change reference conductivity field</p> 
4	<p>A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK".</p> <p>Failed calibrations are canceled at this point and discarded.</p>
5	<p>Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook.</p> <p>Press "No" to discard the results.</p>

17 Calibrating Ci conductivity sensors

17.3.2 Calibrating the temperature coefficient (TC)

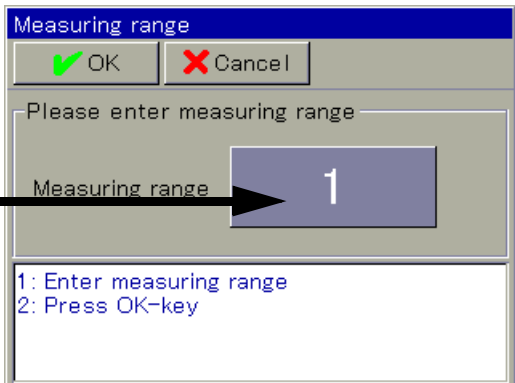
Step	Action
1	<p>Start calibration of the temperature coefficient.</p> <p>for conductivity sensors on analysis or universal inputs: Device menu > Calibration > Select Ci analysis input or universal input > TC calibration</p> <p>for conductivity sensors with JUMO digiLine electronics: Device Menu > Calibration > Digital Sensor 1 to 6 > TC Calibration</p>
2	<p>Clean the sensor and immerse it in the sample solution. Ensure that the rel. cell constant is calibrated correctly (if necessary, make a trial measurement with a test solution).</p> <p>for Ci optional boards, continue with step 3; for universal inputs set to the "conductivity measurement" operating mode, continue with step 4</p>
3	<p>Enter one of the measuring ranges 1 to 4. Confirm the entry by pressing "OK"</p> <p>The calibration values determined apply only to the selected measuring range.</p> <p>tap button to enter measuring field</p> 

17 Calibrating Ci conductivity sensors

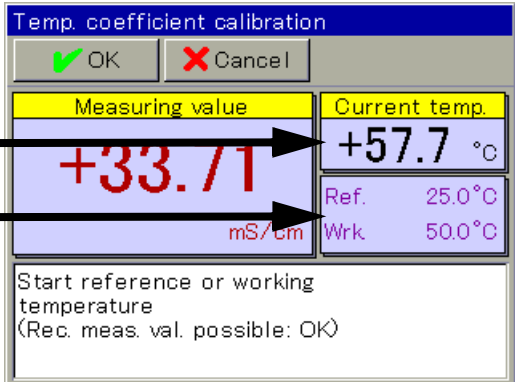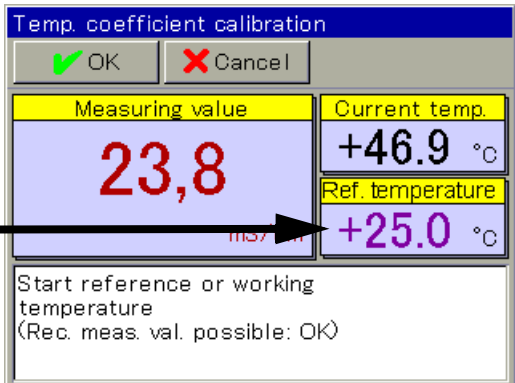
Step	Action
4	<ul style="list-style-type: none"> with temperature acquisition <p>A prerequisite is that temperature compensation was specified in the calibration the presets. Bring the temperature of the sample solution to the requested values of the reference and operation temperatures in succession. The order does not matter. Acquisition of the individual values takes place automatically.</p> <p>current temperature value</p>  <p>requested Temperature values</p> <p>Display after acquisition of first value</p>  <p>remaining requested Temperature value</p> without temperature acquisition <p>If temperature compensation was not specified in the calibration presets, you must control acquisition of the value manually. Bring the temperature of the sample solution first to the value of the reference temperature and confirm by pressing "OK". Then proceed in the same manner for the operation temperature.</p>
5	<p>A Protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.</p>
6	<p>Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.</p>

17 Calibrating Ci conductivity sensors

17.3.3 Calibrating the TC curve

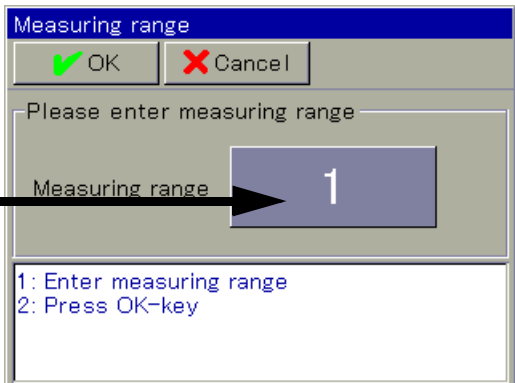Step	Action
1	<p>Start the desired calibration of the TC curve.</p> <p>for conductivity sensors on analysis or universal inputs: Device Menu > Calibration > Select Ci Analysis Input or Universal Input > TC Curve</p> <p>for conductivity sensors with JUMO digiLine electronics: Device Menu > Calibration > Digital Sensor 1 to 6 > TC Curve</p>
2	<p>Clean the sensor and immerse it in the sample solution. Ensure that the rel. cell constant is calibrated correctly (if necessary, make a trial measurement with a test solution).</p> <p>for Ci optional boards, continue with step 3; for universal inputs set to the "conductivity measurement" operating mode, continue with step 4</p>
3	<p>Enter one of the measuring ranges 1 to 4.. Confirm the entry by pressing "OK"</p> <p>The calibration values determined apply only to the selected measuring range.</p> <p>tap button to enter measuring field</p> 

17 Calibrating Ci conductivity sensors

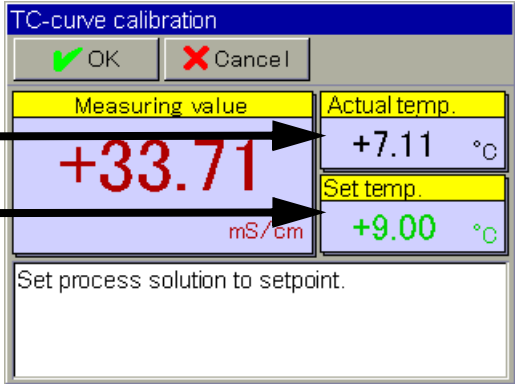Step	Action
4	<p>Bring the temperature of the sample solution to the requested set-points in succession. The temperatures for the individual calibration points will be requested:</p> <ul style="list-style-type: none"> • Six temperatures for Ci analysis inputs or universal input • Seven temperatures for JUMO digiLine Ci <div style="display: flex; align-items: center;"> <div style="margin-right: 20px;"> <p>current temperature value</p> <hr style="border: 1px solid black;"/> <p>requested Temperature values</p> </div>  </div>
5	<p>A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.</p>
6	<p>Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.</p>

18 Calibrating universal inputs

18.1 Important information



WARNING!

During the calibration, the relays and analog output signals assume the states configured for the calibration! The response of the output signals is set for each output in its "Response at calibration" configuration point.

⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161

18.2 General information

18.2.1 Calibration methods for universal inputs

Universal inputs can be configured with various operation modes for a number of different process variables (see table below).

Detailed information on the possible configurations:

⇒ Chapter 10.5.2 "Universal inputs of base unit and optional boards", page 149

Appropriate calibration routines for each operation mode of a universal input can be enabled in the calibration default settings.

The following table lists the availability of calibration routines for the individual operation modes.

Universal input Operation modes Calibration routine	linear scaling	Temp. measurement	pH value measurement	Conductivity measurement	free chlorine, pH/T-compensated
Zero-point calibration	X		X		
Slope calibration	X				X
Two-point Calibration	X		X		
Rel. cell constant				X	
Temperature coefficient				X	
TC curve				X	

Zero-point calibration

This calibration method is used to determine the zero point on the measurement characteristic curve. The slope is retained.

A test solution with a defined value of the respective measurand is needed as a reference.

Slope calibration

This calibration method is used to determine the slope of the measurement characteristic curve. The zero point is retained.

A test solution with a defined value of the respective measurand is needed as a reference.

18 Calibrating universal inputs

Two-point Calibration

The zero point and slope of the measuring characteristic curve are determined with the aid of 2 measurings of 2 different reference solutions.

Two test solutions with defined values of the respective measurand are needed as a references.

Calibrating rel. cell constants, temperature coefficients, and TC curves

The calibration routines for conductivity measuring with the universal input correspond to those for the Ci calibration.

⇒ Chapter 17 "Calibrating Ci conductivity sensors", page 265

18 Calibrating universal inputs

18.2.2 Universal inputs calibration default settings

Which calibration default settings are available depends on the configuration settings of the universal input.

Open the calibration default settings:

Device menu > Calibration > Select Universal Input >
Calibration default settings

Calibration default settings for the individual operation modes


- **linear scaling**

The calibration default settings enable the calibration routines to be accessed in the particular calibration menu.

Calibration routines that are not enabled are not visible in the calibration menu. The "linear scaling" operation mode permits adjustment of the zero point, slope, and two-point calibration.

Sample screen:

Universal input calibration default settings in the "linear scaling" operation mode

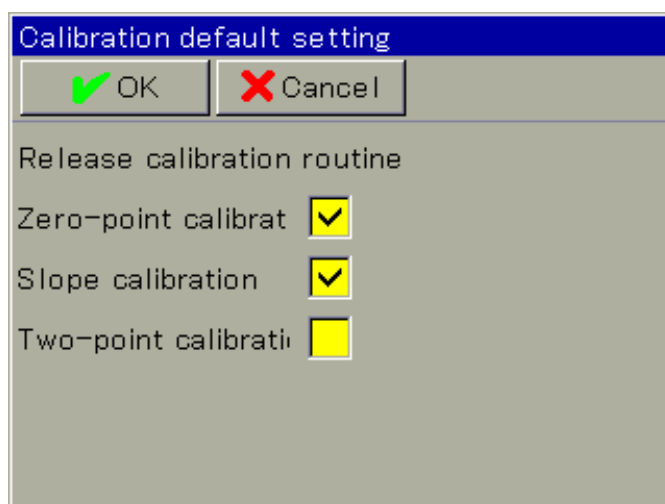

- **pH value measurement**

The calibration default settings correspond to those for the zero-point and two-point calibration for pH/redox/NH₃ analysis inputs.

⇒ "pH calibration default settings", page 241

- **Conductivity measurement**

The calibration default settings correspond to those for the Ci calibration.


⇒ Chapter 17.2.2 "Calibration presets for Ci conductivity sensors", page 268

18 Calibrating universal inputs

- **free chlorine, pH/Temp.-compensated**

In the universal inputs calibration default settings for the "free chlorine, pH/T-compensated" operation mode, the slope calibration is enabled and preconfigured as the only available calibration routine.

Sample screen:
Universal input calibration default settings in the "free chlorine, pH/T-compensated" operation mode

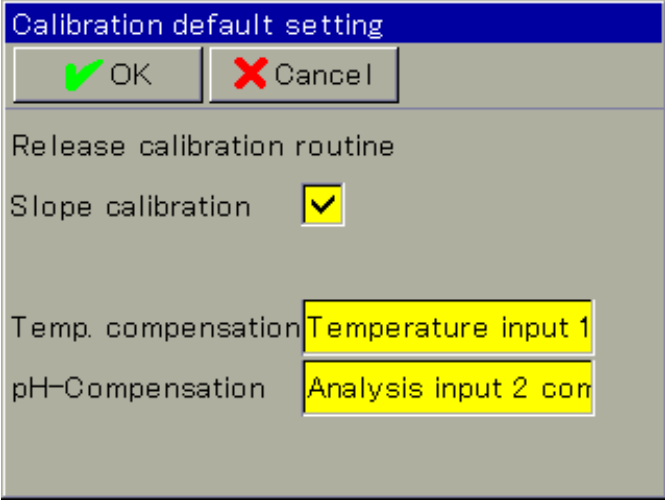

Additional calibration default settings for calibration of chlorine sensors are explained in the following table.

Parameter	Possible settings	Explanation
Temperature compensation	Selection from Analog selection	Temperature input for automatic acquisition of the test/sample solution temperature during the calibration
pH compensation source	Selection from Analog selection	pH measurement input for automatic sensing of the test/sample solution pH value during the calibration



NOTE!

The "Calibration default settings" menu appears in the Device menu only if a user with corresponding user rights is logged in.
⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

18.3 Universal input calibration routines

This chapter explains the universal inputs calibration routines for the "linear scaling" and "free chlorine, pH/T-compensated" operation modes.

The explanations in the corresponding calibration chapters for the "pH value measurement" and "Conductivity measurement" operation modes apply, except that three-point calibration for pH sensors is not available for universal inputs (see Chapter 18.2.1 "Calibration methods for universal inputs", page 277).

⇒ Chapter 13.3 "pH Calibration routines", page 243

⇒ Chapter 17.3 "Ci calibration routines", page 271





NOTE!

You must be logged in with corresponding user rights to perform calibrations.

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97



18 Calibrating universal inputs

18.3.1 Zero point/slope calibration (linear scaling)

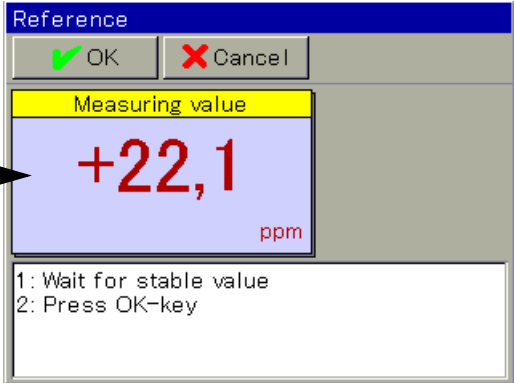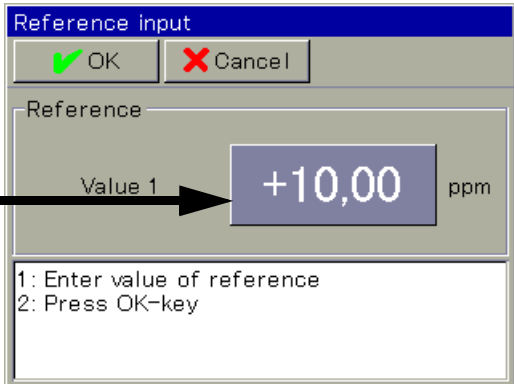Step	Action
1	<p>Start the desired Calibration routine.</p> <p>Device menu > Calibration > Select Universal Input > Zero-point calibration</p>
2	<p>Clean the sensor and immerse it in the test solution. Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".</p> <p>The measuring value is based on previous calibration values</p> 
3	<p>Enter the reference value of the test solution. Confirm by pressing "OK"</p> <p>Tap button to enter reference value of test solution</p> 
4	<p>A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.</p>
5	<p>Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.</p>

18 Calibrating universal inputs



18.3.2 Two-point calibration (linear scaling)

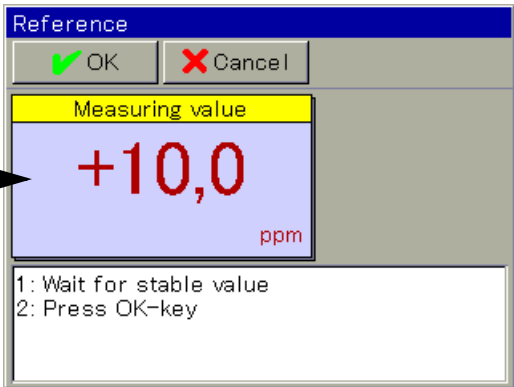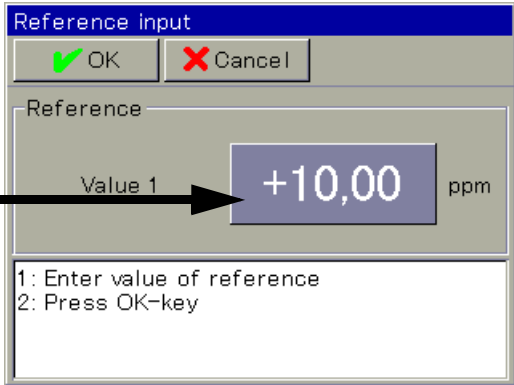Step	Action
1	<p>Start the desired Calibration routine.</p> <p>Device menu > Calibration > Select Universal Input > Two-point calibration</p>
2	<p>Clean the sensor and immerse it in the first test solution. Wait until the measuring value displayed stabilizes and then confirm the result of the measurement by pressing "OK".</p> <p>Measuring value based on previous calibration values</p> 
3	<p>Enter the reference value of the first test solution.</p> <p>Tap button to enter reference value of test solution</p> 
4	<p>Clean the sensor and immerse it in the second reference solution. Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".</p>
5	<p>As in step 3, enter the reference value of the second test solution. Confirm by pressing "OK".</p>
6	<p>A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.</p>
7	<p>Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.</p>

18 Calibrating universal inputs

18 Calibrating universal inputs

18.3.3 Slope calibration (free chlorine, pH/Temp.-compensated)

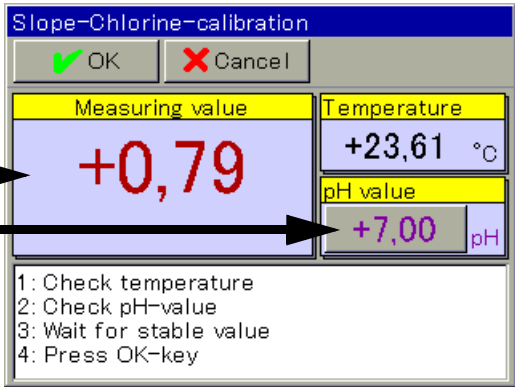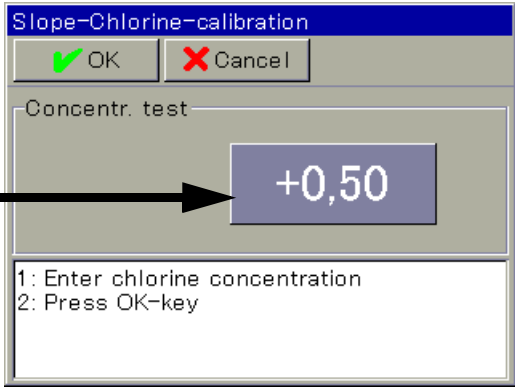Step	Action
1	<p>Start the slope calibration.</p> <p>Device menu > Calibration > Select Universal Input > Slope Calibration</p>
2	Clean the sensor and immerse it in the test solution.
3	<p>Check the displayed values for the pH value and temperature. Automatic sensing can be configured in the calibration default settings for both measurands independently of one another. With automatic acquisition, the particular influencing variable is only displayed and can no longer be changed here. Without automatic acquisition, the particular influencing variable must be entered manually here.</p> <p>Wait until the measured value displayed stabilizes and then check the pH value displayed. Then confirm by pressing "OK".</p> <p>Example with temperature acquisition and without pH value acquisition</p> <div> <p>Measuring value based on previous calibration values</p> <p>Tap button to enter pH value of test solution</p>  </div>
4	<p>Enter the concentration value of the test solution. Confirm by pressing "OK"</p> <div> <p>Tap button to enter chlorine concentration</p>  </div>

18 Calibrating universal inputs

Step	Action
5	A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
6	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.

19 Calibrating O-DO sensors

19.1 Notes



WARNING!

During the calibration, the relays and analog output signals assume the states configured for the calibration! The response of the output signals is set for each output in its "Response at calibration" configuration point.

⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161

19.2 General information

The sensor is calibrated ex works, meaning that no calibration is required before initial startup. If the measured values appear implausible during operation, the sensor should be calibrated. The various calibration methods for JUMO oxygen sensors are described in detail below.



NOTE

JUMO digital sensors can be calibrated on both the JUMO AQUIS touch S and on the PC using the JUMO DSM software. Further information in this regard can be found in the operating manual of the sensor type.

Before starting the calibration processes, make sure the environmental influences are stable and give your calibration setup sufficient time to reach a stable physical and chemical state. To ensure a successful calibration, the calibration specimen should therefore be kept at room temperature in the open test tube for 30 minutes before starting the process. This creates an equilibrium in the gas exchange between calibration specimen and ambient air. Avoid disturbances in the immediate vicinity of the calibration setup, such as direct sunlight, draughts, etc.



NOTE

The sensor needs a warm-up time of 10 to 15 mins. after being switching on. Measurements can be taken during this phase. For an optimal calibration, however, the process should not be started until the warm-up time has lapsed.

19 Calibrating O-DO sensors

19.2.1 Calibration methods for O-DO sensors

Zero-point calibration with JUMO digiLine O-DO S10

This calibration method is used to determine the oxygen saturation zero point on the measurement characteristic curve. The slope is retained.

An oxygen-free medium is required as a reference. The zero point calibration is commonly carried out in an oxygen-free medium of water treated with sodium sulfite (sodium sulfite concentration < 2 %).

Under laboratory conditions, an end value calibration can also be carried out using nitrogen gas.

End value calibration

With end value calibration, the slope of the measurement characteristic line is calibrated beyond the defined state of 100 % oxygen saturation. This state can in principle be achieved in two ways:


- By positioning the sensor in water vapor-saturated air (for example, directly over a water surface).
- By positioning the sensor in air-saturated water (air is directed through water until the water is saturated with it).



NOTE

As the manufacturing of air-saturated water requires a high level of effort and is difficult to reproduce, the easier process of calibration in water vapor-saturated air is recommended for the operational calibration.

Positioning the sensor in the water vapor-saturated air

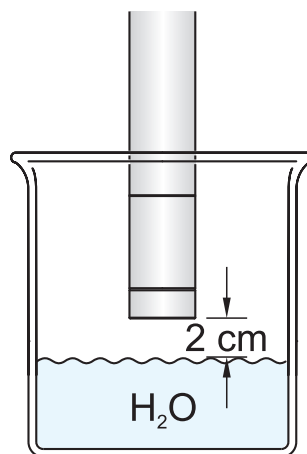

To achieve successful calibration, the following points must be taken into account:

- The sensor membrane must be kept dry during the calibration process. Drops of water adhering to the sensor membrane could distort the measurement result.
- The air pressure and temperature must remain constant during the calibration.

19 Calibrating O-DO sensors

Two-point calibration for JUMO ecoLine O-DO

With two-point calibration, the zero point and slope of the sensor are calibrated. This calibration method offers the greatest possible level of accuracy and is particularly recommended for measurements of small oxygen concentrations.

19 Calibrating O-DO sensors

19.2.2 Calibration default settings for O-DO sensors

Before you can perform a calibration, you must first enter the necessary calibration default settings. The possible settings for the O-DO calibration are described in the following.

Open the calibration default settings:
Device Menu > Calibration > Digital Sensor 1 to 6 >
Calibration Default Settings



NOTE

The "Calibration default settings" menu appears in the Device menu only if a user with corresponding user rights is logged in. The "Calibration default settings" menu for a digital sensor is visible for the digital sensor concerned only when it is linked.

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

⇒ Chapter 8.2.7 "Digital sensors", page 103

Sample screen:
Calibration default settings
for the
JUMO digiLine O-DO S10

Sample screen:
Calibration default settings
for the JUMO ecoLine O-
DO

19 Calibrating O-DO sensors

O-DO calibration default settings

The calibration default settings enable the calibration routines to be accessed in the particular calibration menu.

Calibration routines that are not enabled are not visible in the calibration menu. Additional calibration default settings, which are available for the **JUMO eco-Line O-DO** as well, are explained in the following table.

Parameter	Possible settings	Explanation
Compensation	Fixed compensation temperature Temperature input Interface	Fixed compensation temperature: Compensation with a fixed temperature value that is entered in the configuration item "Compensation temperature". Temperature input: The integrated temperature probe of the O-DO sensor supplies the compensation temperature. Interface: The AQUIS touch S transmits the compensation temperature to the sensor electronics via the interface. The source of the compensation temperature is set in the configuration point "Compensation temperature".
Temperature compensation	Selection from Analog selection	Temperature input for automatic acquisition of the test/sample solution temperature during the calibration

19 Calibrating O-DO sensors

19.3 O-DO calibration routine



NOTE

For the JUMO digiLine O-DO S10, the compensation settings from the configuration also apply during calibration. Before calibration, it is necessary to check whether these settings are valid for the conditions during the calibrations. It may be necessary to adjust the configuration for the calibration process and reset it to the process conditions when the calibration is complete.

The sensor measures the oxygen partial pressure as the process variable and converts it internally into the set unit. Therefore, a unit different to the one used for measurement mode in the process can be used during the calibration.

⇒ Chapter "Only for sensors of the JUMO digiLine O-DO S10 types", page 178



NOTE

You must be logged in with corresponding user rights to perform calibrations.

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97



NOTE


Digital sensors need to be linked before they can be calibrated.

⇒ Chapter 8.2.7 "Digital sensors", page 103

19.3.1 Zero-point calibration for JUMO digiLine O-DO S10


Step	Action
1	Prepare a stable calibration setup and an oxygen-free reference specimen with clean water. Place the oxygen sensor in your calibration setup. Make sure that the calibration setup, with the reference specimen, guarantees consistent environmental influences throughout the calibration process. Leave the reference specimen in the open test tube for at least 30 minutes to reach chemical and physical equilibrium.
2	When measured value and temperature are stable, start the zero-point calibration. Device Menu > Calibration > Digital Sensor 1 to 6 > Open Zero-Point Calibration

19 Calibrating O-DO sensors

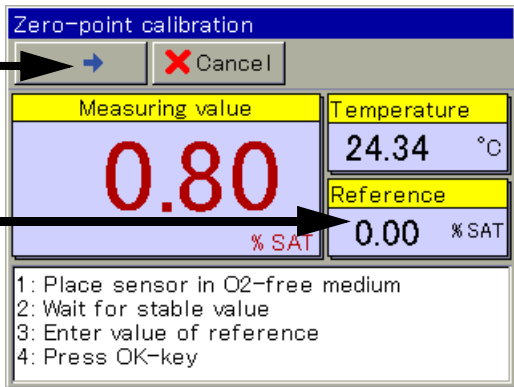Step	Action
3	<p>Wait at least 90 seconds until the "OK" button is active. During the waiting time of 90 seconds, a blue arrow runs through the button. Only then can it be pressed to confirm the calibration.</p> <p>Wait 90 seconds until the "OK" button is active</p> <p>Specified reference value for the oxygen saturation</p> 
4	After the waiting time has elapsed and the measured value display is stable, confirm the result of the measurement by pressing "OK"
5	<p>Successful calibration: If the calibration ends successfully, a protocol summarizing determined calibration values appears. Acknowledge the protocol by pressing "OK". The calibration values determined are applied and enter the calibration in the Calibration logbook. This concludes the calibration process.</p> <p>Calibration error: At this point, failed calibrations lead to an error message. If you want to repeat the calibration, press the "OK" button to return to step 2. Pressing "Cancel" stops the calibration here without a result. The calibration can be repeated up to 4 times within one process by returning to step 2. The calibration must then be ended without a result by pressing "Cancel".</p>



19 Calibrating O-DO sensors

19.3.2 End value calibration for JUMO digiLine O-DO S10

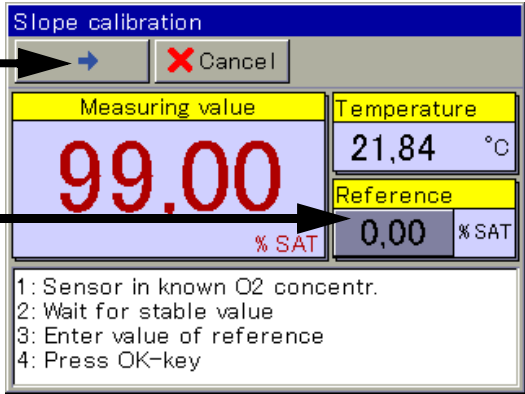Step	Action
1	Prepare a stable calibration setup and a reference specimen with a known oxygen concentrate with clean water. Place the oxygen sensor in the calibration setup. Make sure that the calibration setup, with the reference specimen, guarantees consistent environmental influences throughout the calibration process. Leave the reference specimen in the open test tube for at least 30 minutes to reach chemical and physical equilibrium.
2	Start the end value calibration. Go to Device Menu > Calibration > Digital Sensor 1 to 6 > End Value Calibration
3	<p>Enter the known oxygen concentration of your calibration sample as the reference value. If you leave the reference value at the value 0 %, the calibration is automatically carried out with the reference value 100 %.</p> <p>Wait at least 90 seconds until the "OK" button is active. During the waiting time of 90 seconds a blue arrow runs through the button. Only then can it be pressed to confirm the calibration.</p> <div> <p>Wait 90 seconds until the "OK" button is active</p> <p>Tap to enter the reference value of the oxygen saturation</p>  </div>
4	After the waiting time has elapsed and the measured value display is stable, confirm the result of the measurement by pressing "OK"
5	<p>Successful calibration: If the calibration ends successfully, a protocol summarizing determined calibration values appears. Acknowledge the protocol by pressing "OK". The calibration values determined are applied and enter the calibration in the Calibration logbook. This concludes the calibration process.</p> <p>Calibration error: At this point, failed calibrations lead to an error message. If you want to repeat the calibration, press the "OK" button to return to step 2. Pressing "Cancel" stops the calibration here without a result. The calibration can be repeated up to 4 times within one process by returning to step 2. The calibration must then be ended without a result by pressing "Cancel".</p>

19 Calibrating O-DO sensors

19.3.3 End value calibration for JUMO ecoLine O-DO

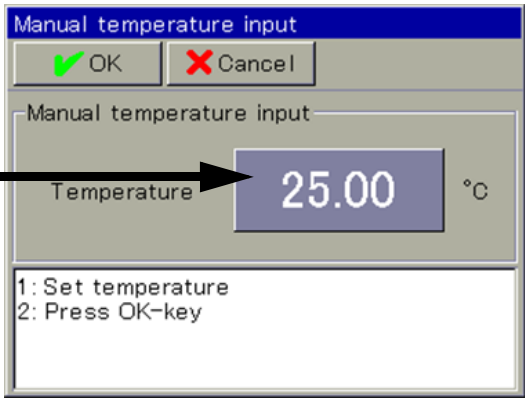
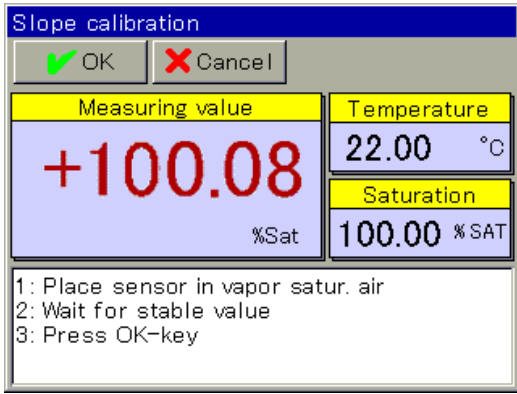
Step	Action
1	<p>Start the end value calibration.</p> <p>Device Menu > Calibration > Digital Sensor 1 to 6 > End Value Calibration</p>
2	<p>If temperature compensation was not specified in the calibration default settings, enter the temperature of the air-saturated water or the water vapor-saturated air here manually. If temperature compensation was specified, the temperature is determined automatically.</p> <p>Tap button to enter temperature</p> 
3	<p>Immerse the sensor in air-saturated water or position it in water vapor-saturated air (see Chapter 19.2.1 "Calibration methods for O-DO sensors", page 288). If you use water vapor-saturated air, ensure constant air pressure, constant temperature and that no water drops adhere to the membrane during the calibration procedure. Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".</p>
4	<p>The device displays the current measured value of oxygen saturation and the test material temperature. The setpoint value for oxygen saturation (100 % sat.) is set automatically by the device. The user does not need to make any entries here.</p> 
5	<p>Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK"</p>

19 Calibrating O-DO sensors


Step	Action
6	A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
7	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.

19 Calibrating O-DO sensors

19.3.4 Two-point calibration for JUMO ecoLine O-DO

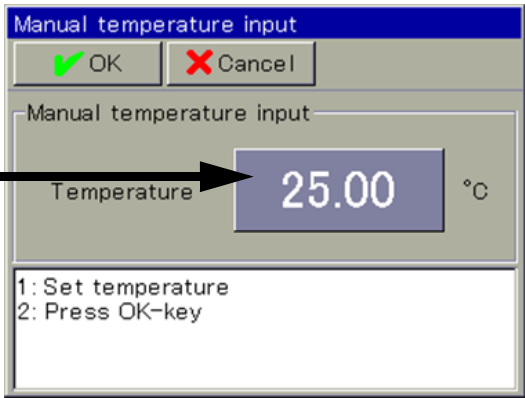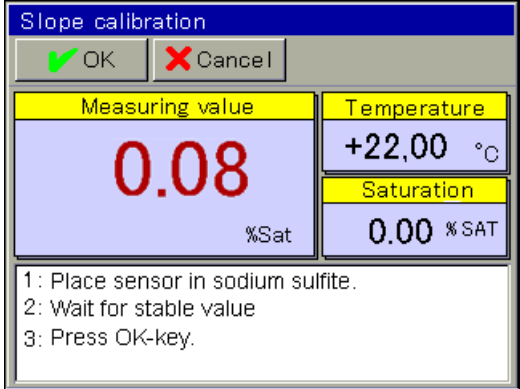Step	Action
1	<p>Start the two-point calibration.</p> <p>Device Menu > Calibration > Digital Sensor 1 to 6 > Two-point Calibration</p>
2	To determine the zero point, prepare a water sulfite solution (sulfite concentration < 2 %).
3	<p>If temperature compensation was not specified in the calibration default settings, enter the temperature of the test materials used here manually.</p> <p>If temperature compensation was specified, the temperature is determined automatically.</p> <p>Tap button to enter temperature</p> 
4	Immerse the sensor in the water sulfite solution. Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".
5	<p>The device displays the current measured value of oxygen saturation and the test material temperature. The setpoint value for oxygen saturation (0 % sat.) is set automatically by the device. The user does not need to make any entries here.</p> 
6	Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK"

19 Calibrating O-DO sensors

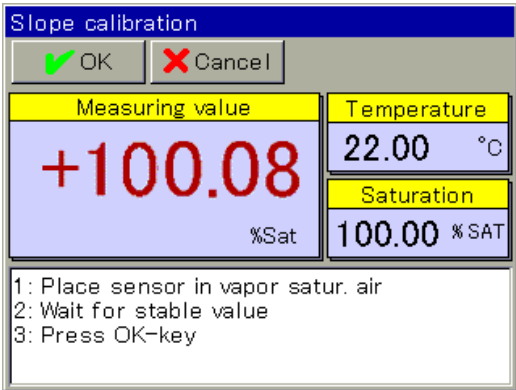Step	Action
7	Immerse the sensor in air-saturated water or position it in water vapor-saturated air (see Chapter 19.2.1 "Calibration methods for O-DO sensors", page 288). If you use water vapor-saturated air, ensure constant air pressure, constant temperature and that no water drops adhere to the membrane during the calibration procedure. Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK".
8	<p>The device displays the current measured value of oxygen saturation and the test material temperature. The setpoint value for oxygen saturation (100 % sat.) is set automatically by the device. The user does not need to make any entries here.</p> 
9	Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK"
10	A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
11	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.

20 Calibrating turbidity sensors

20.1 Important information



WARNING!

During the calibration, the relays and analog output signals assume the states configured for the calibration! The response of the output signals is set for each output in its "Response at calibration" configuration point.

⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161

20.2 General information

Turbidity sensors are calibrated by means of two-point calibration in distilled water and formazine reference solution. The sensor is calibrated ex works, meaning that no calibration is required before initial startup. If the measured values are seen to drift during operation, the sensor should be calibrated.

Preparatory cleaning

Rinse off the sensor with clear water. Organic deposits left on the sensor optics, such as a biofilm or silt, may cause measurement errors. These deposits should be removed carefully with warm soapy water and a soft sponge. Never use abrasive agents (e.g. scouring sponge)!

Calcium deposits can be removed by submersing the sensors in a diluted hydrochloric acid solution (**concentration max. 5 %**) for several minutes.

20.2.1 Calibration methods for turbidity sensors

Two-point calibration

With two-point calibration, the zero point and slope of the sensor are calibrated. Distilled water is used as the test material for determining the zero point. Formazine is used as the test material for determining the second reference point. The zero point and calculated percent deviation from the ideal slope are saved as reference values.

20 Calibrating turbidity sensors

20.2.2 Calibration presets for turbidity sensors

Before you can perform a calibration, you must first enter the necessary calibration default settings. The possible settings for the calibration of turbidity sensors are described in the following.

Open the calibration default settings:

Device Menu > Calibration > Digital Sensor 1 to 6 >

Calibration Default Settings



NOTE!

The "Calibration default settings" menu appears in the Device menu only if a user with corresponding user rights is logged in. The "Calibration default settings" menu for a digital sensor is visible for the digital sensor concerned only when it is linked.

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

⇒ Chapter 8.2.7 "Digital sensors", page 103

The calibration default settings enable the calibration routines to be accessed in the particular calibration menu.

Calibration routines that are not enabled are not visible in the calibration menu. You can enable the two-point calibration for turbidity sensors.

20 Calibrating turbidity sensors

20.3 Calibration routines for turbidity sensors

**NOTE!**

Turbidity sensors can be configured with automatic selection of the measuring range. Accordingly, calibrations must be performed for all "accessible measuring ranges".


**NOTE!**

You must be logged in with corresponding user rights to perform calibrations.
⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

**NOTE!**

Digital sensors need to be linked before they can be calibrated.
⇒ Chapter 8.2.7 "Digital sensors", page 103

20.3.1 Two-point calibration

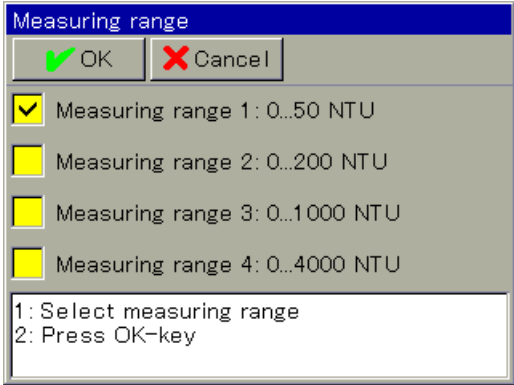Step	Action
1	Start the two-point calibration. Device Menu > Calibration > Digital Sensor 1 to 6 > Two-Point Calibration
2	Enter one of the measuring ranges 1 to 4. Confirm the entry by pressing "OK" 
3	Clean the sensor and immerse it in the distilled water.
4	The device displays the current measured value of the distilled water. The user does not need to make any entries here.
5	Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK"
6	Immerse the sensor in a formazine reference solution. Its turbidity value should be approximately at the middle of the selected measuring range.

20 Calibrating turbidity sensors

Step	Action
7	The device displays the current measured value of the formazine reference solution. Enter the actual turbidity value of the reference solution.
8	Wait until the measured value displayed stabilizes and then confirm the result of the measurement by pressing "OK"
9	A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
10	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.

21 Calibration during disinfection measurements

21.1 Important information

**WARNING!**

During the calibration, the relays and analog output signals assume the states configured for the calibration! The response of the output signals is set for each output in its "Response at calibration" configuration point.

⇒ Chapter 10.6 "Analog outputs of base unit and optional boards", page 161

21.2 General information

JUMO digital sensors for disinfection measurands (chlorine, hydrogen peroxide, peracetic acid, ozone, chlorine dioxide and bromide) are calibrated by means of suitable comparison measurements in the measured value for the sensor type concerned (e.g. DPD method). Be sure to observe the information in the operating manual of the sensor for disinfection measurands with respect to calibration. The concentration values from the comparison measurement are entered in the device during the calibration process.

21 Calibration during disinfection measurements

21.2.1 Calibration methods for disinfection measurand sensors

End value calibration

For end value calibration, the slope of the sensor is calibrated by means of a comparison measurement (e.g. DPD method).

Two-point Calibration

With two-point calibration, the zero point and slope of the sensor are calibrated. This calibration method offers the greatest possible level of accuracy and is particularly recommended for measurements of low concentration values.

21.2.2 Calibration default settings for disinfection measurand sensors

Before you can perform a calibration, you must first enter the necessary calibration default settings. The possible settings for disinfection measurand sensors are described in the following.

Open the calibration default settings:

Device Menu > Calibration > Digital Sensor 1 to 6 >
Calibration Default Settings



NOTE!

The "Calibration default settings" menu appears in the Device menu only if a user with corresponding user rights is logged in. The "Calibration default settings" menu for a digital sensor is visible for the digital sensor concerned only when it is linked.

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

⇒ Chapter 8.2.7 "Digital sensors", page 103

Sample screen:
Chlorine
calibration presets

21 Calibration during disinfection measurements

Calibration default settings for disinfection measurand sensors

The calibration default settings enable the calibration routines to be accessed in the particular calibration menu.

Calibration routines that are not enabled are not visible in the calibration menu. Additional calibration default settings are explained in the following table.

Parameter	Possible settings	Explanation
pH compensation	Selection from Analog selection	Available only for chlorine measurement with pH compensation pH input for automatic sensing of the test/sample solution pH value during the calibration

21 Calibration during disinfection measurements

21.3 Calibration routine for disinfection measurands

**WARNING!**

Be sure to observe the information in the operating manual of the various digital sensors for disinfection measurands with respect to calibration. Depending on sensor type, run-in periods may need to be observed and the sensors built into an appropriate fitting. Non-compliance will lead to incorrect calibration values and hence to incorrect measurement results.

**NOTE!**

You must be logged in with corresponding user rights to perform calibrations.
⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

**NOTE!**

Digital sensors need to be linked before they can be calibrated?
⇒ Chapter 8.2.7 "Digital sensors", page 103




21.3.1 End value calibration

**WARNING!**

Steps 4 to 5 should be carried out very quickly, since the comparison measurement and the inputting of your result must be done promptly.

Step	Action
1	Make sure that the sensor to be calibrated is built into a suitable fitting and had enough time to run-in before the calibration was started. Be sure to observe the information in the operating manual of the sensor with respect to operation and calibration of the sensor type concerned and respect the stated operating conditions during the calibration.
2	Start the end value calibration. Device Menu > Calibration > Digital Sensor 1 to 6 > End Value Calibration

21 Calibration during disinfection measurements

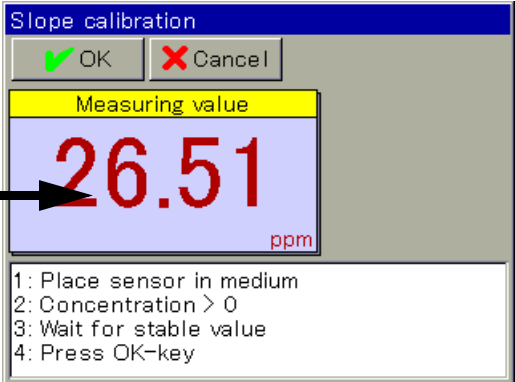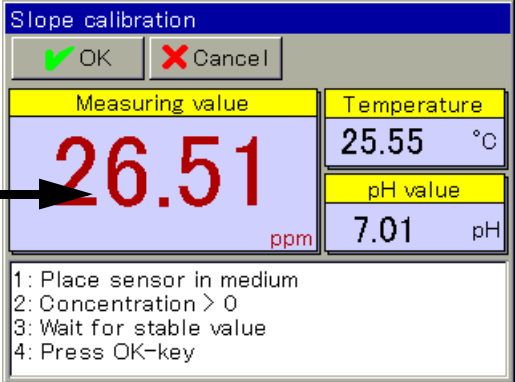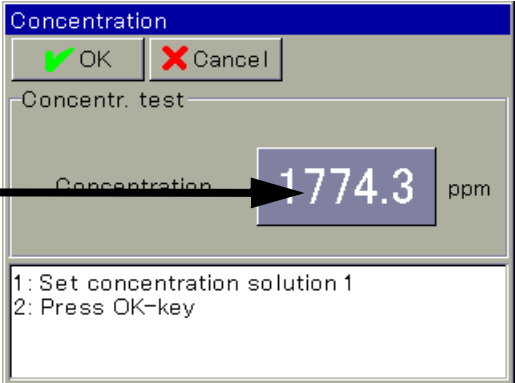Step	Action
3	<p>The device will show the current concentration measured value for the disinfection measurand. The user does not need to make any entries here. Wait until the measured value displayed stabilizes and then confirm by pressing "OK".</p> <p>Display of concentration value</p>  <p>Display of concentration value with pH-compensated chlorine measurement</p> 
4	<p>Remove a sample of the solution from the fitting and determine, as quickly as possible, its actual concentration value using a suitable comparison measurement.</p>
5	<p>Enter the concentration value of the solution determined during the comparison measurement as soon as possible after the comparison measurement.</p> <p>To enter the concentration value, tap the button</p> 

21 Calibration during disinfection measurements

Step	Action
6	A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
7	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.


21 Calibration during disinfection measurements

21.3.3 Two-point Calibration






WARNING!

Steps 7 to 8 should be carried out very quickly, since the comparison measurement and the inputting of your result must be done promptly.

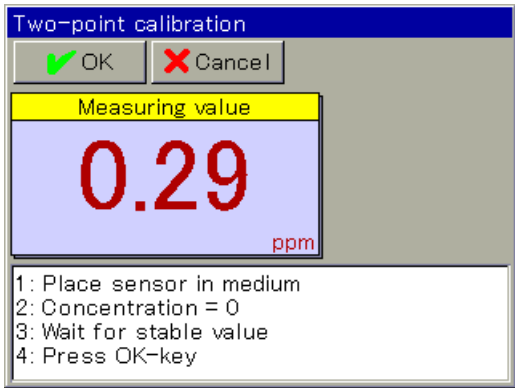Step	Action
1	Make sure that the sensor to be calibrated is built into a suitable fitting and had enough time to run-in before the calibration was started. Be sure to observe the information in the operating manual of the sensor with respect to operation and calibration of the sensor type concerned and respect the stated operating conditions during the calibration.
2	Start the two-point calibration. Device Menu > Calibration > Digital Sensor 1 to 6 > Two-Point Calibration
3	Now let a solution containing no disinfectant to flow through the fitting (concentration value = 0)
4	The device will show the current concentration measured value for the disinfection measurand. The user does not need to make any entries here. Wait until the measured value displayed stabilizes and then confirm by pressing "OK". 
5	Now let a solution containing disinfectant to flow through the fitting (concentration value > 0)

21 Calibration during disinfection measurements

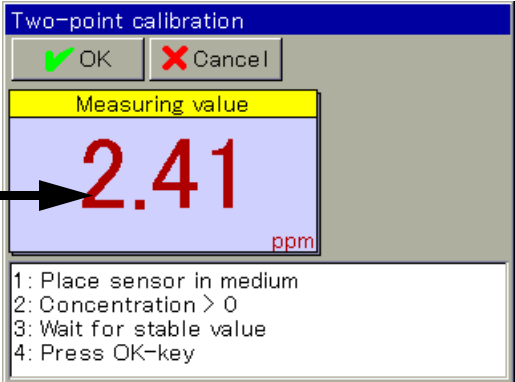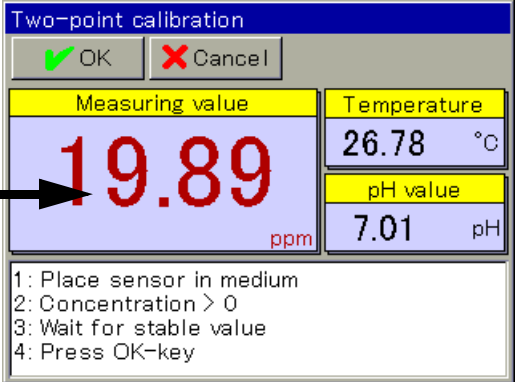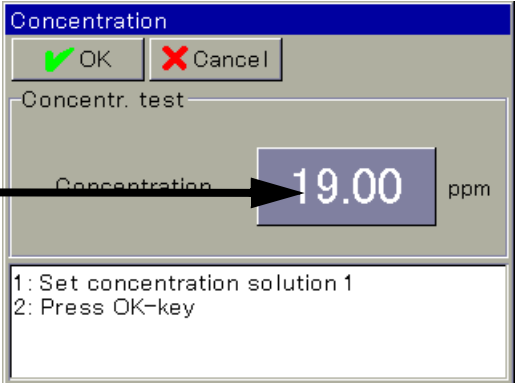Step	Action
6	<p>The device will show the current concentration measured value for the disinfection measurand. The user does not need to make any entries here. Wait until the measured value displayed stabilizes and then confirm by pressing "OK".</p> <p>Display of concentration value</p>  <p>Display of concentration value with pH-compensated chlorine measurement</p>  <p>1: Place sensor in medium 2: Concentration > 0 3: Wait for stable value 4: Press OK-key</p>
7	<p>Remove a sample of the solution from the fitting and determine, as quickly as possible, its actual concentration value using a suitable comparison measurement.</p>
8	<p>Enter the concentration value of the solution determined during the comparison measurement as soon as possible after the comparison measurement.</p> <p>To enter the concentration value, tap the button</p>  <p>1: Set concentration solution 1 2: Press OK-key</p>

21 Calibration during disinfection measurements

Step	Action
9	A protocol summarizing the calibration values determined then appears. Acknowledge the protocol by pressing "OK". Failed calibrations are canceled at this point and discarded.
10	Press "Yes" to accept the Calibration values determined and enter the Calibration in the Calibration logbook. Press "No" to discard the results.

21 Calibration during disinfection measurements



NOTE

Data transmission from and to the device requires that the following requirements be satisfied:

- The device must be powered on
- The device must be connected to the PC either via USB or Ethernet (see Chapter 22.7 "Connection to device", page 334)
- All windows on the user interface of the device must be closed; the device must be at the operating level

Configuration or parameter changes may not be made simultaneously on the device and with the JUMO PC setup program.

22.1 General information

All configuration data and parameterization can be edited offline with the JUMO PC setup program. Entire device configurations can be loaded into the device, exported from the device and saved on a PC/laptop.

In addition, the software is needed for the following tasks:

- Editing of User names and user rights on the device
⇒ Chapter 22.8.3 "User list", page 349
- Saving and deleting languages from the device
⇒ Chapter 22.8.4 "Country settings", page 352
- Creating/editing device settings lists for user levels
⇒ Chapter 22.8.6 "User levels", page 360
- Creating/editing formula and logic formula
⇒ Chapter 22.8.7 "Formula", page 361
⇒ Chapter 22.8.8 "Logic formula", page 362
- Creating/editing value tables for customer-specific linearization
⇒ Chapter 22.8.9 "Customer-specific linearization", page 363
- Editing of Buffer set tables for automatic buffer detection when calibrating pH sensors
⇒ Chapter 22.8.10 "Buffer set tables", page 366
- Creating/editing Process screens
⇒ Chapter 22.8.11 "Process screens", page 367
- Configuring the e-mail function
⇒ Chapter 22.8.12 "Email", page 381
- Configuring the Webserver
⇒ Chapter "Checking the e-mail function", page 386
- Viewing calibration logbooks
⇒ Chapter 22.9.1 "Calibration logbooks", page 388

22 PC Setup Program

22.2 Installing the JUMO PC setup program

Hardware and software requirements

A PC satisfying the following requirements is necessary for installation and operation of the JUMO PC setup program:

- Operating system: Microsoft®¹ Windows 7®¹ (32-bit- and 64-bit version)
- Memory: 1 GB
- Available hard disk space: 1 GB
- DVD drive
- USB host interface
- LAN interface (Ethernet)



NOTE



Close all applications on your PC before starting installation of the JUMO PC setup program.

22.2.1 Procedure

Step	Action
1	With the PC running, insert the CD supplied with the device into the drive and close it.
2	After the CD has been inserted, the installation program starts automatically; if this does not happen, proceed as follows: Start the "Launch.exe" file in the main directory of the CD.
3	The installation program guides you through the rest of installation accompanied by on-screen messages.

¹.Microsoft and Windows 7 are registered trademarks of Microsoft Corporation.

22 PC Setup Program

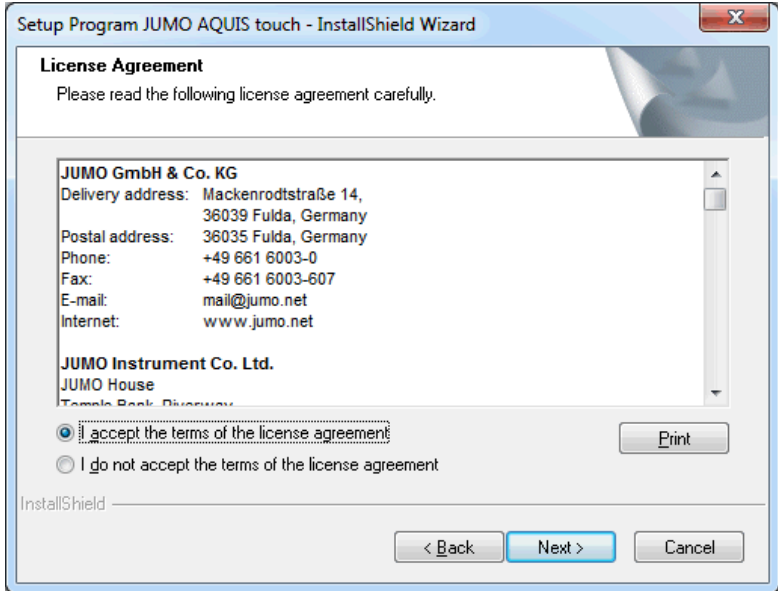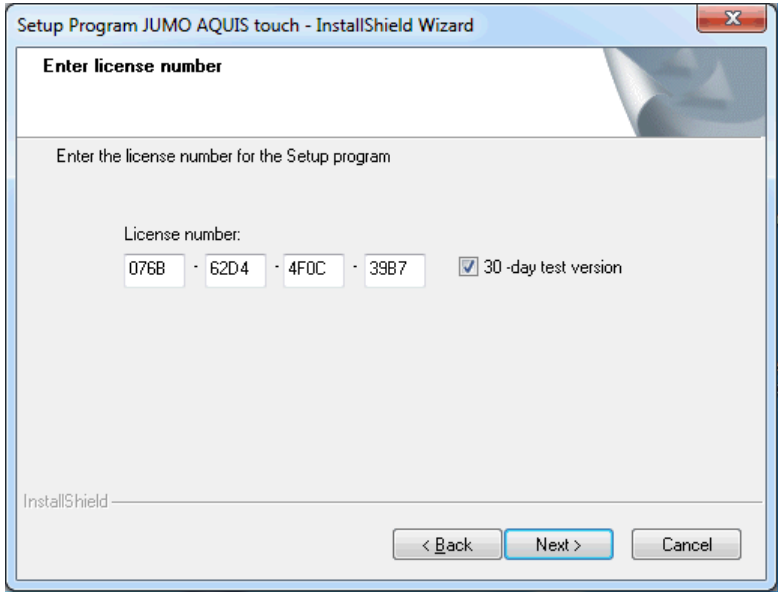Step	Action
4	<p>Read and confirm the license agreement. Acceptance of the agreement is a basic requirement for installation of the software.</p> 
5	<ul style="list-style-type: none"> • 30-days test version or demo version Activate the check box for the 30-days test version. The entry fields for the license number are filled in automatically. • Full version Insert the license key that you received from JUMO^a. 
6	<p>Select the program folder to which the links for starting the software are copied. The directory for the program files is determined automatically.</p>
7	<p>Click the "Install" button and wait until the installation has completed.</p>

22 PC Setup Program

^a To install the full version, you must acquire an appropriate license from JUMO. The contact data can be found on the back of this document.



NOTE

If the "30-days test version" option is selected during installation, the JUMO PC setup program is fully functional for 30 days. At the end of 30 days, the program switches automatically to a "demo version" where some functions such as data transmission, data storage and printing no longer work. The software can be licensed at a later date.

Program start

Once installation is complete, you can start the PC setup program from the Windows®¹ Start menu.

22.3 Logging onto the setup program

The user name and password are not requested following initial installation of the setup program. In the "Extras" menu, the "Renew login / Change password" function can be used to activate this request when the program starts.

⇒ Chapter 22.6.3 "Extras", page 331

A distinction can be made between the "Specialist" and "Maintenance" users when the log-in function is activated. The two users have different rights regarding access to functions of the PC setup program.

⇒ Chapter 22.3.1 "Rights in the setup program", page 317

If the prompt is active, the user must log on:

¹ Microsoft and Windows 7 are registered trademarks of Microsoft Corporation.

22 PC Setup Program

22.3.1 Rights in the setup program

Depending on the version and login, individual users have different rights in the PC setup program.

The differences are summarized in the following table.

Users User rights	Demo Version	Service	Specialist
New	X	X	X
Open	X	X	X
Save, Save As, Delete		X	X
Delete undocumented parameters			X
Export data to external mass storage (USB flash drive)		X	X
Import data from external mass storage (USB flash drive)		X	X
Print		X	X
Activate program options	X		X
Activate extra codes			X
Edit interface settings		X	X
Edit device settings	X	X	X
Delete device			X
Create new device	X		X
Reset user list	X	X	X

22 PC Setup Program

22.4 QuickStart agent

Installation

During installation of the PC setup program, an additional program with the description "QuickStart agent" is installed. This program starts automatically and appears as a symbol in the Windows taskbar.

Example:



- (1) "Show icons" button
- (2) Taskbar
- (3) QuickStart agent link

Quick-start of programs

The QuickStart agent monitors removable media on the PC and responds if, for instance, a device or USB flash drive is connected to the PC. It lists all PC programs associated with the device found.

The user can decide which PC program should be started. This is done by highlighting the program in the list and then launching it by pressing the "Start" button. If there is only one program, it starts immediately.

Pressing the "Close" button switches the QuickStart agent to the background.

Settings

The "Settings" button can be used to change the following QuickStart agent options:

- National language used by the QuickStart agent
- Selection of programs that can be started by the QuickStart agent
- Autostart of the QuickStart agent when starting the PC

QuickStart agent in the foreground or background

Left- or right-clicking on the icon in the Windows taskbar opens a selection list. Here, the user has the option of bringing the QuickStart agent to the foreground or background by selecting the relevant entry in the list.

If autostart is inactive, i.e. the symbol does not appear in the taskbar, the QuickStart agent can be started manually from the Windows Start menu. The QuickStart agent is located in the same program group as the JUMO PC setup program.


Ending the QuickStart agent

Selecting the entry "End" closes the QuickStart agent. It can be restarted from the Windows® Start menu.

22 PC Setup Program

22.5 User interface

22.5.1 Elements of the user interface

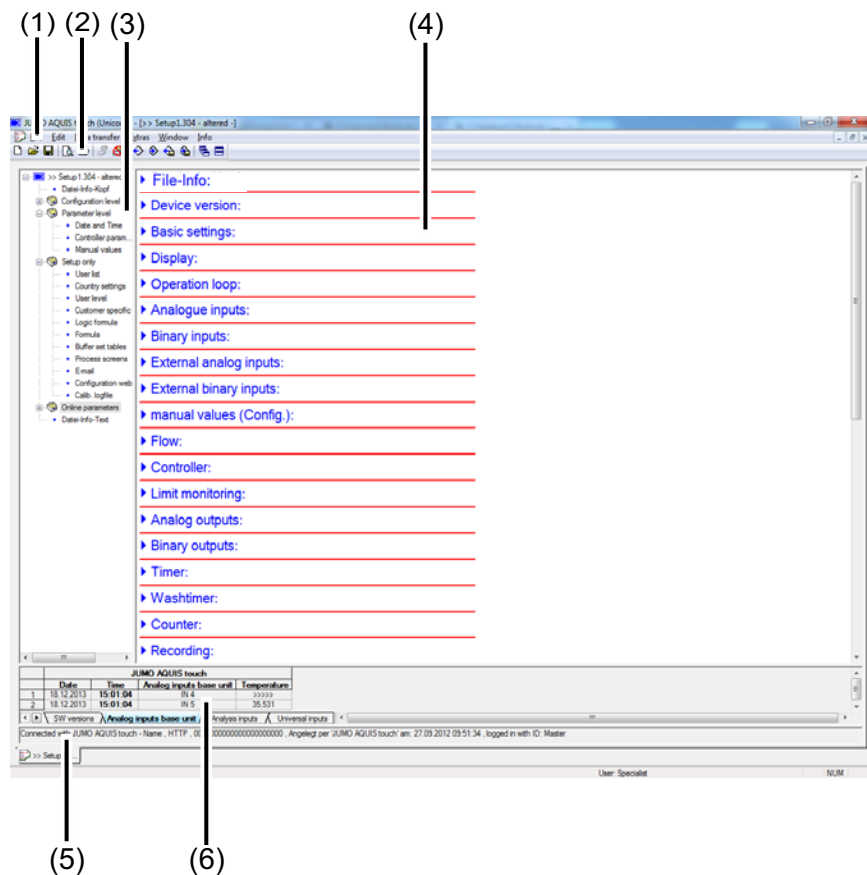

- | | |
|-------------------------------------|--------------------------------|
| (1) Menu bar | (2) Toolbar |
| (3) Working range - Navigation tree | (4) Work area – Display window |
| (5) Connection status | (6) Online data |

Menu bar

The individual functions of the PC setup program are launched from the menu bar.


⇒ Chapter 22.6 "Menu bar", page 327

Toolbar

The toolbar contains selected functions from the menu bar. These can be launched by left-clicking on them. Hovering the mouse pointer over one of the icons displays the name of the function after a few seconds.

Moving the toolbar

The user can change the position of the toolbar:

Step	Action
1	Position the mouse pointer between two icon groups 
2	Left-click with the mouse button
3	While holding down the left mouse button, move the toolbar to the desired location
4	Release the left mouse button

Possible positions of the toolbar:

- Along the left or right window border (vertical alignment)
- Below the menu bar (horizontal alignment),
- Along the lower edge above the user information (horizontal alignment)
- Any position (its own window - any alignment by changing the window size)

Closing the toolbar

If the toolbar was moved, it can be closed by clicking the cross at the right upper corner of the toolbar window. To display the toolbar again, it must be activated (set checkmark) in the "Standard Settings" menu under "User Interface".

File > Standard Settings

The toolbar that appears at the location to which it was previously moved.

Working range

The working area consists of the navigation tree (at left) and the display window (at right)

and displays the current settings of a configuration file (setup file).

⇒ Chapter 22.5.3 "Editing the setup file", page 325

The way the working area is divided can be changed by moving the border between the navigation tree and display window sideways with the aid of the left mouse button.

Connection status

The "Connection status" line indicates whether a connection to a device exists. In addition, some interface data are displayed, e.g., the IP address.

The "Window" menu can be used to show or hide the line.

The height of the line can be changed by moving the border of the online data window with the aid of the left mouse button.

22 PC Setup Program

Online data

The "Online data" function displays current process data in the PC setup program.


The "Window" menu can be used to show or hide the online data window.

File > Online Data

The height of the window can be changed by moving the border of the working area or the "Connection status" line with the aid of the left mouse button.


22.5.2 Display protection

Display protection can be activated in the basic settings of a device setup file. To activate display protection, a password must be entered in the "Display protection" field.

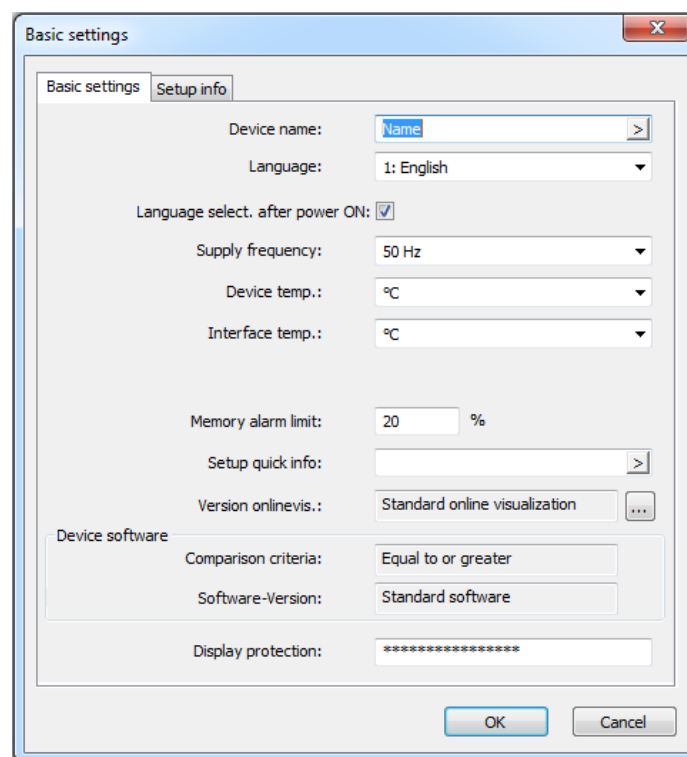


22 PC Setup Program

When display protection is activated, all device settings in the PC setup program are concealed the next time the setup file is opened.

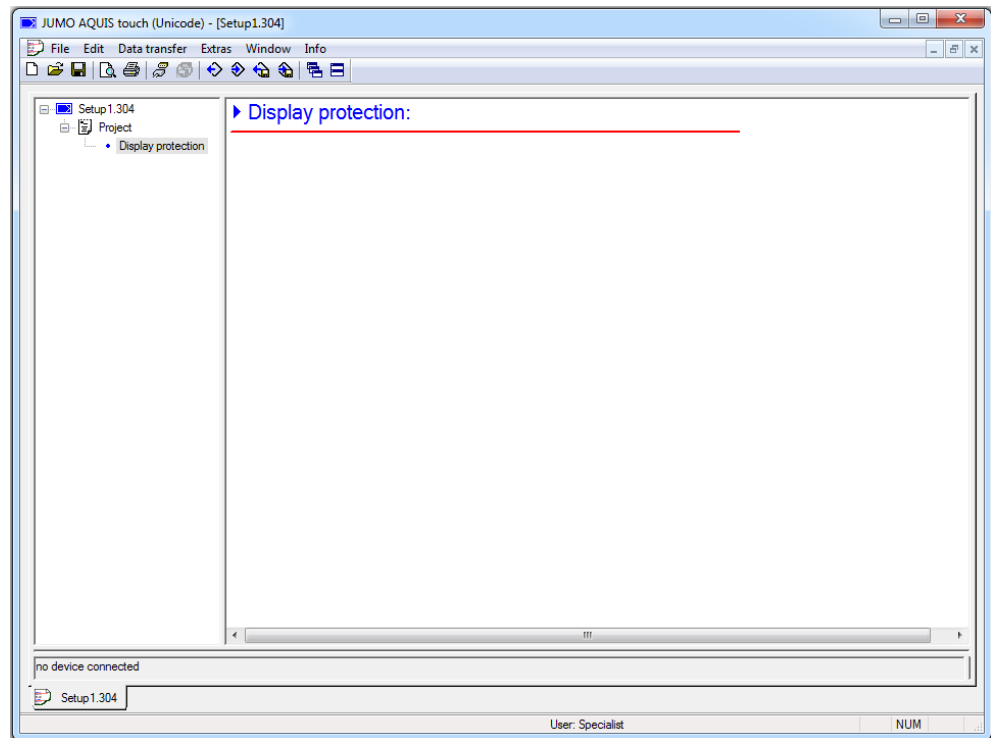

To show the device settings in the PC setup program again, double-click the entry "Display protection" in the display window or the navigation tree. Enter the display protection password in the following dialog. After the correct password has been entered, the entire device setup in the PC setup program appears again and can be edited.

22 PC Setup Program

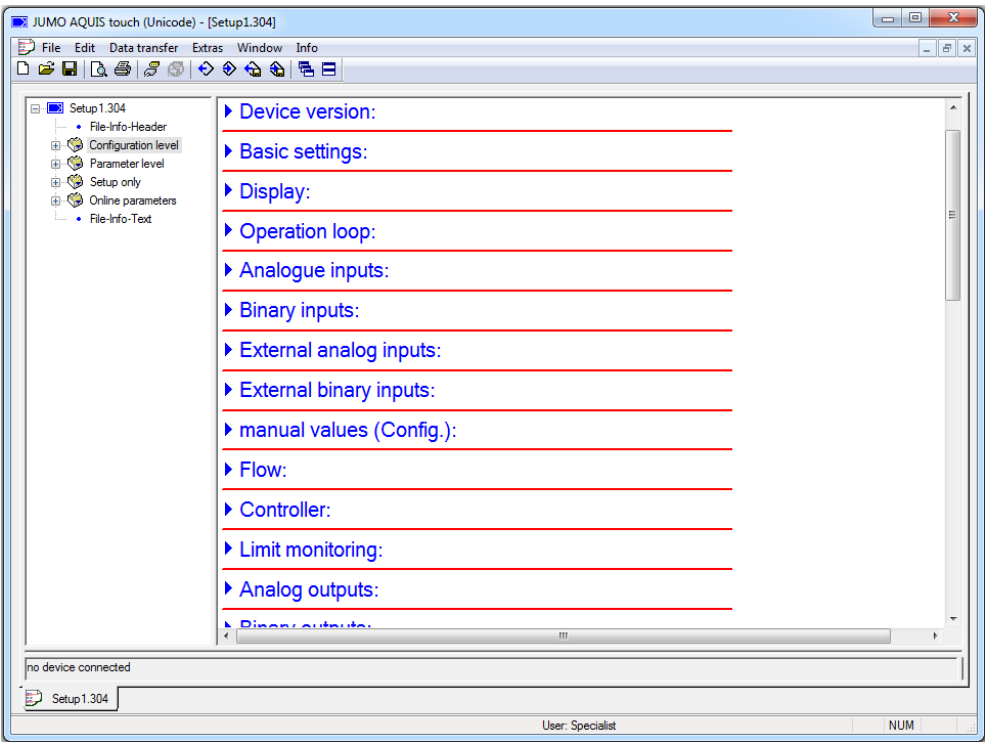

22.5.3 Editing the setup file

In the "File" menu, create or open an existing setup file.


Create a new file:

File > New

Open an existing file:

File > Open

The working area (navigation tree and display window) shows the menu structure with the individual setting options for the JUMO AQUIS touch S from within the JUMO PC setup program.

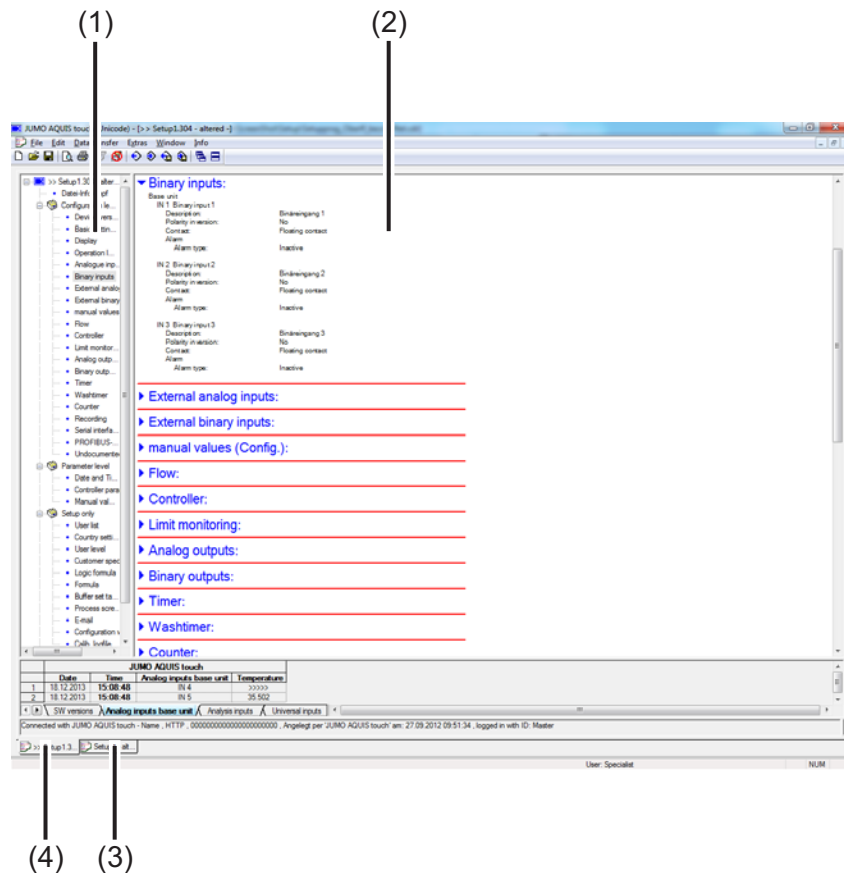

(1) Navigation tree
(complete menu structure of the
PC setup program)

(2) Display window
Pop-up overviews of the sub-
menus with their configuration
data

(3) Active setup window

(4) Inactive setup window

22 PC Setup Program

Navigation tree

Left-clicking (once) on the entry "Project" or on a certain module displays the associated subitems in the display window. Clicking on the ("-") symbol closes a menu, clicking on the ("+") symbol opens a menu. Double-clicking on an entry (e.g. "Hardware configuration") opens a corresponding dialog for editing the individual configuration data. Alternatively, it is possible to access the individual menu levels via the "Edit" menu.

Display window

Double-clicking on an entry in the display window opens a dialog for editing the corresponding configuration data. Clicking once on the right-arrow symbol preceding the entry lists the current settings in the display window. Clicking once on the down-arrow symbol hides the settings again.

Setup window

If several setup windows are open simultaneously, clicking once on the name at the lower edge of the inactive window makes it the active window.

22.6 Menu bar

This chapter describes the menu bar functions. The order of the subchapters corresponds to the location of the menus in the menu bar (from left to right).

22.6.1 File menu

New

Creates a new setup file in the working area. After selecting the "New" command, the user can select from the following options:

- **User-Defined Setting**
Extra codes and optional boards can be selected for the new setup file. This option is used to create a new setup without having a device connected.
- **Automatic Detection**
The configuration (extra codes and optional boards) of the connected device are written to the new setup file. If desired, the "Read setup file from device" checkbox can also be selected. The current configuration is then written to the new setup file from the device and is available for editing.
This option is used to edit or create the setup for an existing or new device.

Open ...

Opens an existing setup file and displays the content in the working area.

Save

Saves the settings shown in the work area in a setup file. The file name must only be entered once. If the file is saved again, the file name is no longer requested.

Save as ...

Saves the settings shown in the work area in a setup file. In contrast to the "Save" function, a prompt for the file name always appears in this case.

Close

Removes the settings shown in the working range from the working range and closes the Setup window. The user has the opportunity to save changes that have not yet been saved.

Export as RTF

Saves the current setting as an RTF file on the PC.
This function is useful for documenting a device configuration.

Print ...

Prints the setup settings of the project or module (depending on the item highlighted in the navigation tree). The menus to be printed can be selected beforehand.

22 PC Setup Program

Print preview (page view) ...

The print results are displayed on screen. Several pages can be displayed and the view can be scaled.

Printer setup ...

Allows the printer settings to be changed. When a program starts, the Windows default printer is always used as the active printer.

Standard Settings ...

Allows the default settings of the setup program to be changed. Many changes are not enabled until you restart the setup program.

Last Files ...

Displays the file names of the setup files last saved. Clicking once on the file name opens the setup file or displays an already opened setup file as the active window.

End

Quits the setup program. The user has the opportunity to save changes that have not yet been saved.

22.6.2 Data Transfer menu

Establish Connection ...

Opens the device connections list. The content of the device connections list is project-dependent. The device connections list contains all devices to which a connection can be established via the setup program. Devices can be added to or removed from the list. The settings for the connection are also made in the device connections list.

⇒ Chapter 22.7.1 "Device connections list", page 334

Break connection ...

Terminates all connections of the active project, i.e. the selected setup file.

Data transfer to the device ...

Sends the setup data to the device. An existing connection to the device is a requirement. If there is no connection, the device connections list is opened automatically.

Data transfer from the device ...

Reads the configuration from the device. An existing connection to the device is a requirement. If there is no connection, the device connections list is opened automatically.

22 PC Setup Program

Data Transfer to Ext. Medium ...

Exports the setup file in SET format to external mass storage (USB flash drive). This file can be loaded directly into the device via the USB interface.

Data Transfer from Ext. Medium ...

Imports a setup file in SET format from external mass storage (USB flash drive) into an open setup file. In this way, an SET file that was previously copied from the device to a USB flash drive can be opened for editing with the JUMO PC set-up program.

Detailed information on loading and saving SET files via the USB interface on the device:

⇒ Chapter 8.4 "Memory Manager (USB flash drive)", page 116

22.6.3 Extras

Enable program options

Activates optional functions of the PC setup program (entry of additional license numbers). Using this function, the PC setup program can also be registered with a valid license number at a later date (30-days test version or full version) if a valid license number was not entered during the installation (demo mode).

Renew login / Change password

Opens a window to activate user login. After the JUMO PC setup program has been installed, prompts for the user name and password do not appear until user login has been activated. The user is logged on initially as "Specialist" with a blank password. This function activates the user and password prompt when the program starts and the current password is changed.

Text library...

Opens a window for editing the text library. The various operating languages for the device are saved in the text library. When a new setup file is generated, the languages are copied to the setup file. If necessary, they can be edited there in the "Country settings" menu. The order of the languages can be changed and also is observed during transfer to the setup file. The first two languages (language 1 and language 2) are transferred to the device and can be selected there. In various submenus, the "Language" button permits editing of the respective language.

⇒ Chapter "Language button", page 354

Version library

Shows the content of the version library. The list contains the standard versions of the device software and the compatible hardware versions provided by the device manufacturer together with the PC setup program. Additional software versions that were imported subsequently (e.g. customer-specific versions) are also contained.

22 PC Setup Program

22.6.4 Windows

Cascaded

Arranges all open setup windows in an overlapping arrangement. Left-clicking on a window brings it to the foreground.

Tiled

Arranges all open setup windows in a tiled arrangement. Left-clicking on a window makes it the active window.

Arrange icons

Arranges the symbols for all minimized setup windows in the lower region of the user interface. This function has an effect only if a symbol was previously moved out of the lower region.

Online data

Alternately shows/hides the online data window. A checkmark preceding the menu item indicates that the window is shown.

Connection status

Alternately shows/hides the line for displaying the connection status. A check mark preceding the menu item indicates that the line is shown.

Opened windows

Displays the names of all opened setup files as a list. Clicking on the name in the list makes the associated window the active window. A check mark preceding the name indicates the active window.

22.6.5 Info

Setup info

Displays information about the setup program, incl. the version number. The version number is important, for instance, when contacting the service hotline.

Registered license numbers ...

Shows all registered license numbers and any active options. The license numbers and the information about active options are important, for instance, when contacting the service hotline.

Program folder ...

Shows the various folders (directories) that are being used on the hard drive or in the network by the setup program. Clicking on the button (to the right of the folder path) displays the content of the folder.

Memory info

Displays the memory information. The memory information is intended for use in diagnostics. It is requested when needed by the device manufacturer's service technician.

22 PC Setup Program

22.7 Connection to device

This chapter describes the various ways to establish a connection between the JUMO PC setup program and the device. A connection is possible via:

- LAN interface (HTTP or HTTP proxy)
- USB interface




NOTE

The USB interface is not intended for a permanent connection, since unintentional removal of the USB connector cannot be prevented due to the lack of a captive connection.

An existing connection is a requirement for data transfer between the JUMO PC setup program and system. In the menu bar, open:
Data transfer > Establish Connection ...

22.7.1 Device connections list

The device connections list contains all devices for which a connection has been configured. The user can add connections to new devices, change the properties of existing connections (interface parameters) as well as remove connections.

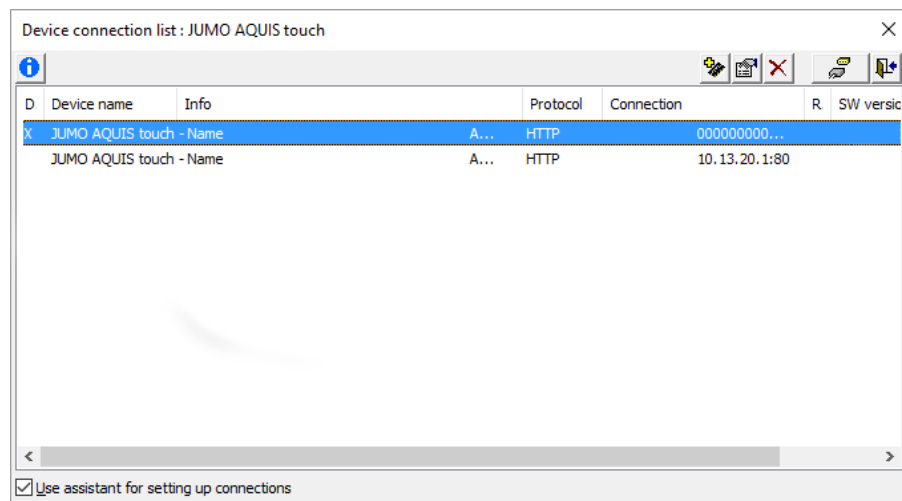

Connection settings assistant

The "Use connection settings assistant" function assists the user with creating a new entry, i.e. a new connection, and with editing existing entries. The assistant is always active after opening the device connections list (check mark set). It is started whenever a new entry is to be added to the device connection list.

⇒ Chapter 22.7.2 "Configuring the connection with the assistant", page 336

The assistant can be deactivated by removing the check mark. If a new entry is to be added to the device connections list then, the user must select the individual configuration steps on their own. If the device connections list is reopened, the assistant will again be active.

⇒ Chapter 22.7.3 "Configuring the connection without the assistant", page 343

Establishing a connection

If the user wishes to establish a connection (or start data transfer when






22 PC Setup Program

there is no connection), the PC setup program opens the device connection list. The user must first highlight the device concerned in the device connection list and then press the "Establish connection" button. If a device should not be connected, the corresponding dialog ("Device connection list" window) should be closed by means of the "Exit" button or by clicking the "X" at the upper right corner of the dialog window.

Toolbar

The user has access to various functions via the toolbar for the device connections list.



Explanation	Button
New entry Creates a new connection entry	
Edit features Opens a settings dialog for a connection	
Permanently remove entry Deletes a connection entry permanently	
Establish connection Establishes a connection to the device highlighted in the list	
Exit Closes the device connections list	

22 PC Setup Program

22.7.2 Configuring the connection with the assistant

The connection settings assistant assists the user with configuring a new connection. The assistant is always active after opening the device connections list (check mark set). It is started whenever a new entry is to be added to the device connection list.


⇒ Chapter 22.7.1 "Device connections list", page 334

**NOTE**

Configuring a new connection "with the assistant" is the preferred method. It can also be used by a user without expert knowledge.

22 PC Setup Program

Setup dialog - Device and type of connection

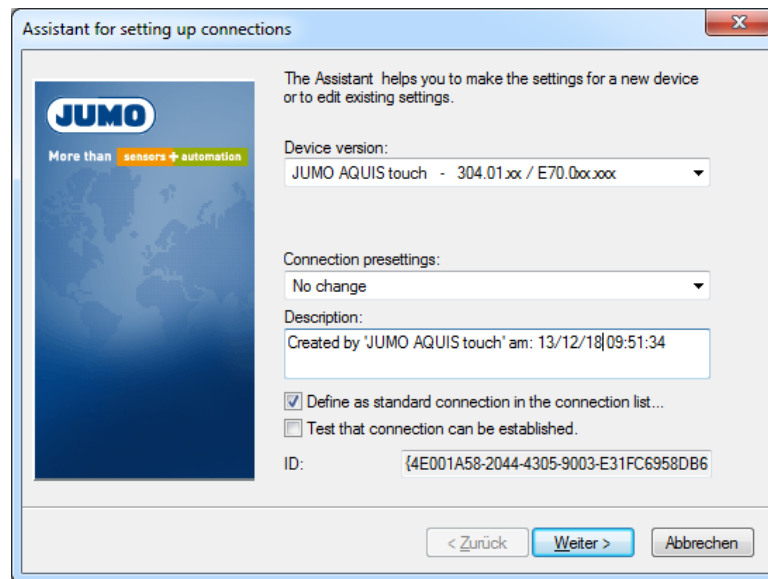

Settings

Setting item	Selection/ setting option	Explanation
Device version	Selection from dropdown list	Device version of the device to be connected ⇒ Chapter 8.2.4 "Device information", page 101
Connection pre- sets	Setup or ring mem- ory via TCP/IP	LAN interface (HTTP protocol), connec- tion to device in an intranet (or VPN)
	Setup or ring mem- ory ^a via HTTP proxy	LAN interface (HTTP protocol), connec- tion to device via proxy server and Inter- net
	Connection via USB	USB interface
Description	Text	Description of the connection
Define as de- fault device in the device con- nection list	Checkboxes	Accesses a default device automatical- ly, other devices must be connected via the device connections list.
Check whether a connection can be estab- lished	Checkboxes	With this option active, the program checks whether the selected device can be accessed via the selected interface upon completion of configuration.

^a Ring buffer = Read out measurement data

After the user clicks on the "Next" button, the assistant opens the next setup di-
alog.

22 PC Setup Program

Setup dialog - Device login

Assistant for setting up connections

JUMO
More than **sensors + automation**

Log-in on device

Log-in

☐ Do not log in
☒ Save ID and password

User ID:

Device password:

Note: Log-in takes place with the current user. If the log-in is to be performed with a different user ID, then the corresponding ID and password have to be entered here!

< Zurück Weiter > Abbrechen

Settings


Setting item	Selection/ setting option	Explanation
Do not log in	Checkboxes	Activate option (set checkmark) if connection to the device takes place without login. Without logging in, some functions probably will not be available. The deciding factor is the authorizations that have been defined for a user who has not logged in. ⇒ Chapter 8.1.1 "Passwords and user rights", page 83
Save ID and password	Checkboxes	Saves the user ID and password for automatic login to the device when establishing a connection the next time
User ID	Text	User name for device login
Device password	Text (is hidden during entry)	Password for device login

After the user clicks on the "Next" button, the assistant opens the next setup dialog.

22 PC Setup Program

Setup dialog - TCP/IP port settings

This dialog depends on the selected connection preset. The figure shows the case "Setup or ring buffer via HTTP proxy". Except for the parameters "Proxy" and "Proxy Port", the description applies also for the case "Setup or ring buffer via TCP/IP".

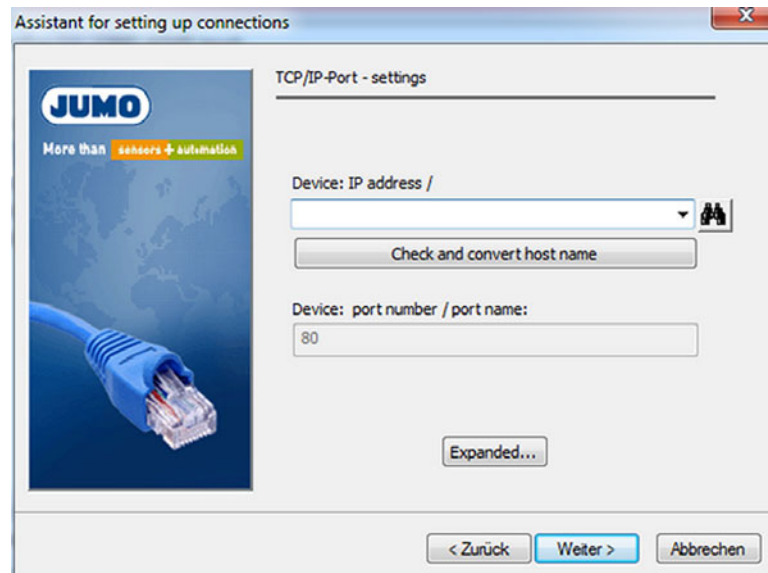

Settings

Setting item	Selection/ setting option	Explanation
Device: IP address / Host name	Enter IP address or name. Or click on the "Search" button and select the device from the list by dou- ble-clicking on it.	IP address or host name of the device The search function (telescope button) finds all devices on the local network and displays them in a selection list. ⇒ Chapter 22.7.4 "Searching for a device in the network", page 345
Check and change host name	Open by pressing the button	Button to change the host name into the IP address of the device. All host names regis- tered to an address as well as alternative addresses are displayed when appropriate
Device: Port number-/ Port name	The port number and port name can be changed only in the expanded settings (see below).	Port number or port description of the device Default port: 80
Extended	Open by pressing the button	Extended settings for communication These settings should be changed only in exceptional situations.

22 PC Setup Program


After the user clicks on the "Next" button, the assistant opens the next setup dialog.

Setup dialog - Overview of the settings

To complete the configuration, the user is presented with an overview of the settings. If the "Connection via USB" connection setting was selected, this overview appears immediately after the "Device Login" dialog, since normally no settings are required for the USB connection or only a device of the same type is connected.

⇒ Chapter "Setup dialog - USB interface settings on the PC", page 341


An incorrect setting can be corrected by pressing the "Exit" button to reopen the setup dialog concerned and making the correction there. Clicking on the "Finish" button closes the assistant and enters the new connection in the device settings list.

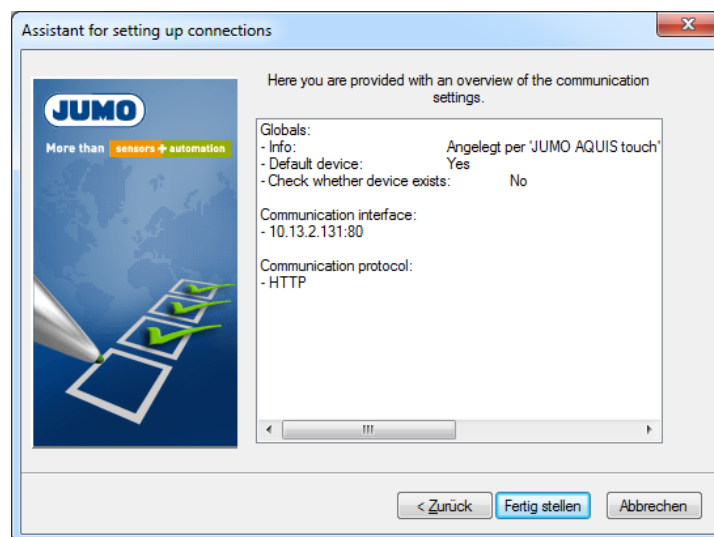

22 PC Setup Program

Setup dialog - USB interface settings on the PC

If several devices are connected via a USB interface, one device must be selected here. Moreover, it is possible to activate various test criteria so that the connection to the device is established only upon a successful test. This dialog depends on the selected connection preset. The figure shows the case "Connection via USB". To access this dialog, it is necessary to click on the "Next" button twice – starting from the "Device Login" dialog – while holding down the "Ctrl" + "Shift" keys.

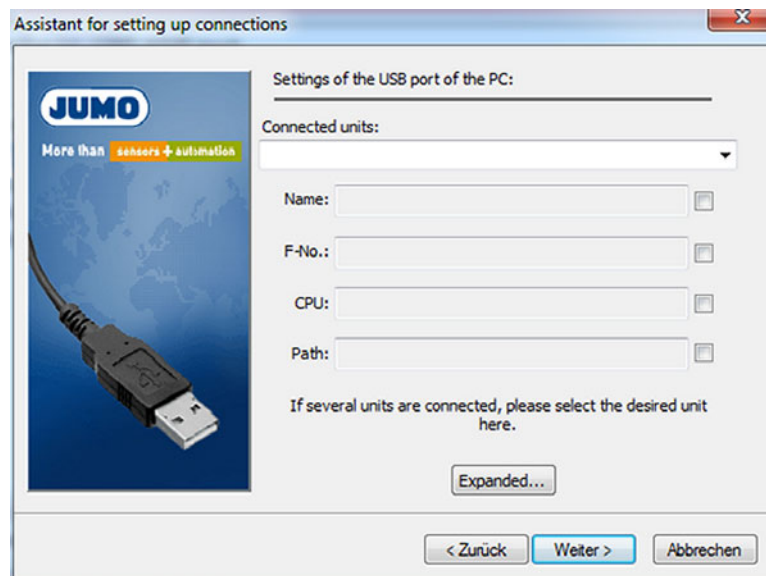

Settings


Setting item	Selection/ setting option	Explanation
Connected de- vices	Selection from dropdown list	Devices connected via the USB inter- face are displayed.
Name	Text (entry field active only when check- box activated)	With checking active, the device is con- nected only if the device name matches.
Ser. No.		With checking active, the device is con- nected only if the device serial number matches.
CPU		With checking active, the device is con- nected only if the serial number of the CPU matches.
Path		With checking active, the device is con- nected only if the USB path matches.
Extended	Open by pressing the button	Extended settings for communication These settings should be changed only in exceptional situations.

Clicking on the "Finish" button closes the assistant and enters the new connec-
tion in the device connections list.

Setup dialog - Overview of the settings

22 PC Setup Program

To complete the configuration, the user is presented with an overview of the settings. An incorrect setting can be corrected by pressing the "Exit" button to re-open the setup dialog concerned and making the correction there.

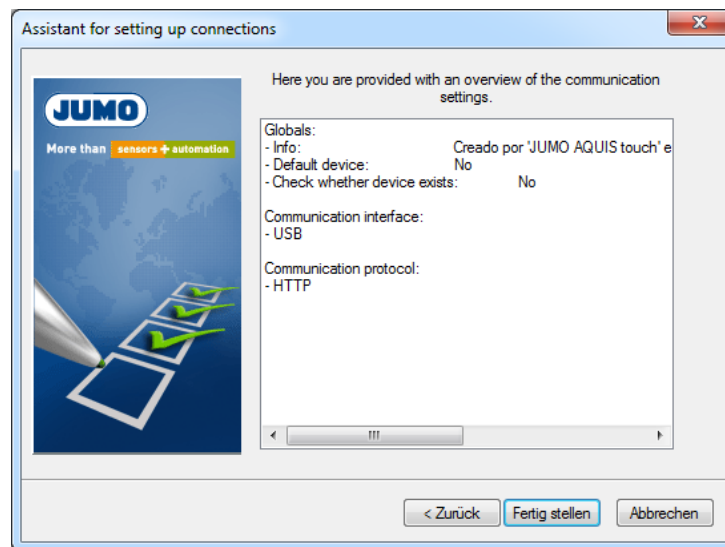

Clicking on the "Finish" button closes the assistant and enters the new connection in the device connections list.

22.7.3 Configuring the connection without the assistant

The assistant can be deactivated in the device connections list (remove the checkmark).

⇒ Chapter 22.7.1 "Device connections list", page 334

During configuration, the user is not guided to the next step - as with an active assistant - but instead must select the individual steps of the configuration on their own. The following example shows the basic procedure. The parameters in the individual setup dialogs are largely the same as when configuring with an assistant so that a description is not provided here. However, additional protocols and interfaces are available for the settings used to establish communication.




NOTE

Configuring a new connection "without the assistant" requires expert knowledge and is provided only for service purposes.

Step	Action
(1)	<p>Make the settings for the new device and click on "Interface"</p>
(2)	<p>Make the login settings and click on "Properties"</p>


22 PC Setup Program

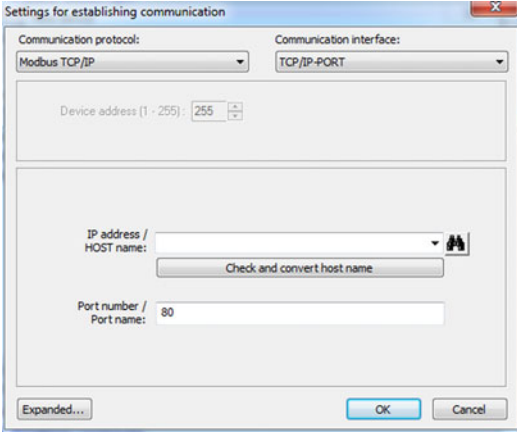Step	Action
(3)	<p>Make the protocol and interface settings and click on OK. If necessary, click on the "Extended" button beforehand to make additional settings for communication.</p> <div></div>
(4)	<p>Close all previously opened setup dialogs (windows) by clicking on the "OK" button. When the last setup dialog closes, the new connection is entered in the device connections list.</p>


22 PC Setup Program

22.7.4 Searching for a device in the network

This function assists the user with selecting the IP address or the host name for the device of interest. A "Search" button is located to the right of the entry field in the dialog for entering the IP address or host name.

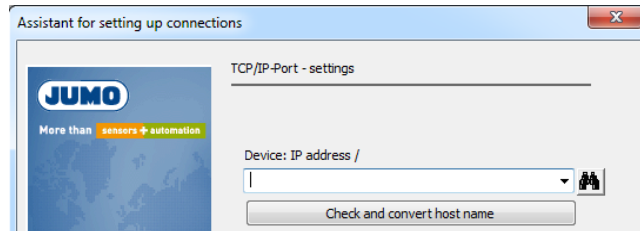


Clicking on this button automatically finds all potentially suitable devices in the local network and displays them in a list.

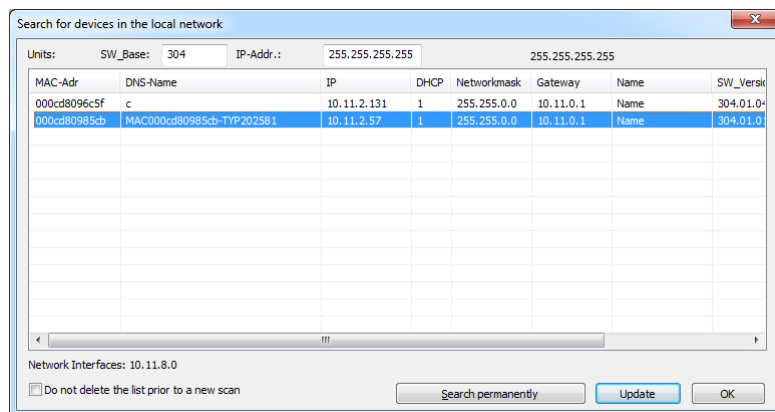

The listed devices are located in the same subnet as the PC from which the search was initiated. Specifying the software version in the "SW Base" field limits search to specific devices and versions.


If devices in a different subnet are to be searched, the address range of the device must be known. This address range must be entered into the field "IP-Adr.". The first 3 bytes of the IP-address must be known, only the last byte can be entered as the range (e.g. 10.13.3.50-150).

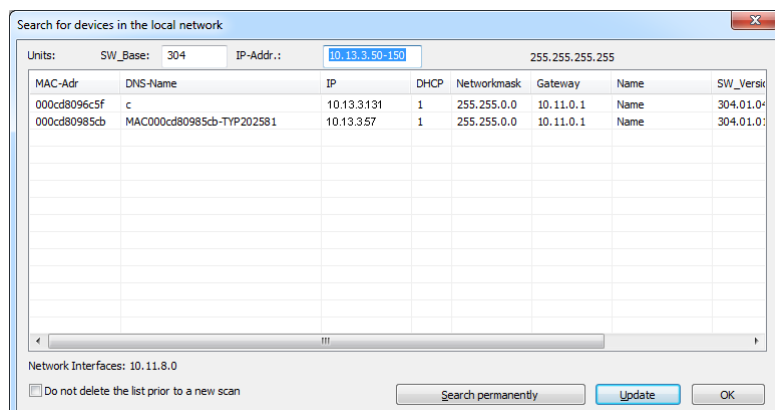

The device concerned can be highlighted with the mouse pointer (by clicking on the cell) and accepted by pressing **OK** (or by double-clicking on the cell). This

22 PC Setup Program

enters the host name (DNS name) in the input field.

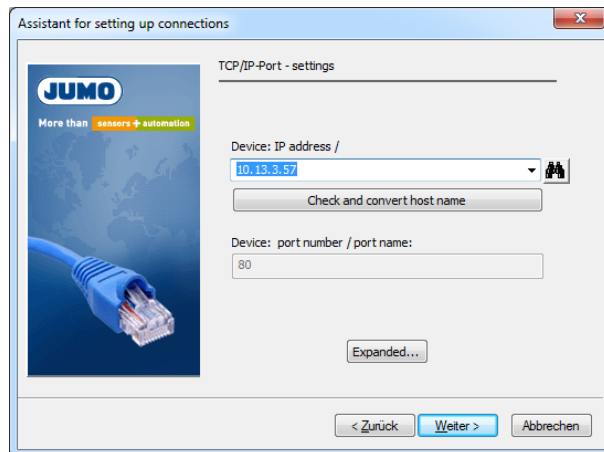

You can use the "Check and convert host name" function to establish the IP address and transfer it to the input field (subsequent editing may be necessary in the input field). Depending on the version, there may be an option to select the host name or IP address from a dropdown list.

22.8 Setting up the device with the JUMO PC setup program

22.8.1 Identification


Identifying the device version

All configuration data and the hardware installed in a connected or network-accessible device can be read and displayed here. In addition, the hardware installed in a device can be specified manually in order to create a setup file for a device that is not connected (e. g. a planned new device).

This function is accessed in the navigation tree of the work area by double-clicking on:

Identification > Device Version

A window opens where you must select whether you wish to import the option boards installed in a connected device into a new setup file (Automatic Detection), or manually enter the hardware configuration data for a new setup file (User-defined Settings).

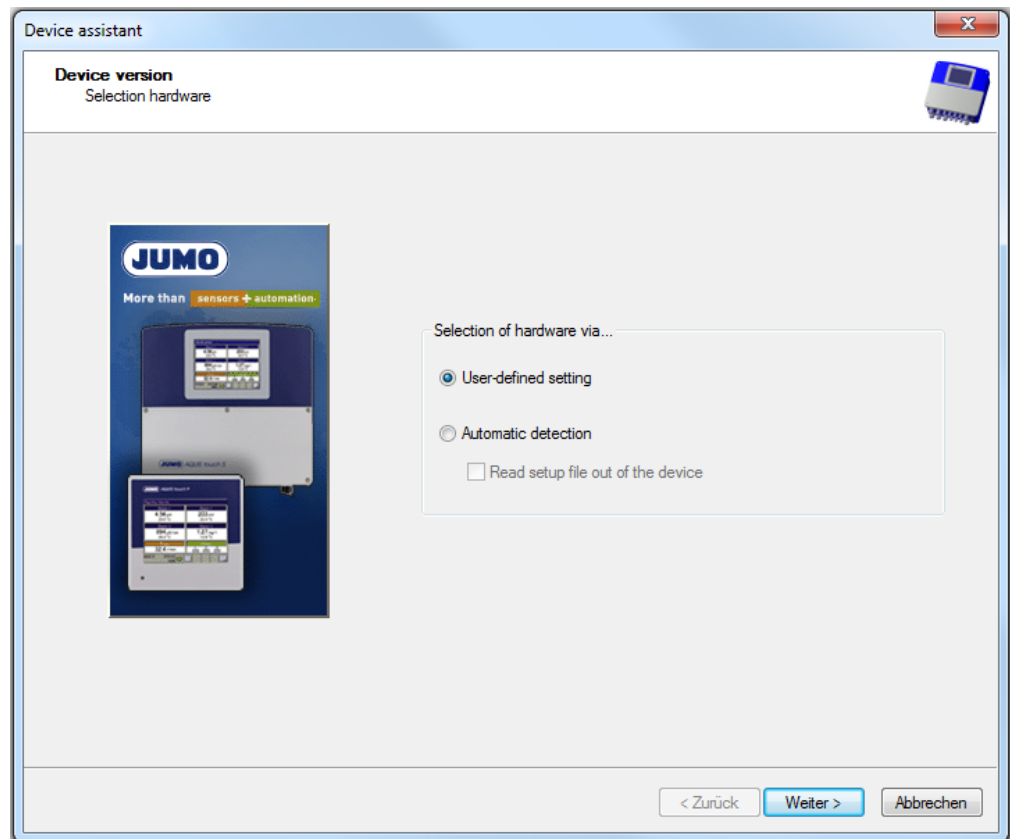


In the next window, you select the device for which the setup file is being created/exported:

- Surface-mount device (JUMO AQUIS touch S)
- Control cabinet device (JUMO AQUIS touch P)

22 PC Setup Program

After you have selected the desired device and clicked the "Next" button, the graphical overview showing the installed option boards opens. If "User-defined settings" was selected, the option boards installed can be manually specified for the setup file here. In this case, use drag and drop to select the desired option board symbols from the menu bar above and place them on the intended expansion slots marked in green. The expansion slots available for installation are marked in green while dragging. If "Automatic detection" was selected, the menu bar with option board symbols is not available; instead, the actual configuration of the device read is displayed.

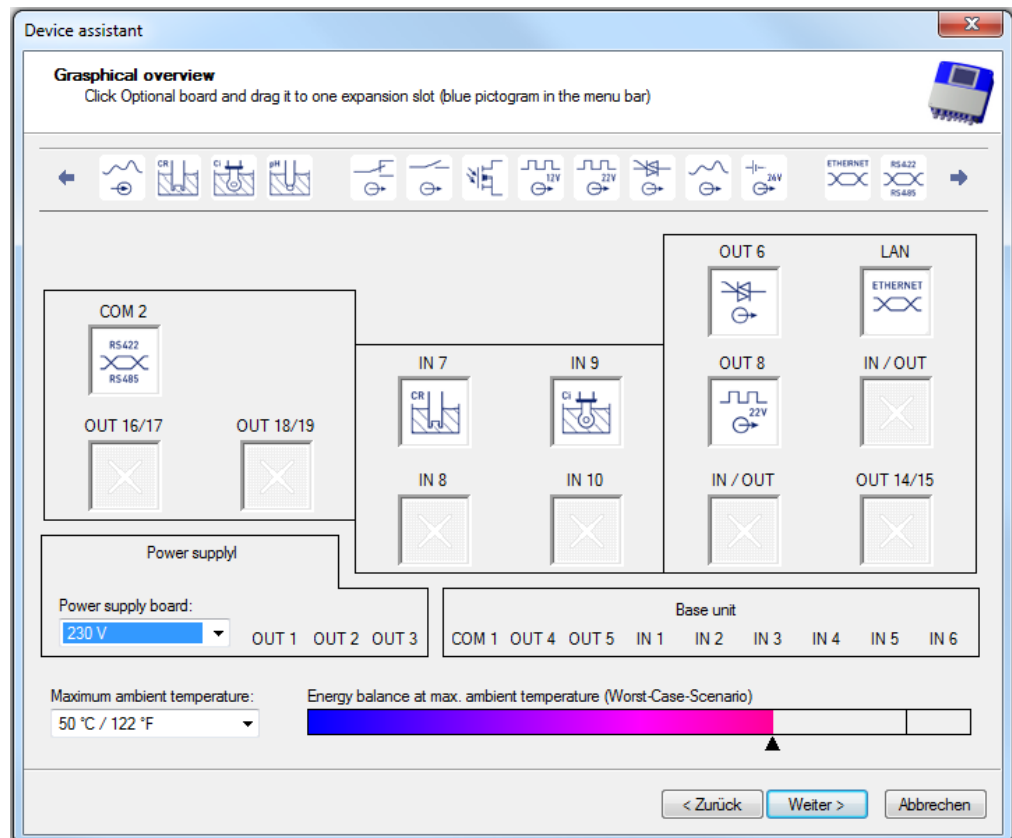

Clicking on the "Next" button opens a dialog window where you can activate extra codes for the setup file:

- Math/Logic
- Recording
- Digital sensors

Activate the extra codes that you wish to configure in the setup file. When you wish to transfer the created setup file to a device, you must activate the selected extra codes for this device.

⇒ Chapter 22.10.4 "Approval of extra codes", page 392

Connection diagram

A graphical connection diagram is saved here. The JUMO PC setup program reads which option boards are installed and the pin assignment from the configuration data in the setup file. The connection diagram can be printed out and used for wiring the device associated with the setup file. Double-clicking on the "Connection Diagram" menu opens a dialog in which the margins for the connection diagram printout can be set. The contents of the title block below the connection diagram can either be synchronized with the information in the "File Info" menu, or filled in with your own text. If the option "Synchronize Texts with File Info Header" has been activated in the settings dialog for the connection diagram, this file info is displayed there and can also be edited here.

22.8.2 Configuring and parameterizing

All parameters at the configuration level and the parameter level can be set both on the device itself and with the JUMO PC setup program.

⇒ Chapter 10 "Configuration", page 141

⇒ Chapter 9 "Parameterization", page 135

22.8.3 User list


The factory-entered user names, passwords, and user rights (see Chapter 8.1.1 "Passwords and user rights", page 83) can be changed with the JUMO PC setup program.

Configuration point	Selection/ setting option	Explanation
Password rules	Password rules	The re-authentication time can be set here. This time counts down as soon as the user has logged in to the device. Once this time elapses, the logged-in user is logged off automatically. If the re authentication time is set to a value of 0 s, re-authentication is inactive. The user then remains logged in for the entire length of the session. ⇒ Chapter 8.2.1 "Log-on/Log-out", page 97
Character table	⇒ "Character table for passwords", page 350	Character set available for passwords
Public rights	⇒ "Configuring public Rights", page 351	User rights for users who are not logged in
ID	up to 10 text characters	User name for user login
Designation	up to 30 text characters	Name of the user account
Password	up to 10 text characters	Password for user login
Rights	⇒ "Configuring user rights", page 352	User rights for each individual user account

22 PC Setup Program

Character table for passwords

Characters for user login can be added or changed in character tables 5 to 16. Character tables 1 to 4 cannot be changed. Recipe data cannot be changed.

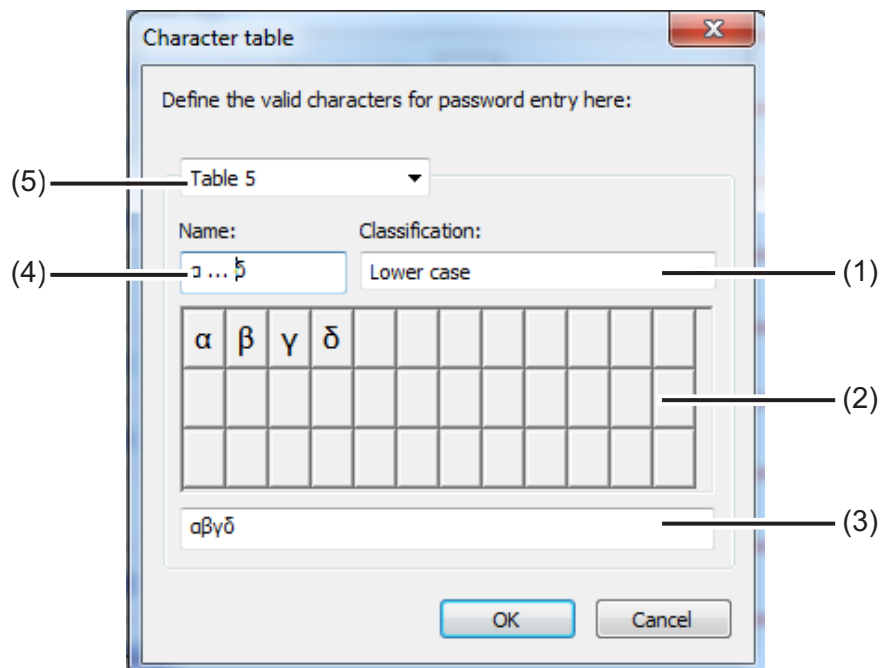

- (1) Classification selection field
- (2) Visualization of the keyboard layout in the Device menu
- (3) Entry field for character set
- (4) Header character set for labeling the tab in the device settings menu
- (5) Table 1 to 16 selection field
for selecting the character table to be edited

To add password characters, select an editable character table 5 to 16 (5) and enter the desired characters as a string without spaces in the entry field (3). The new or modified character table is available on the device for changing passwords. The tab label for the virtual keyboard in the device settings menu is entered in the "Header char. set" field.


22 PC Setup Program

Configuring public Rights

The access rights for all users who are not logged in are set here.

Open Settings:

Only Setup > User List > Public Rights

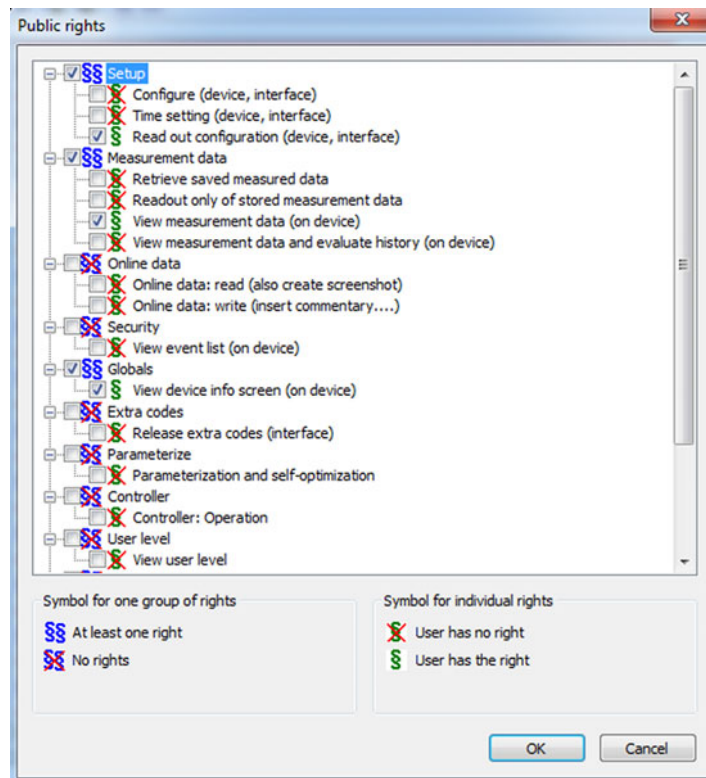

22 PC Setup Program

Configuring user rights


The user rights for each individual user account are set here. A corresponding user login is required to exercise the respective user rights.

⇒ Chapter 8.1.1 "Passwords and user rights", page 83

⇒ Chapter 8.2.1 "Log-on/Log-out", page 97

Open Settings:

Only Setup > User List > Rights

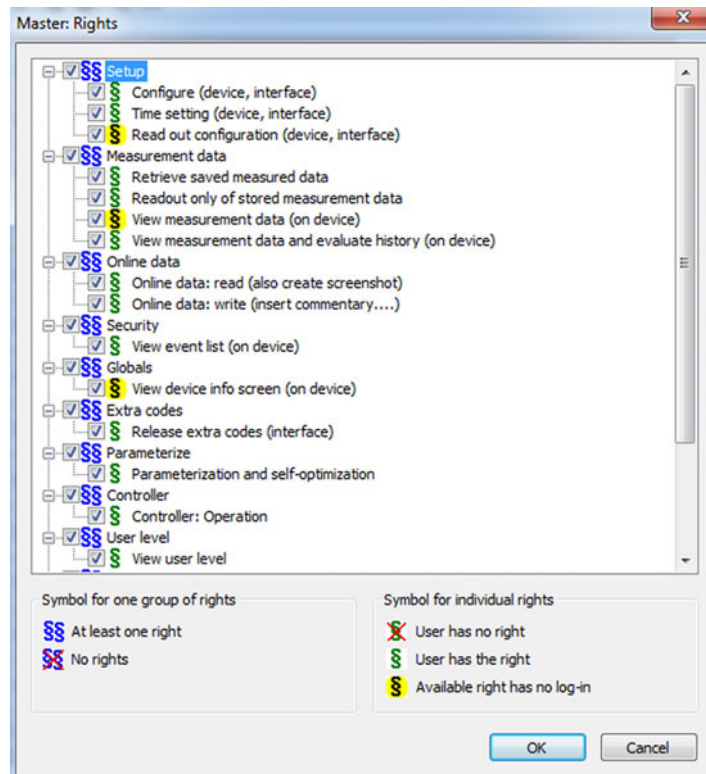

22.8.4 Country settings

The country settings (language and country-specific settings such as the date format and decimal point) are taken from the text library by the setup program when creating a setup file. A country setting can be moved to another position in the list ("Sort language"). The country settings in the list are sent to the device and are available there for changing the language.

22 PC Setup Program

Country settings

1: German
2: English
3: English_

ID: 4B538F54-4948-4954-8E31-2636A0DD7F76

Language: User defined

Date format: JJJJMMTT Separating point (date): /

Separating point (time): : Decimal point: .

Character entry 1:

1	2	3	4	5	6	7	8	9	0
q	w	e	r	t	z	u	i	o	p
a	s	d	f	g	h	j	k	l	+
y	x	c	v	b	n	m	,	.	-

Zeichen 1: 1!

Sort language: [v]

Language [v] OK Cancel

Setting item	Selection/ setting option	Explanation
Specification	No entry possible Assigned automatically	Internal Specification (only for service purposes to identify the language)
National language	Use factory-set text or enter a different text	Description of the language
Date format	DDMMYYYY MMDDYYYY YYYYMMDD	Display format for the date
Decimal character	The following characters are possible: . ,	e. g. "comma" for German number format or "Point" for American
Separator (date)	The following characters are possible: . , ; - / \	Separator for configuring the date format
Separator (time)	The following characters are possible: . , ; - / \	Separator for configuring the time format
Character entry	2 characters 1st standard character (e. g. lower-case letter) 2nd with Shift key (e. g. upper-case letter)	The assignment of characters to the individual keyboard fields of the virtual on-screen keyboard of the device can be changed here if necessary. ⇒ Chapter 22.8.5 "Device character set", page 358

22 PC Setup Program

Language button

Languages can be created, edited, and deleted with the "Language" button. New languages can be created on the basis of already existing languages. Available languages as well as languages from libraries can be selected as a template for new languages in the open setup. It is further possible to import available languages from a saved setup file as the new language. In this way, it is possible to transfer languages from one device to other devices with the aid of a device's setup file

Creating a new language

From an available language in the PC setup program

Step	Action
(1)	Open Country Settings: Only Setup (double-click) > Country Settings (double-click)
(2)	Select and highlight a language as the template
(3)	Copy the selected language: Button "Language" > New Language > Create
(4)	The new language can now be edited and loaded into the device with the next data transfer.

From an available language in a saved setup file

Step	Action
(1)	Open Country Settings: Only Setup (double-click) > Country Settings (double-click)
(2)	Select setup file for language import: Button "Language" > New Language > From Setup File
(3)	Select and open desired setup file in Explorer
(4)	Set checkmark in the checkbox for the selected language and accept
(5)	The new language can now still be edited if necessary and loaded into the device with the next data transfer

22 PC Setup Program

From a language in the current library (internal library of the JUMO PC set-up program)

Step	Action
(1)	Open Country Settings: Only Setup (double-click) > Country Settings (double-click)
(2)	Open the current library: Button "Language" > New Language > From Current Library
(3)	Set checkmark in the checkbox for the selected language and accept
(4)	The new language can now still be edited if necessary and loaded into the device with the next data transfer

From a language in another library (library file stored on the hard drive)

Step	Action
(1)	Open Country Settings: Only Setup (double-click) > Country Settings (double-click)
(2)	Select the library file: Button "Language" > New Language > From Another Library
(3)	Select and open desired library file in Explorer
(4)	Set checkmark in the checkbox for the selected language and accept
(5)	The new language can now still be edited if necessary and loaded into the device with the next data transfer

22 PC Setup Program

Editing languages




NOTE

Standard languages cannot be edited.

Only languages created by the user can be edited with the JUMO PC setup program.

⇒ Chapter "Creating a new language", page 354

The following figure shows the source language text on the left and the target language text on the right. "Source language" dropdown list: Selection of the language in the left column. This language cannot be edited. "Target language" drop-down list: Selection of the language in the right column. Editing possible only in this column.

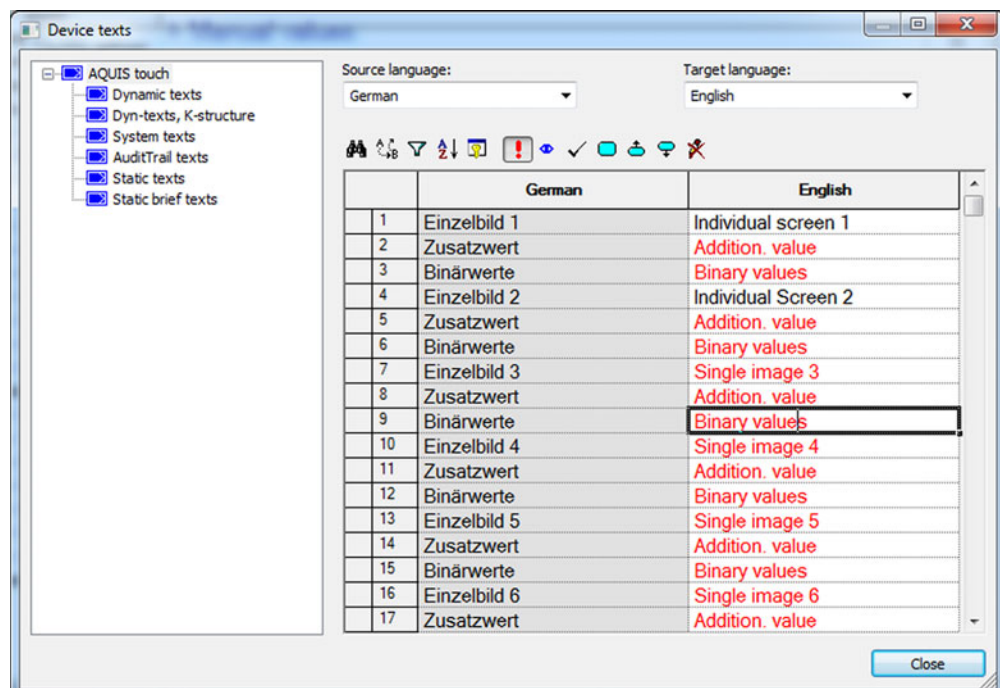

Texts displayed in red characters on a white background have not yet been edited (equivalent to not translated). The other forms of display are listed below in the "Toolbar" section. To change a text, it is only necessary to left-click once in the text field. The selected field is then displayed with a black frame. If the text has been changed, it appears in black characters on a white background upon leaving the field. The text is then considered edited (translated).



NOTE

Static texts, e. g. the names of parameters that are too long to be displayed on the screen of the device, are automatically shortened in the menus ("..."). However, in the dialog window for setting the parameter concerned, the text is displayed in its full length. Texts should generally be kept as short and clear as possible. Longer texts that appear in the same menu should already differ from one another at the start of the text.

22 PC Setup Program

Toolbar

The toolbar gives the user access to various functions for editing text.



Explanation	Button
Search text	
Replace text with other text	
Use filter to reduce the number of texts in the list	
Sort texts alphabetically	
Display text ID (instead of Row number)	
Mark text as "not edited closed votes (red text)"	
Mark text as "to be checked" (blue text)	
Mark text as "edited" (translated) (black text)	
Bookmark text	
Open next entry with a bookmark	
Write-protect text (gray background)	

Errors during Text input


Errors that occur during Text input are signaled by a colored background.

Explanation	Background
Too little memory space available. The total number of characters in a text is too large and must be reduced (shorten text).	Blue
The entered text is too long; it does not fit in the window provided.	Yellow
The text entered contains characters that cannot be displayed on the device.	Violet
Errors while editing a placeholder (#). The "#" symbol serves as a placeholder. Text is generated automatically by the device software at the location of the placeholder. Example: "Device ID #1.100". "Device ID" may be changed, "#1.100" not .	Brown

22 PC Setup Program

22.8.5 Device character set

When creating a new language, it is also possible to specify the characters available on the device for Text inputs (virtual keyboard).

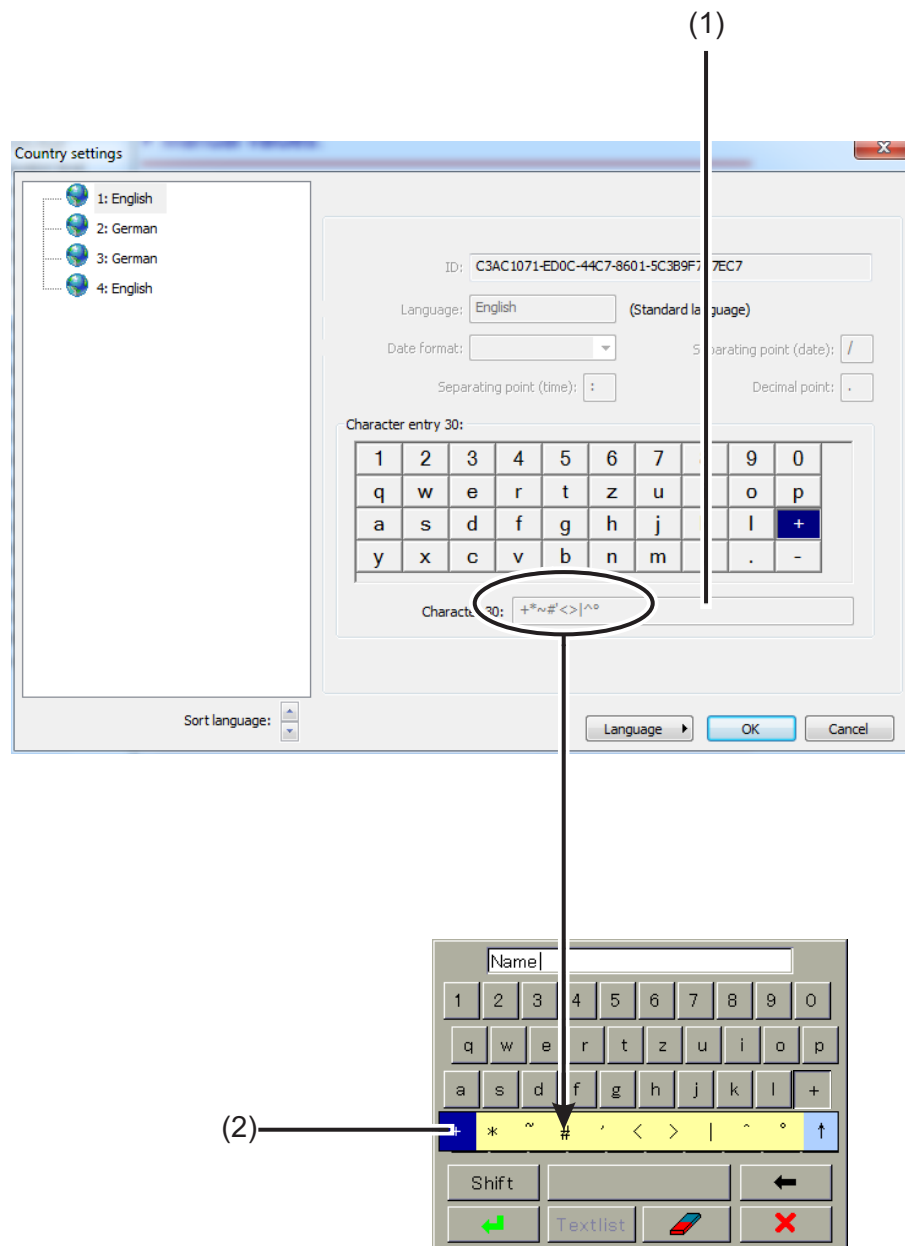

- (1) Entry field for character selection
The characters that are entered here are offered for selection by the virtual keyboard on the device later upon pressing the corresponding key.
- (2) Selection on the device keyboard
In the example, the key for the plus sign was pressed on the virtual device keyboard.

22 PC Setup Program

To edit the character set for the device keyboard, proceed as follows:

Step	Action
(1)	Left-click the virtual key in the "Character entry" field (Example: "+"). The characters assigned to the key appear in the text field. The first character from the left corresponds to the character on the key.
(2)	Change the key assignment in the text field as necessary (if invalid characters are entered, the background changes to violet).

22 PC Setup Program

22.8.6 User levels


The user-defined parameter and settings lists on the user levels are created in this menu of the JUMO PC setup program. The configuration item "Source of designation" can be used to select between your own designation of the individual user level (configuration item "Level designation") and the designation of a selectable analog signal (configuration item "Signal designation") as the designation of a user level.

Explanation of the User level:

⇒ Chapter 8.2.2 "User levels", page 98

Open Settings:

Only Setup > User level > User level 1 to 16

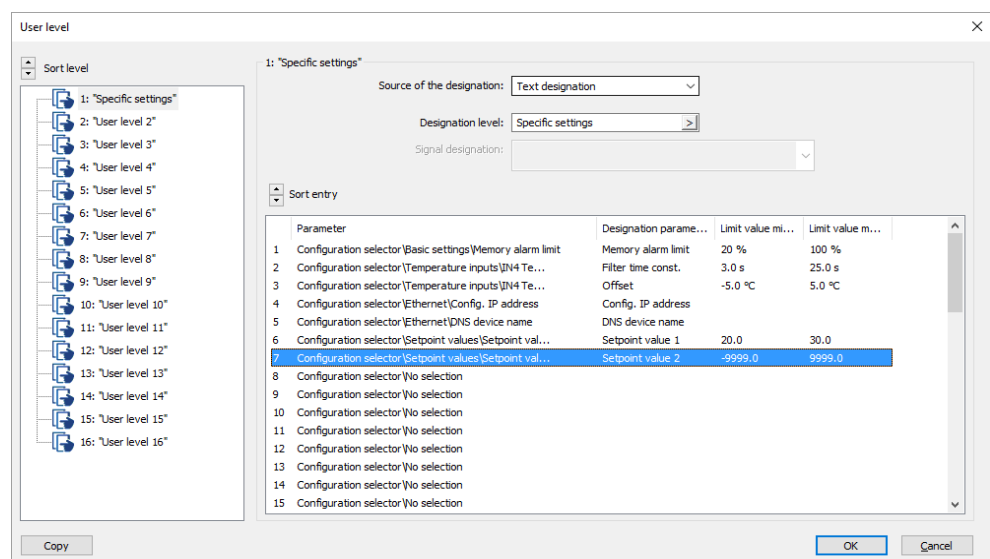

22.8.7 Formula

Formula must be created with the JUMO PC setup program. During data transfer to the device, the formulas are then loaded into the JUMO AQUIS touch S together with the setup. For formula that have already been loaded into the device, the configuration data below the formula entry field can also be set on the device as an alternative.

Explanation of the configuration data for "Formula":

⇒ Chapter 10.21 "Formula", page 213

Open Settings:

Only Setup > Formula > Formula 1 to 16

The screenshot shows the 'Formula' configuration window. On the left, a list of 16 formulas is shown, each with a small icon and the label 'Formula 1' through 'Formula 16'. The right pane is titled 'Formula 1' and contains the following fields and controls:

- Function:** A dropdown menu currently set to 'Formula'.
- Formula (text):** A text area containing the expression $(IN4 \text{ Temperature input } 1 + IN5 \text{ Temperature input } 2) / 2$.
- Formula Editor:** A button located to the right of the formula text area.
- Description:** A text field containing 'average temp.'.
- Temperature:** A dropdown menu set to 'Absolut'.
- Unit:** A dropdown menu set to '%', with a small '>' button to its right.
- Comma format:** A dropdown menu set to 'Auto'.
- Bar graph + Diagram display:** A section containing two input fields: 'Display range start: 0 °C' and 'Display range end: 100 °C'.
- Response at error:** A dropdown menu set to 'No output'.
- Value for error:** An input field containing '0 °C'.
- Über Netz-AUS sichern:** A dropdown menu set to 'No'.

At the bottom of the window, there are three buttons: 'Copy', 'OK', and 'Cancel'.

To create formula, open the Formula Editor by pressing the button. With the aid of the Formula Editor, you can select variables from the analog and binary selectors as well as available operators to add them to the mathematical expression in the text window by pressing the corresponding "Add" button.

If necessary, the formula can also be edited by entering characters with the keyboard.

22 PC Setup Program

22.8.8 Logic formula


Logic formula must be created with the JUMO PC setup program. During data transfer to the device, the formulas are then loaded into the JUMO AQUIS touch S together with the setup. For formula that have already been loaded into the device, the description below the formula entry field and the alarm configuration can also be set on the device as an alternative.

Explanation of the configuration data for "Logic formula":

⇒ Chapter 10.22 "Logic formula", page 214

Open Settings:

Only Setup > Logic Formula > Formula 1 to 30

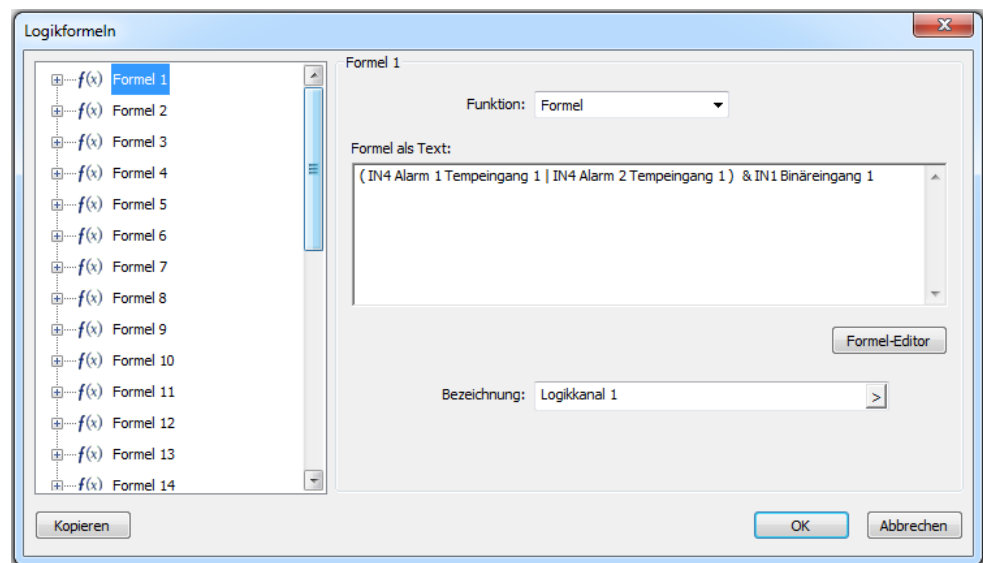

To create formula, open the Formula Editor by pressing the button. With the aid of the Formula Editor, you can select variables from the Binary selection as well as available operators in order to add them to the logic expression in the text window by pressing the corresponding "Add" button. If necessary, the formula can also be edited by entering characters with the keyboard.

22.8.9 Customer-specific linearization

Value tables and formula for customer-specific linearization must be created with the JUMO PC setup program. During data transfer to the device, the linearization is then loaded into the JUMO AQUIS touch S together with the setup. After the linearizations have been loaded into the device, they can be used when configuring the following types of analog inputs:

- Universal inputs with a standard signal (except pH/T-compensated chlorine measurement)
⇒ Chapter 10.5.2 "Universal inputs of base unit and optional boards", page 149
- Temperature inputs for RTD temperatures probes with a customer-specific characteristic curve (up to 400 Ω , 4000 Ω or 100 k Ω)
⇒ Chapter 10.5.1 "Base unit temperature inputs", page 147
- Analysis measuring inputs for electrolytic conductivity
⇒ Chapter 10.5.8 "CR/Ci measuring ranges", page 158

Open Settings:

Only Setup > Customer-Specific Linearization > Tabs 1 to 8

Customer specific linearization

Table 1 | Table 2 | Table 3 | Table 4 | Table 5 | Table 6 | Table 7 | Table 8

Description: pH for example

Linearization type: Basic values

Start measur. range: 5

End measur. range: 10

Basic values

	Messwert (X)	Linearisierter Wert (Y)
1	-177	10
2	-118	9
3	-59	8
4	0	7
5	59	6
6	118	5
7	177	4
8		
9		
10		
11		
12		
13		
14		

Formula





y = 0 · x⁴ + 0 · x³ + 0 · x² + 0 · x + 0

Display graphic Update graphic OK Cancel

Attention: you have to enter temperature values in °C.

22 PC Setup Program


Symbol buttons – Basic values table

"Insert line" Inserts a new line above the highlighted line ^a	
"Delete line" Deletes the highlighted line from the Basic values table ^a	
"Delete table" Delete all entries in the Basic values table	
"Generate formula" Generates an approximation formula from the values in the basic values table	

^a Lines are highlighted by clicking the Row numbers.

Display graphic

The linearization characteristic curve is displayed by tapping the "Display graphic" button. By entering the "Lower limit" and "Upper limit" and then pressing the "Update" button, the display range of the Measuring value axis can be specified.

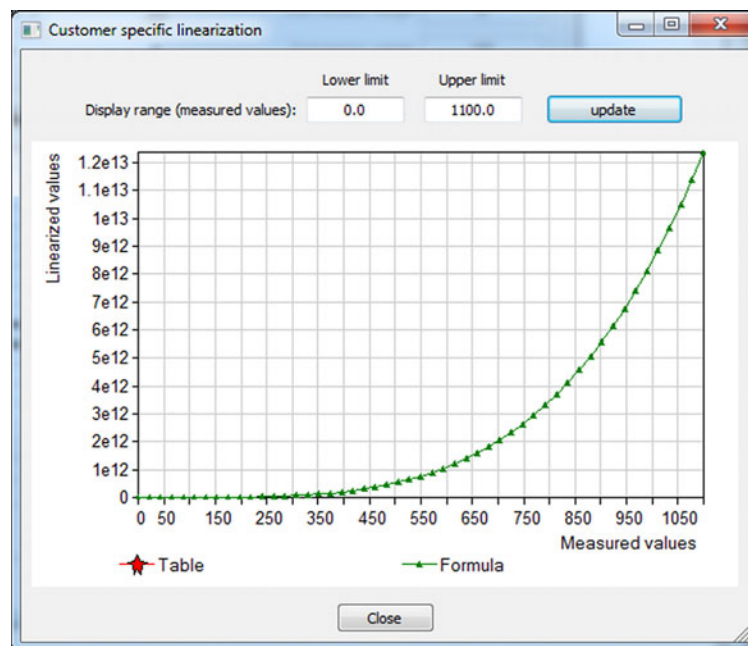

22 PC Setup Program

Settings for customer-specific linearizations 1 to 8

Setting item	Selection/ setting option	Explanation
Designation	up to 20 text characters	Linearization name
Linearization type	Grid points Formula	Way of entering linearization data In order to display a measurement characteristic curve, the customer-specific linearization can be entered as a value table with discrete value pairs or as a formula (fourth-degree polynomial).
Measuring range start	-99999 to 99999	only with "Formula" as "Linearization type": Value range limits for the Y-column The signal values from the sensor (X-values) are converted by the formula to values of the process variable (Y-values). The Y-values function as measured values for input at the analog inputs of the AQUIS touch S.
Measuring range end		
Grid points	Table with discrete value pairs	only for "Supporting values" as "Linearization type": Entry of discrete value pairs of a measurement characteristic curve The signal values from the sensor can be entered in the X-column of the values table and the associated values of the process variable in the Y-column. The intervals between two value pairs are calculated internally by linear interpolation. The Y-values function as measured values for input at the analog inputs of the AQUIS touch S.
Formula	Coefficients of a 4th degree polynomial	only with "Formula" as "Linearization type": Approximation formula for displaying a measurement characteristic curve Formula are entered as a fourth-degree polynomial and used to convert the signal values from the sensor (X-values) into the corresponding values of the process variable (Y values). The Y-values function as measured values for input at the analog inputs of the AQUIS touch S. The "Generate formula" button can be used to generate an approximation formula on the basis of the Basic values entered in the table.

22 PC Setup Program

22.8.10 Buffer set tables

Three buffer set tables are created in the JUMO AQUIS touch S.
Buffer set tables are needed for calibration of pH sensors when using automatic buffer detection.

⇒ Chapter 13 "Calibrating a pH measuring chain", page 239

These Buffer set tables can be changed as often as necessary here.

The factory settings for the Buffer set tables are as follows:

- **Buffer set 1:** Reference buffer solutions for calibrating pH measuring instruments acc. to DIN 19266
- **Buffer set 2:** Technical buffer solutions, preferably for calibrating and adjusting technical pH measuring instruments acc. to DIN 19267
- **Buffer set 3:** No data

Open Settings:

Only Setup > Buffer Set Tables > "Buffer Set Table 1 to 3" tab

	Temperature °C	Buffer value 1 pH	Buffer value 2 pH	Buffer value 3 pH	Buffer value 4 pH	Buffer value 5 pH	Buffer value 6 pH
1	0.0 °C	1.67	4.01	6.95	9.46	13.42	
2	10.0 °C	1.67	4.00	6.92	9.33	13.00	
3	20.0 °C	1.67	4.00	6.88	9.23	12.63	
4	25.0 °C	1.68	4.01	6.86	9.18	12.45	
5	30.0 °C	1.68	4.01	6.85	9.14	12.29	
6	40.0 °C	1.69	4.03	6.84	9.07	11.98	
7	50.0 °C	1.71	4.06	6.83	9.01	11.70	
8	60.0 °C	1.72	4.09	6.84	8.96	11.45	
9	70.0 °C	1.74	4.13	6.84	8.92	11.21	
10	80.0 °C	1.77	4.16	6.86	8.89	10.99	
11	90.0 °C	1.79	4.20	6.88	8.85	10.79	
12	95.0 °C	1.81	4.23	6.89	8.83	10.69	

22.8.11 Process screens

Up to 8 "Process screens" can be created in the Operation loop of the JUMO AQUIS touch S in order to design a dynamic overview display of a system or a process. Process screens must be created with the JUMO PC setup program and loaded into the JUMO AQUIS touch S together with the configuration.

Components of a Process screen:

- **Background color:** Selectable color of the background
⇒ "Background color", page 371
- **Background:** Any image in bitmap format
(the dimensions of the Process screen are 316 × 182 pixels)
⇒ "Background", page 372
- **Objects:** Graphical elements for visualizing the operating state of the equipment in a system (e.g. pumps, valves, heating elements etc.)
⇒ "Objects", page 374



NOTE

Operation screens can be shown/hidden in the configuration. Check the Process screen setting in the configuration.

Device Menu > Display > General > Display Process Screen


Open Settings (Process screen Editor):

Only Setup > Process Screens (double-click) > "Process screen 1 to 8" tab

22 PC Setup Program

Process screen editor



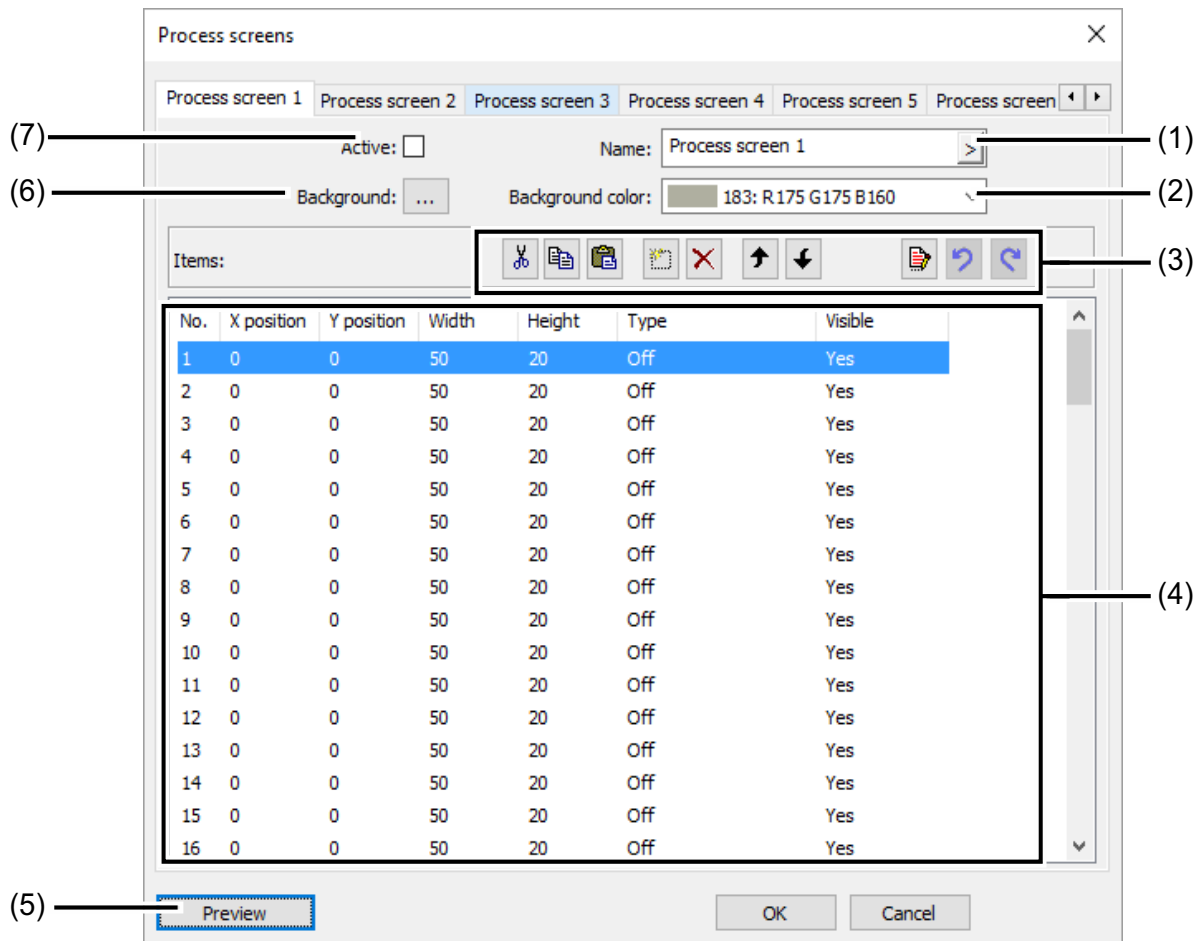









Process screens for the JUMO AQUIS touch S must be created with the JUMO PC setup program. These are then transferred from the PC to the device together with the setup.



- (1) Description of the Process screen (appears in the title bar of the Process screen)
- (2) Setting for the background color of the Process screen
- (3) Buttons for editing objects in the Process screen
⇒ **"Process screen Editor buttons"**, page 369
- (4) Object list with 100 objects
The list shows all 100 objects. The objects can be configured, formatted, and activated with the editor. Objects shown as "Off" are not active in the Process screen. Objects with higher numbers cover objects with lower numbers in the Process screen.
- (5) "Preview" button
Opens the preview window with the concept for the Process screen
⇒ **"Preview"**, page 370
- (6) Background
Clicking this button opens a dialog for selecting an image from the image list.
It is also possible to import user-defined images into the image list.
⇒ **"Background"**, page 372
- (7) The "Active" option is used to activate and display the screen with the Process screen in the Operation loop.

22 PC Setup Program

Process screen Editor buttons

"Cut" Copies the highlighted object to the clipboard and deletes it from the list	
"Copy" Copies the highlighted object to the clipboard	
"Insert" Inserts an object from the clipboard at the highlighted position in the list; the highlighted object and all objects below it are shifted downward	
"New" Inserts a new object at the highlighted position in the list, the highlighted object and all objects below it are shifted downward	
"Remove" Removes the highlighted object from the highlighted position in the list; objects below it are shifted upward	
"Move up" Moves the highlighted object up one position in the list (corresponds to moving to the back in the Process screen)	
"Move down" Moves the highlighted object down one position in the list (corresponds to moving to the front in the Process screen)	
"Edit" Opens a dialog for editing the highlighted object ⇒ Chapter "Objects", page 374	
"Cancel" Cancels the editing step made in the object list; the button only becomes active if an editing step was made in the object list during a session.	Active Inactive  
"Restore" Restores editing steps in the object list that were canceled; the button only becomes active if editing steps were canceled in a session.	Active Inactive  

22 PC Setup Program


Preview

The "Preview" button in the Process screen Editor opens the preview. The concept for the Process screen can be viewed here. The Process screen is displayed as it will appear later on the device.

Objects can be repositioned via drag and drop. The size of object can be changed by dragging the corners and edges.

Using the buttons in this window, objects can be repositioned, aligned with one another, formatted, and simulated.



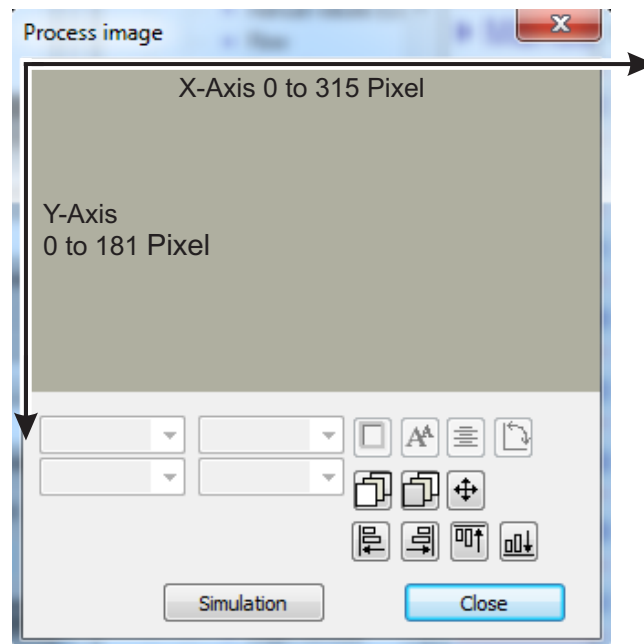


The X-position axis runs from left to right; the Y-position axis from top to bottom. The origin of the coordinate system is the top left edge of the Process screen.



Buttons in the preview

"Frame type" Changes the frame format of a framed object	
"Font size" Changes the font size in an object with text	
"Alignment" Changes the alignment of the lettering in objects with text	
"Object type" Changes the orientation of the object (horizontal/vertical)	
"One step forward" Moves an object on the graphic levels one step forward	
"One step back" Moves an object on the graphic levels one step back	

22 PC Setup Program

"Move" Opens a window with arrow buttons from moving objects one step at a time Single arrow: Move by 1 pixel Double arrow: Move by 10 pixels	
"Align left" Simultaneously aligns several highlighted objects along the left edge of the object highlighted first ^a	
"Align right" Simultaneously aligns several highlighted objects along the right edge of the object highlighted first ^a	
"Align top" Simultaneously aligns several highlighted objects along the top edge of the object highlighted first ^a	
"Align bottom" Simultaneously aligns several highlighted objects along the bottom edge of the object highlighted first ^a	

^a Several objects can be highlighted simultaneously by holding down the Shift key and left clicking with the mouse.

Background color

The background color on the level behind all objects and the background image can be selected in the Process screen Editor.

22 PC Setup Program


Background

The next level in front of the background color level is reserved for the background. Any image in the image list can be selected and displayed here in front of the background color level.

User-defined images can be imported into the image list. The images must be created in bitmap format. The dimensions of the Process screen are 316 × 182 pixels.

Open the "Background" dialog:

Only Setup > Process Screens > "Process screen 1" tab > "Background" button

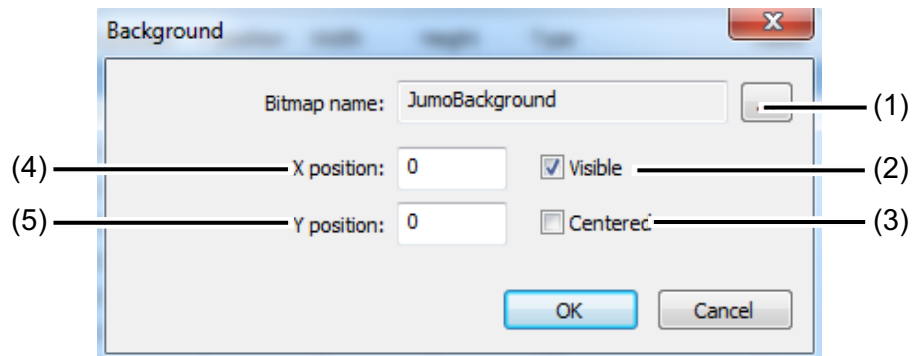

- (1) "Image List" button

This button opens a further dialog that is used to select an image as the background, and to import/export user-defined bitmaps into the image list.

⇒ **"Selecting an image as the background"**, page 372

⇒ **"Importing/exporting images"**, page 373

- (2) Show/hide the background in the Process screen to provide a better overview of the objects in the Process screen during editing
- (3) Center the background in the Process screen (the "Center" option has higher priority than the coordinate information)
- (4) X-coordinate of the top left corner of the background image
- (5) Y-coordinate of the top left corner of the background image

Selecting an image as the background

Step	Action
1	Open the image list Only Setup > Process Screens > "Process screen 1" tab > "Background" button > "Image List" button
2	Highlight the desired image in the list
3	Confirm by pressing "OK"


22 PC Setup Program

Importing/exporting images

Step	Action
1	Open the image list Only Setup > Process Screens > "Process screen 1" tab > "Background" button > "Image List" button
2	Import: Highlight an image in the list that you wish to overwrite with the new one and click the "Replace" button. Export: Highlight an image in the list that you wish to export and click the "Replace" button.
3	Import: In the Explorer window, select the new image file and click on "Open". Export: In the Explorer window, select the location where you wish to save the exported image, enter a file name and click on "Save".
4	The import/export process is now complete. You can close all windows that were opened in step 1 by pressing "OK" or "Cancel".

Tip: We recommend that you create an image that contains all static elements of your system representation and then use this as the background. The next step, all dynamic visualization elements are placed at the intended locations in the Process screen in the form of objects (e.g. pictograms for valves and pumps or analog displays).

Example: A Process screen for a CIP system is needed. In the first step, the representation of all static elements (pipes, tanks etc.) is created as a bitmap. The bitmap is imported into the image list and selected as the background. In the next subchapter (Chapter "Objects", page 374), objects are added to the sample Process screen.

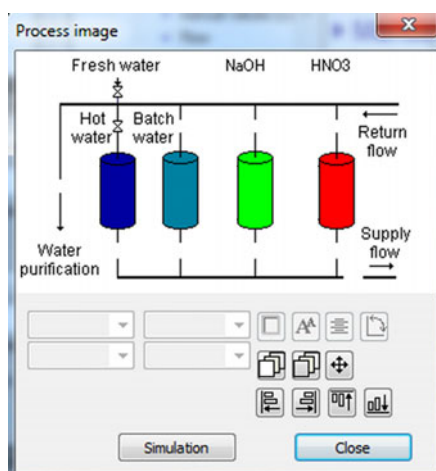

22 PC Setup Program

Objects

The object list of the Process screen Editor contains 100 empty objects. Double-clicking on an entry or clicking the "Edit" button in the Process screen Editor opens a dialog for configuring, designing, and formatting the corresponding object in detail. For greater clarity, the size, location in the Process screen, type, and visibility are shown in the list for each object.

The object number in the object list is also the display priority of an object. Objects with higher object numbers cover those with lower object numbers.

The buttons in the Process screen Editor can be used to copy, cut, insert, move, and delete object list entries.

⇒ Chapter "**Process screen Editor buttons**", page 369

Object types

Pictograms:

A binary signal has two images associated with it. Depending on the value of the binary signal, one of the two images is displayed.

Example: An indicator light needs to be visualized. The image of a green indicator light is displayed for "TRUE" and a gray image (light off) is displayed for "FALSE".

Configuration item	Selection/ setting option	Explanation
Visible	Checkmark in the checkbox	Checkmark set: Object is displayed Empty checkbox: Object is hidden
X position	0 to 315 pixels	X-coordinate of the top left corner of the pictogram
Y position	0 to 181 pixels	Y-coordinate of the top left corner of the pictogram
Digital signal	Selection from the binary selector	Binary signal for switching between the two images configured (see the following two lines)
Image Digital signal = TRUE	Selection from the image list	Image displayed when the binary signal = "TRUE" (on-signal)
Image Digital signal = FALSE	Selection from the image list	Image displayed when the binary signal = "FALSE" (Off-signal)

22 PC Setup Program

Analog signals:

The numerical value of an analog signal is displayed in the Process screen.

Configuration item	Selection/ setting option	Explanation
Visible	Checkmark in the checkbox	Checkmark set: Object is displayed Empty checkbox: Object is hidden
X position	0 to 315 pixels	X-coordinate of the top left corner of the pictogram
Y position	0 to 181 pixels	Y-coordinate of the top left corner of the pictogram
Width	1 to 316 pixels	Dimensions of the analog display
Height	1 to 182 pixels	
Analog signal	Selection from the analog selector	Analog signal source whose value is to be displayed
Background color	Selection from color palette	Background color of the analog display
Transparent	Checkmark in the checkbox	Hide the background color; only the numeric display is visible
Frame type	None Fine Bold Upper case Lower case	Selection of a frame format
Foreground color	Selection from color palette	Font color of the numeric display
Font size	12/13/15/24/33/37/48/ 64 pixels	Font size in the numeric display
Alignment	Left align Right align Centered	Character alignment in the numeric display
Object type	horizontal vertical	Orientation of the analog display
Decimal place	Auto, Fixed comma format	Decimal points in the display

22 PC Setup Program

Digital signals:

A binary signal has two plain texts associated with it. Depending on the value of the binary signal, one of the two plain texts is displayed.

Example: A manual / automatic selector switch needs to be visualized. Depending on the switch position, either "Manual mode" or "Automatic mode" text is displayed.

Configuration item	Selection/ setting option	Explanation
Visible	Checkmark in the checkbox	Checkmark set: Object is displayed Empty checkbox: Object is hidden
X position	0 to 315 pixels	X-coordinate of the top left corner of the pictogram
Y position	0 to 181 pixels	Y-coordinate of the top left corner of the pictogram
Width	1 to 316 pixels	Dimensions of the analog display
Height	1 to 182 pixels	
Digital signal	Selection from the Binary selection	Binary signal source for the Digital display
Background color	Selection from color palette	Background color of the analog display
Transparent	Checkmark in the checkbox	Hide the background color; only the numeric display is visible
Frame type	None Fine Bold Upper case Lower case	Selection of a frame format
Color (low)	Selection from color palette	Font color for binary value = 0
Text for low	up to 30 text characters	Text for binary value = 0
Color (high)	Selection from color palette	Font color for binary value = 1
Text for high	up to 30 text characters	Text for binary value = 1
Font size	12/13/15/24/33/37/48/ 64 pixels	Font size in the numeric display
Alignment	Left align Right align Centered	Character alignment in the numeric display
Object type	horizontal vertical	Orientation of the analog display

22 PC Setup Program

Universal display:

Display of configuration settings, e.g. units or identifiers of an internal analog signal source for the JUMO AQUIS touch S.

Configuration item	Selection/ setting option	Explanation
Visible	Checkmark in the checkbox	Checkmark set: Object is displayed Empty checkbox: Object is hidden
X position	0 to 315 pixels	X-coordinate of the top left corner of the pictogram
Y position	0 to 181 pixels	Y-coordinate of the top left corner of the pictogram
Width	1 to 316 pixels	Dimensions of the analog display
Height	1 to 182 pixels	
Analog signal	Selection from the analog selector	Analog signal source whose value is to be displayed
Background color	Selection from color palette	Background color of the analog display
Transparent	Checkmark in the checkbox	Hide the background color; only the numeric display is visible
Frame type	None Fine Bold Upper case Lower case	Selection of a frame format
Foreground color	Selection from color palette	Font color of the numeric display
Font size	12/13/15/24/33/37/48/ 64 pixels	Font size in the numeric display
Alignment	Left align Right align Centered	Character alignment in the numeric display
Object type	horizontal vertical	Orientation of the analog display
Display type	Description Scale start Scale end Unit Limit value alarm 1 Limit value alarm 2 Window range alarm 1 Window range alarm 2	Selection of the configuration setting for the selected analog signal that is to be displayed

22 PC Setup Program

Text:

Plain text for labeling of visualization elements.

Configuration item	Selection/ setting option	Explanation
Visible	Checkmark in the checkbox	Checkmark set: Object is displayed Empty checkbox: Object is hidden
X position	0 to 315 pixels	X-coordinate of the top left corner of the pictogram
Y position	0 to 181 pixels	Y-coordinate of the top left corner of the pictogram
Width	1 to 316 pixels	Dimensions of the analog display
Height	1 to 182 pixels	
Background color	Selection from color palette	Background color of the analog display
Transparent	Checkmark in the checkbox	Hide the background color; only the numeric display is visible
Frame type	None Fine Bold Upper case Lower case	Selection of a frame format
Foreground color	Selection from color palette	Font color of the numeric display
Font size	12/13/15/24/33/37/48/ 64 pixels	Font size in the numeric display
Alignment	Left align Right align Centered	Character alignment in the numeric display
Object type	horizontal vertical	Orientation of the analog display
Text	up to 30 text characters	Plain text for the identification field

Frames and rectangles:

Design elements for emphasizing or delimiting visualization elements of the Process screen. Rectangles are always transparent for objects. Every object is visible at all times regardless of the location of a rectangle in the object list.

Configuration item	Selection/ setting option	Explanation
Visible	Checkmark in the checkbox	Checkmark set: Object is displayed Empty checkbox: Object is hidden
X position	0 to 315 pixels	X-coordinate of the top left corner of the pictogram
Y position	0 to 181 pixels	Y-coordinate of the top left corner of the pictogram
Width	1 to 316 pixels	Dimensions of the analog display
Height	1 to 182 pixels	

22 PC Setup Program

Configuration item	Selection/ setting option	Explanation
Color	Selection from color palette	For rectangles only: Fill color of the rectangle (transparent for objects)
Frame type	None Fine Bold Upper case Lower case	Selection of a frame format



Bar graph:

Vertical or horizontal bar for visualizing analog values.

Configuration item	Selection/ setting option	Explanation
Visible	Checkmark in the checkbox Empty checkbox: Object is hidden	Checkmark set: Object is displayed Empty checkbox: Object is hidden
X position	0 to 315 pixels	X-coordinate of the top left corner of the pictogram
Y position	0 to 181 pixels	Y-coordinate of the top left corner of the pictogram
Width	1 to 316 pixels	Dimensions of the analog display
Height	1 to 182 pixels	
Transparent	Checkmark in the checkbox	Hide the background color; only the bar is visible
Frame type	None Fine Bold Upper case Lower case	Selection of a frame format
Color (off)	Selection from color palette	Background color of the bar graph display
Color (on)	Selection from color palette	Bar color in the bar graph display
Object type	horizontal vertical	Orientation of the bar graph display

22 PC Setup Program

Example: Objects now need to be added to the sample Process screen from the previous chapter (Chapter "Background", page 372). Valves and pumps are represented by pictograms. Two analog displays serve as the process value display.

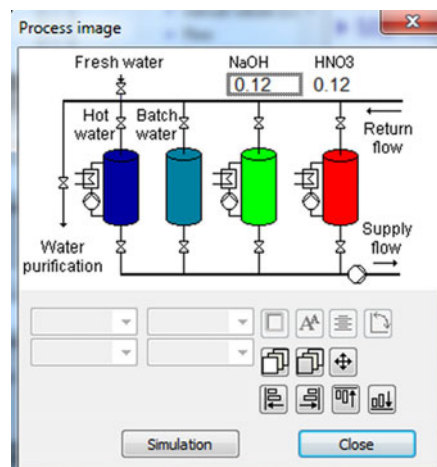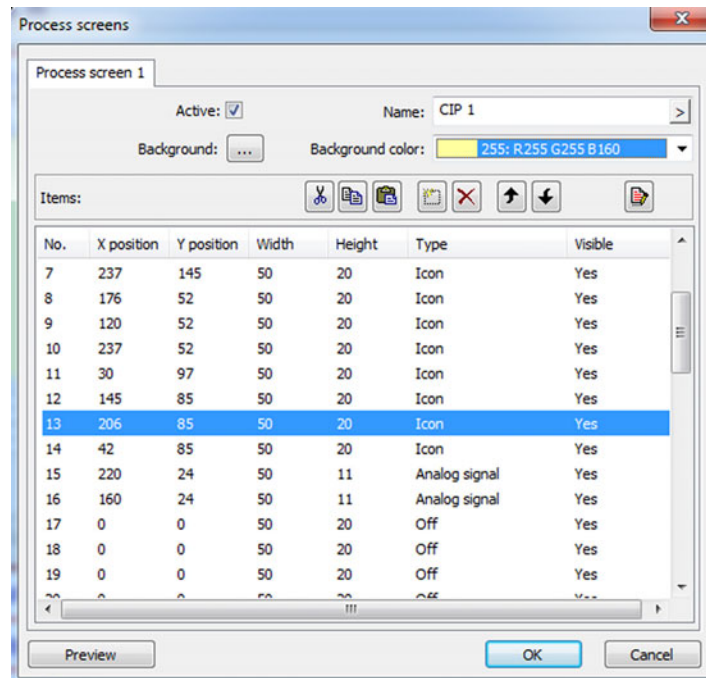

22.8.12 Email



NOTE


The prerequisite for the e-mail function to operate is that the settings for the e-mail server and Ethernet are configured correctly. In particular, the DNS server and standard gateway entries must be correct.

⇒ Chapter "Setting up the e-mail server", page 383

⇒ Chapter 10.19 "Ethernet", page 210

The JUMO AQUIS touch S can be configured for event-controlled sending of e-mail messages. Up to 5 e-mail templates can be saved in the JUMO AQUIS touch S. Sending of the e-mail is triggered by a rising edge of the binary signal in the "Alarm signal" field.

Typical networking and company networks

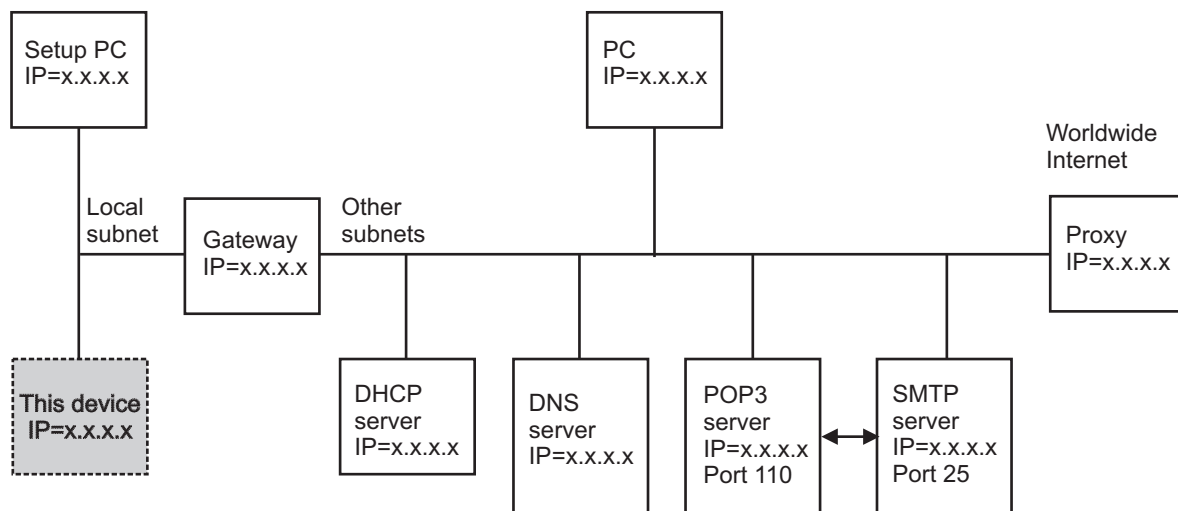

Function of the individual nodes

Gateway:

Separates local subnets from each other and thus filters the packets. Not all packets are received in every subnet. Packets from outside the local subnet must be addressed to the gateway.

DHCP server:

Can automatically assign an IP address, subnet mask, and gateway address to other nodes when switching on. These parameters can also be entered manually; a DHCP server is then no longer needed.

DNS server:

Converts symbolic names into IP addresses. Example: the query "www.name.de" will generate the response "www.name.de has IP = 10.12.32.45".

POP3 server:

used to read e-mails received in an e-mail account. The POP3 mail account can be accessed after log-in entering user name and password. A successful log-in process often releases the transmission authorization of a connected SMTP server.

22 PC Setup Program

SMTP server:

Used to send e-mails. In many networks, the authorization to send e-mails via a mail account must be released by previously logging in at the corresponding POP3 server.

Proxy:

Serves as a gateway from the local company network to the worldwide Internet. It is also used for the conversion of "local" IP addresses (used in the company network) to "one-time" IP addresses (used on the Internet). The device software cannot address a proxy! However, there are also "transparent proxies" that make it possible to address IP addresses worldwide without a special protocol.

SMS gateway

If present, e-mail messages can be redirected to your mobile phone through the SMS gateway of your wireless service provider. For e-mail forwarding through an SMS gateway, contact your wireless service provider.

Setting up e-mail templates

Open Settings:

Only Setup > e-mail (double-click) > "e-mail 1 to 5" tab

The following table explains the settings for event-controlled sending of e-mails.

Configuration point	Selection/ setting option	Explanation
E-mail addresses 1 to 3	Enter a valid e-mail address	Up to 3 e-mail addresses to each of which a particular e-mail is sent can be entered in each e-mail template. Sending is triggered by the indicated alarm signal.
Alarm signal	Select from the binary selection	A rising flank of the selected alarm signal triggers sending of the particular e-mail to the listed e-mail addresses.
E-mail subject	Input text	Text for the subject line of each e-mail
E-mail text	Input text	Text of each e-mail

Setting up the e-mail server

To send messages, you must provide the information for the e-mail server of your e-mail service provider. Open the server settings window and enter the information here. You can obtain the server settings from your e-mail service provider or network administrator.

22 PC Setup Program

Open the dialog for the server settings:
Only Setup > e-mail (double-click) > "e-mail Server" button

The screenshot shows a dialog box titled "E-mail server". It has a standard Windows-style title bar with a close button. Inside, there are several labeled text boxes and a dropdown menu. The "Authentication" dropdown is set to "SMTP-After POP". The "E-mail user name" box contains "user", "E-mail password" contains "password", "Mailserver URL POP3" contains "pop3.example.net", "Mailserver URL SMTP" contains "smtp.example.net", and "E-mail sender" contains "device@example.net". Below these fields is a "Caution:" section with a warning message: "Characters other than A..Z, a..z, 0..9, -, _, @, ., may cause problems!". At the bottom right are "OK" and "Cancel" buttons.

The following table explains the settings for the e-mail server.

Configuration point	Selection/ setting option	Explanation
Authentication	None SMTP-After-POP SMTP-Auth	Authentication process (login) for the e-mail server You receive the configuration data for the e-mail server from the operator of the e-mail service that you use to send e-mail.
E-mail user name	Input text	User name of the e-mail account for the device for authentication (logging on to the e-mail servers)
E-mail password	Input text	Password of the e-mail account for the device for authentication (logging on to the e-mail servers)
Server URL POP3	Input text	URL (Internet address) or IP address of the incoming mail server (POP3 server) e. g. pop.provider.com
Server URL SMTP	Input text	URL (Internet address) or IP address of the outgoing mail server (SMTP server) e. g. smtp.provider.com
E-mail sender	Input text	E-mail address of the e-mail account for the device e. g. Anlage@provider.com




NOTE

An e-mail server within the company network must be entered (not on the Internet or accessible without proxy addressing)! This mail server should be able to also forward e-mails to the Internet.

Procedure for sending an e-mail over the Internet

To better understand the process of sending an e-mail and correct any errors in the configuration of e-mail servers and Ethernet, a graphical representation of the processes is presented in the following.

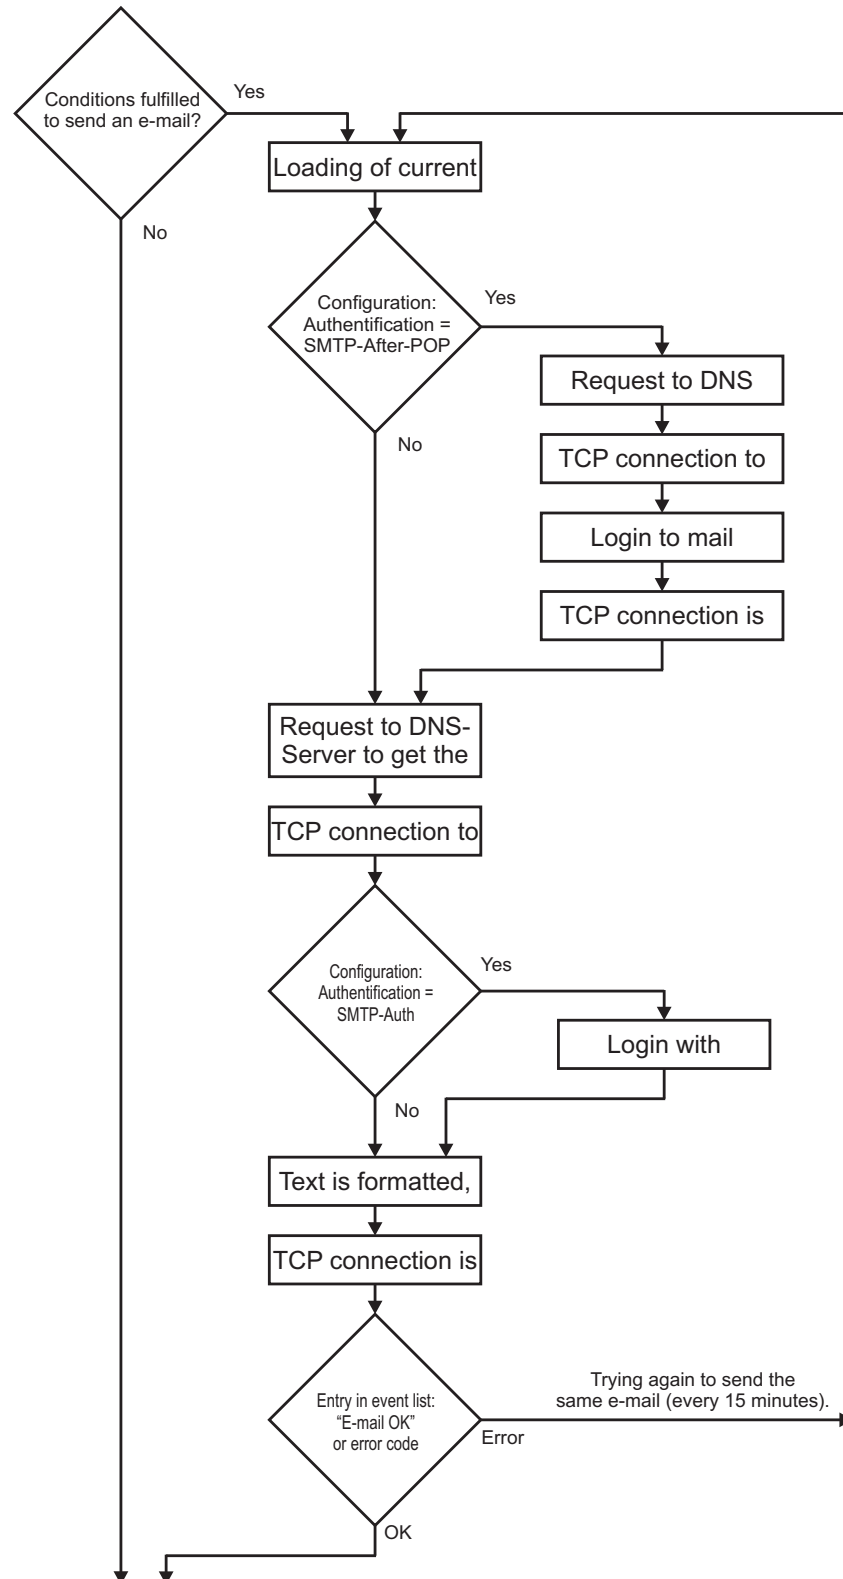

22 PC Setup Program

Checking the e-mail function

Proper execution of the e-mail sending process can be checked in the event list. When an e-mail is sent successfully, a corresponding entry is made in the event list. Entries are made in the event list even in the case of a fault and can be helpful when diagnosing a problem.

⇒ Chapter 8.3 "Alarm/Event list", page 108

22.8.13 Web server

As an alternative to online visualization, the webserver can be activated with a customer-specific website. If the webserver is activated, its website automatically replaces the online visualization.

⇒ Chapter 8.7 "Online visualization", page 130



NOTE


Creating websites requires the appropriate knowledge about website programming and specifying the webserver. In the JUMO AQUIS touchS.

Customer-specific websites can be imported into the configuration of the webserver. To edit an already saved website, it can be exported. Data from the memory of the AQUIS touchS can also be displayed in the web document.

22 PC Setup Program

Open Settings:

Only Setup > Webserver Configuration (double-click)

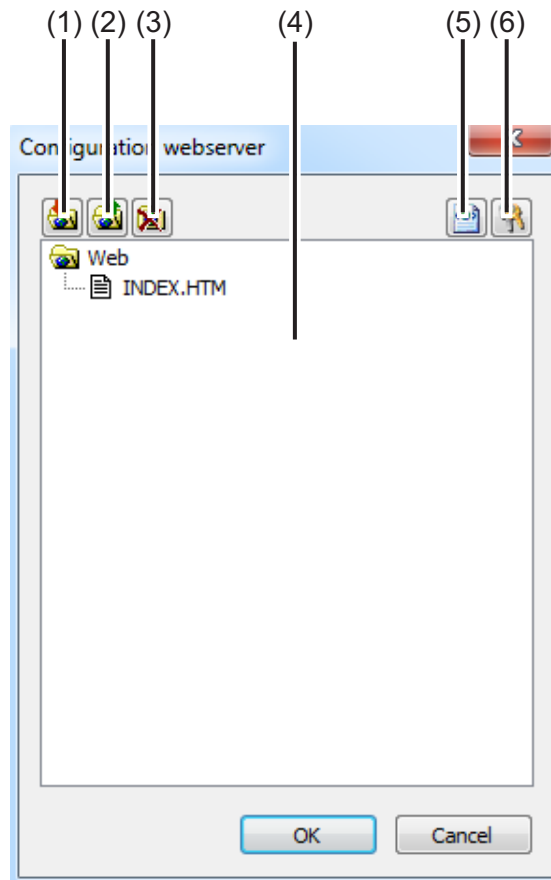

- (1) "Import Web" button
- (2) "Export Web" button
- (3) "Delete Web" button
- (4) Window with tree view of the saved website
- (5) "HTML Tags" button
Opens a dialog for copying the IDs of internal data from the device memory
These IDs are needed to request the internal data from the web document.
- (6) "Security" button
Opens a dialog to configure the webserver password

22 PC Setup Program

22.9 Diagnostics

22.9.1 Calibration logbooks

The calibration logbooks for all analysis inputs can be displayed on both the device and under this menu item in the JUMO PC setup program.

⇒ Chapter 12.3 "Calibration logbook", page 235

22.9.2 Digital sensor calibration logbooks

The calibration logbooks for all digital sensors can be displayed on both the device and under this menu item in the JUMO PC setup program.

⇒ Chapter 12.3 "Calibration logbook", page 235

22.9.3 Digital sensor connection list

If the JUMO AQUIS touch S must be replaced, e.g. because of a defect in the device, and a backup of the configuration is available as a setup file, the configuration can be loaded into the new device. However, the original links of the digital sensors to the corresponding inputs for the digital sensors must be reestablished manually. The information required to do this can be displayed with the PC setup program. The setup file backup from the original device contains the list of link data. Open this setup file and click in the navigation area of the PC setup program:


Diagnosis > Digital Sensor Connection List

The link data is displayed in this list. By comparing this data, the sensors can be reassigned to their original inputs and linked manually.

⇒ Chapter 8.2.7 "Digital sensors", page 103

22 PC Setup Program

Procedure for linking digital sensors following device replacement:

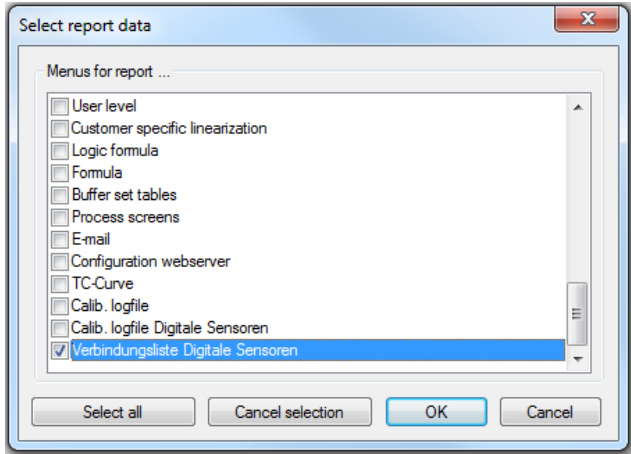Step	Action
1	Using the JUMO PC setup program, load the originally backed up configuration into the device.
2	Press the "Print" button or File > Print
3	In the print selection list, select "Digital Sensor Connection List".
4	Print out the list (confirm the selection with "OK") 
5	On the device, open the menu Device Menu > Digital Sensors, scan, and link all connected sensors. ⇒ Chapter 8.2.7 "Digital sensors", page 103

22 PC Setup Program

22.10 Online parameters

To set online parameters in the device, the software accesses the device memory directly. The device must thus be connected via a USB or Ethernet port to the PC on which the JUMO PC setup program is installed, and a connection between the JUMO PC setup program and device must be established.


⇒ "Configuring and parameterizing", page 349

22.10.1 Date and time

Here, the current date and the current time in the device are obtained from the JUMO PC setup program.

Open Settings:

Online Parameters > Date and Time (double-click)

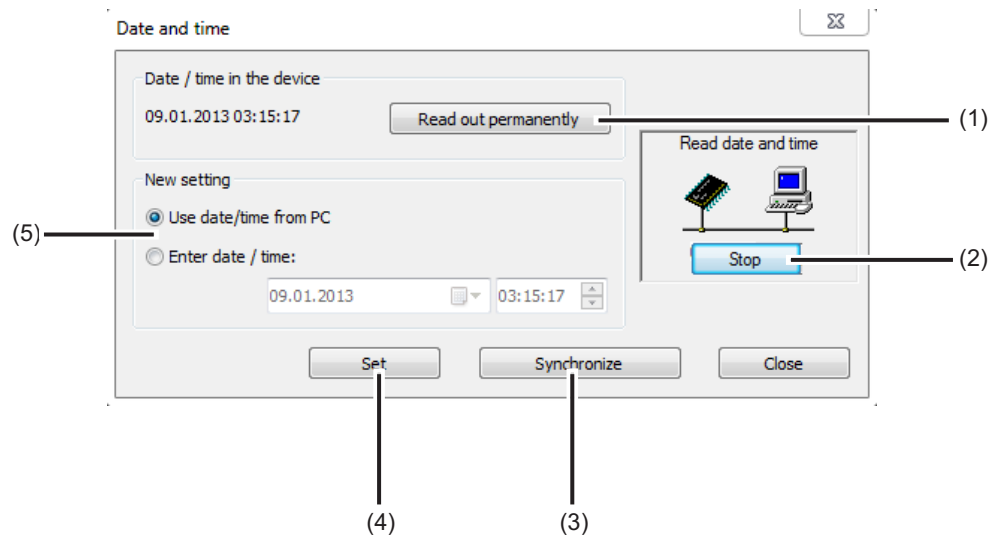

- (1) "Read Continuously" button
Starts continuous synchronization of the date / time in the software with the device
- (2) "Stop" button
Stops continuous synchronization of the date / time in the software with the device
- (3) "Synchronize" button
Synchronizes the device time with the time set in the PC setup program
The time in the device is matched to the set time as long as the difference is not more than 30 s. This function is used primarily to synchronize the PC time with the device time.
- (4) "Set" button
Sets the time in the device to match the setting in the PC setup program
- (5) Time setting
The PC time can be used or a time may be entered. The specified time is set in the device by clicking the "Synchronize" or "Set" button.


22 PC Setup Program

22.10.2 Screenshot

This function can be used to transfer the current display on the device to the PC. Screenshots can be printed out or saved on the PC in common image formats, e.g. bitmap, tiff, JPEG etc.

Open:

Online Parameters > Screenshot (double-click)

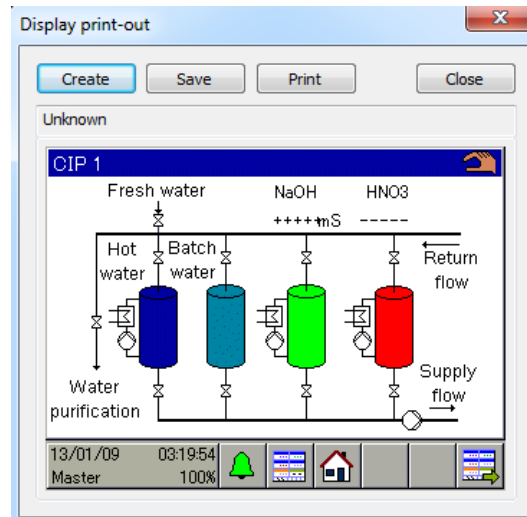

22.10.3 Ethernet

This menu item in the online parameters permits configuration of the Ethernet interface from the PC setup program.

Open Settings:

Online Parameters > Ethernet (double-click)

The Ethernet settings are explained in the configuration.

⇒ See chapter 10.19 "Ethernet", page 210



NOTE

The Ethernet settings are entered in the online parameters in the JUMO PC setup program.

The IP configuration of the device can also be changed from the PC if the PC and device are connected via Ethernet. In this case, changing the IP address or subnet mask can interrupt the PC-device connection.

22 PC Setup Program

22.10.4 Approval of extra codes

This function allows the customer to enable extra codes in the device software (recording function, math, and logic module). After purchasing an extra code in the device software, you must generate a code number with the aid of the PC setup program. This is needed by JUMO to generate an individual activation code that you as a customer need to enable the desired device functions. After opening "Enable extra codes", you have 3 options available:

- **Generate code number**
If you wish to purchase an extra code in the device software, you must generate a device- and option-specific code number and send it to JUMO. After it receives this code number, JUMO provides you with the activation code with which you can enable the desired option.
- **Enter activation code**
After you have sent the code number for the desired extra code to JUMO, you receive the activation code for this option. Following correct entry of the activation code, this option is available for use in the device.
- **Reset the extra codes**
All software-based extra codes in your device can be deactivated with this option.

Open "Enable Extra Codes":

Online Parameters > Enable Extra Codes (double-click)

22.10.5 Deleting internal measurement data

Upon executing this function, data are **deleted completely** and **permanently** from the measurement memory of the data monitor and recording function. Following this, recording of measurement data is started anew.

Delete internal measurement data:

Online Parameters > Delete Internal Measurement Data (double-click)

22.10.6 Adjusting / Testing

**CAUTION!**

When "Adjusting / Testing" is opened, the outputs assume undefined states. For this reason, "Adjusting / Testing" may not be opened during operation of equipment being controlled by the JUMO AQUIS touch s.

Numerous testing functions that are available in similar form in the device settings menu at the "Functional level" or under "Device info" can be found under "Adjusting / Testing". The contents and functions of the individual tabs in the "Adjusting / Testing" window are described in the following.

Hardware / Software

This is used to query the version information for the device software and hardware, e.g. which optional boards are installed.

Open:

Online Parameters > Adjusting / Testing (double-click) > Hardware / Software tab

Calibration constants

Displays characteristic curve data (e. g calibration values for analysis inputs) for each analog input and output.

Open:

Online Parameters > Adjusting / Testing (double-click) > Calibration Constants tab


22 PC Setup Program

Analog inputs

Proper operation of the analog inputs of the device can be checked here. In addition to selecting the analog input and signal type, the line frequency of the power supplied to the device must be set in order to test an analog input correctly. Pressing the "Test" button displays a connection diagram for the test signal. Ensure that a valid test signal acc. to the connection diagram is present at the input. Confirming the connection diagram starts the test. The measuring values coming from the analog input concerned can be viewed in the actual-value display and in the measuring value table. To stop the test, press the "Stop" button.

Open:

Online Parameters > Adjusting / Testing (double-click) > Analog Inputs tab

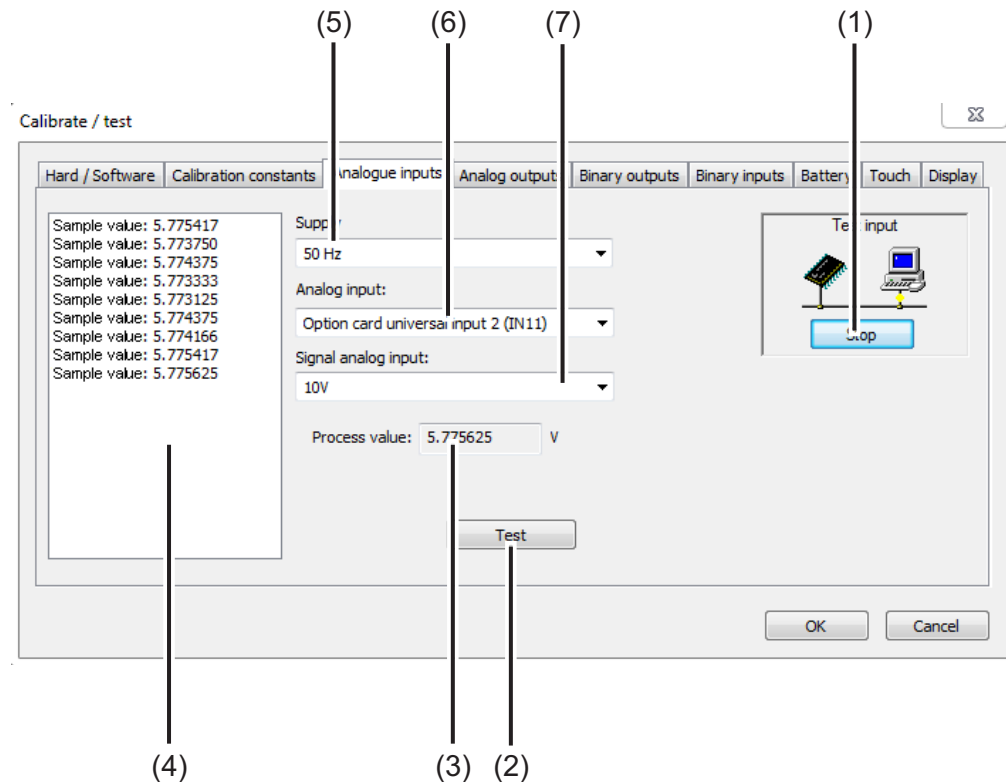

- (1) "Stop" button
Stops a test
- (2) "Test" button
Starts a test
- (3) Measured value display
Displays the actual analog value at the input
- (4) Measuring value table
Lists the measuring values over the course of time
- (5) "Supply frequency" setting
- (6) Selection of the analog input to test
- (7) Selection of the signal type to test


22 PC Setup Program

Analog outputs

Proper operation of the analog outputs of the device can be checked here. A desired output value can be specified in the "Setpoint value" field for the selected output and signal type set. Pressing the "Test" button starts the test. During the test, a window for monitoring the output signal is displayed. Here, you can enter the actual output value that you may have obtained with a measuring instrument as a way to check the output signal value. The test is stopped by pressing the "Stop" button.

Open:

Online Parameters > Adjusting / Testing (double-click) > Analog Outputs tab

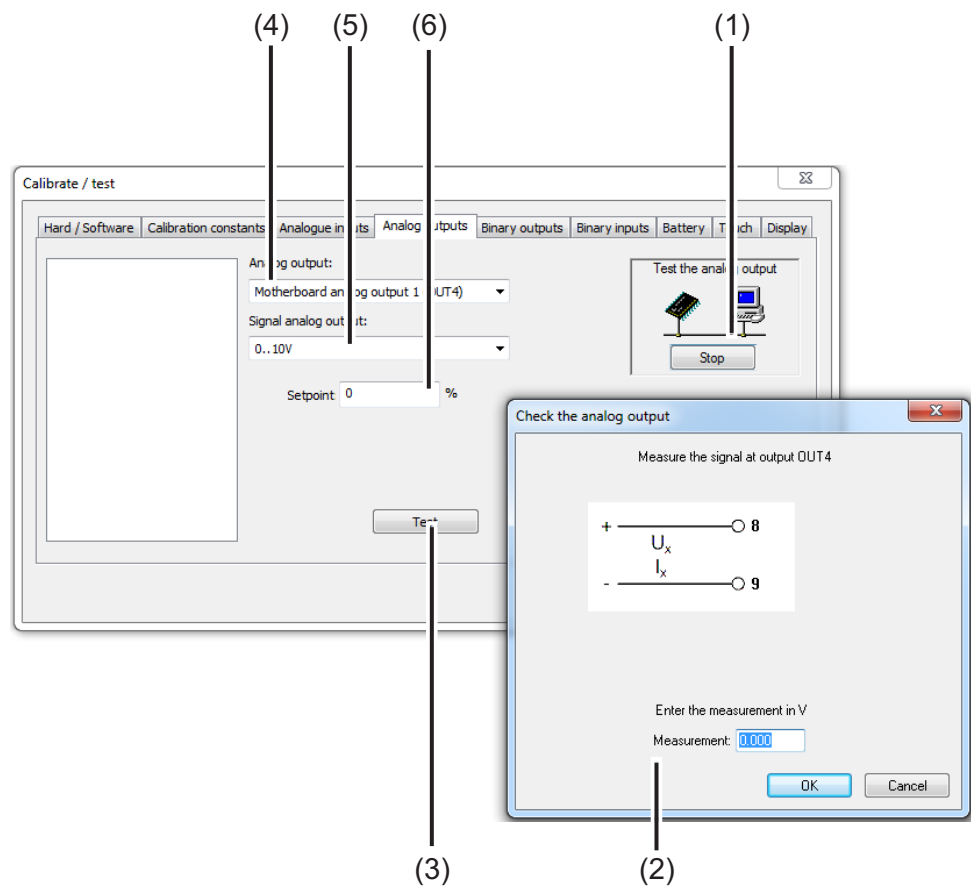

- (1) "Stop" button
Stops a test
- (2) Dialog window for checking the measuring value during the test
- (3) "Test" button
Starts a test
- (4) Selection of the analog output to test
- (5) Selection of the signal type to test
- (6) Setpoint value
Desired output value during the test


22 PC Setup Program

Binary outputs

Proper operation of the Digital outputs of the device can be checked here. After setting checkmarks in the option fields, the Digital outputs of the device can be controlled manually via the PC setup program. The "Set All" and "Delete All" buttons allow all Digital outputs to be switched on and off at once.

Open:

Online Parameters > Adjusting / Testing (double-click) > Digital Outputs tab

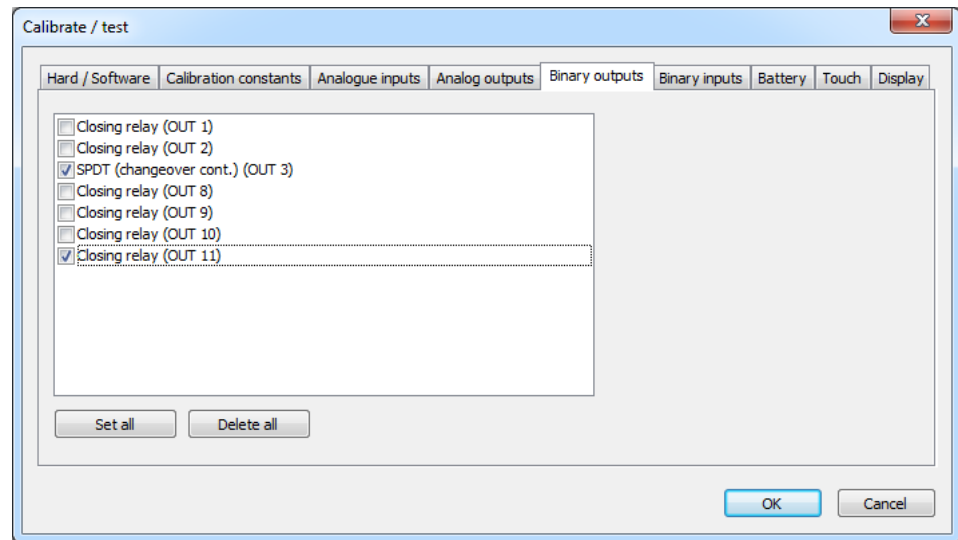

22 PC Setup Program

Digital inputs

Proper operation of the Digital inputs of the device can be checked here.


The "Read Continuously" button starts a continuous test that can be stopped by pressing the "Stop" button. During this test, the binary values of the device inputs are read continuously and displayed in acc. with the checkmarks in the option fields.

Pressing the "Read Once" button captures and displays the momentary binary values of the inputs.

By clicking on individual binary input entries, the binary value of the entry can be updated selectively.

Open:

Online Parameters > Adjusting / Testing (double-click) > Digital Inputs tab

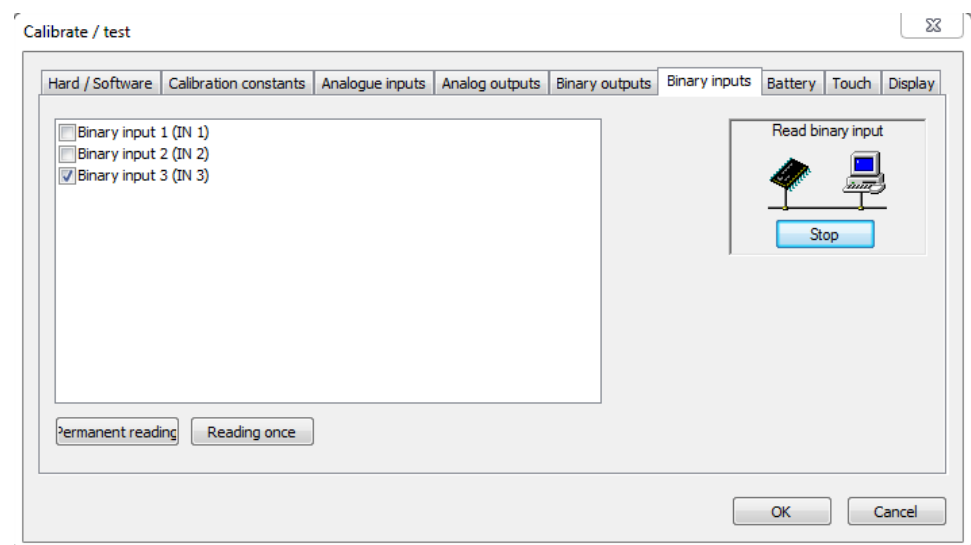

22 PC Setup Program

Battery

The **voltage of the buffer battery** and the **circuit board temperature** in the device are displayed in the JUMO PC setup program.

Open:

Online Parameters > Adjusting / Testing (double-click) > Battery tab



CAUTION!

A buffer battery is built into the device. Its purpose is to maintain data when the device is switched off or if the voltage supply is interrupted. If the battery approaches the end of its operating life (approximately 7 years) then a battery prealarm will indicate that status. When the battery is empty a battery alarm will indicate that status. The battery must be exchanged before it is empty. The battery must be exchanged by the JUMO Service department! In this case, send in the device!

Touch

In this view, touchscreen calibration (see "Calibrating the touchscreen", page 103) can be started from the JUMO PC setup program. In addition, the calibration data for the touchscreen are displayed in detail. These are used to diagnose problems with touch operation together with JUMO Service.

Open:

Online Parameters > Adjusting / Testing (double-click) > Touch tab

Display

Four different test images can be activated on the device display on this tab. These are used to diagnose display problems together with JUMO Service.

Open:

Online Parameters > Adjusting / Testing (double-click) > Display tab

Various process values

Process data are selected here for display in the online window.

In addition to tabs with standard selections of process data, the online window contains the "Selected Process Data" tab. The process data selected here are displayed on this tab.



NOTE

Process data from the internal device memory can be displayed in real time in the online window.

⇒ Chapter "Online data", page 322

A requirement for real-time display of process data is an existing connection between the JUMO PC setup program and the device.

23.1 Analog inputs base unit

23.1.1 Temperature measurement input (IN 4)

Probe-/Signal type	Connection type	Measuring range	Measuring accuracy	Ambient temperature influence
Pt100 DIN EN 60751	2-wire/3-wire	-200 to +850 °C	$\leq 0.05\%$ of MR ^a	≤ 50 ppm/K
Pt1000 DIN EN 60751	2-wire/3-wire	-200 to +850 °C	$\leq 0.1\%$ of MR ^a	≤ 50 ppm/K
RTD temperature probe with customer-specific characteristic line ^b				
up to 400 Ω	2-wire/3-wire	0 to 400 Ω	$\leq 0.1\%$ of R _{max} ^c	≤ 100 ppm/K
to 4000 Ω	2-wire/3-wire	0 to 4000 Ω	$\leq 0.1\%$ of R _{max} ^c	≤ 100 ppm/K
Sensor lead resistance	maximal 30 Ω per line with 3-wire circuit			
Lead compensation	Not required for 3-wire circuit. With a 2-wire circuit, lead calibration can be executed at the respective input by means of an measured value correction with the aid of the "Offset" setting.			

^a MR: measuring range span

^b Customer-specific linearization can be used to enter a sensor characteristic line.

^c R_{max}: maximal resistance across the measuring range (400 Ω , or 4000 Ω)

23 Technical data

23.1.2 Temperature measurement input (IN 5)

Probe-/Signal type	Connection type	Measuring range	Measuring accuracy	Ambient temperature influence
Pt100 DIN EN 60751	2-wire/3-wire	-200 to +850 °C	≤ 0.05 % of MR ^a	≤ 50 ppm/K
Pt1000 DIN EN 60751	2-wire/3-wire	-200 to +850 °C	≤ 0.1 % of MR ^a	≤ 50 ppm/K
Resistance transmitter	3-wire	0 to 100 kΩ	0.5 % of R _{Tot} ^b	≤ 100 ppm/K
RTD temperature probe with customer-specific characteristic line ^c				
up to 400 Ω	2-wire/3-wire	0 to 400 Ω	≤ 0.1 % of R _{max} ^d	≤ 100 ppm/K
to 4000 Ω	2-wire/3-wire	0 to 4000 Ω		
to 100 kΩ	2-wire/3-wire	0 to 100 kΩ		
NTC 8k55	2-wire/3-wire	0 to 150 °C	≤ 0.1 % of R _{max} ^d	≤ 100 ppm/K
NTC 22k	2-wire/3-wire	0 to 150 °C		
Sensor lead resistance	maximal 30 Ω per line with 3-wire circuit			
Lead compensation	Not required for 3-wire circuit. With a 2-wire circuit, lead calibration can be executed at the respective input by means of an measured value correction with the aid of the "Offset" setting.			

^a MR: measuring range span

^b R_{Tot}: total resistance of the resistance transmitter/Resistance potentiometer

^c Customer-specific linearization can be used to enter a sensor characteristic line.

^d R_{max}: maximal resistance across the measuring range (400 Ω , 4000 Ω or 100 k Ω)

23.1.3 Universal input (IN 6)

Signal type	Measuring range	Measuring accuracy	Ambient temperature influence
Current signal	0(4) to 20 mA	0.1% of MR ^a	100 ppm/K

^a MR: measuring range span

23.1.4 Measuring circuit monitoring base unit

Inputs	Underrange/ overrange
Temperature input	Yes
Universal input (current signal)	Yes

23.2 Analog inputs optional boards

23.2.1 Universal input (IN 11, IN 12)

Probe-/Signal type	Connection type	Measuring range	Measuring accuracy	Ambient temperature influence
Pt100 DIN EN 60751	2-wire/3-wire	-200 to +850 °C	$\leq 0.05\%$ of MR ^a	≤ 50 ppm/K
Pt1000 DIN EN 60751	2-wire/3-wire	-200 to +850 °C	$\leq 0.1\%$ of MR ^a	≤ 50 ppm/K
Resistance transmitter	3-wire	100 to 4000 Ω	0.5% of R _{Tot} ^b	≤ 100 ppm/K
RTD temperature probe with customer-specific characteristic line ^c				
up to 400 Ω	2-wire/3-wire	0 to 400 Ω	$\leq 0.1\%$ of R _{max} ^d	≤ 100 ppm/K
to 4000 Ω	2-wire/3-wire	0 to 4000 Ω	$\leq 0.1\%$ of R _{max} ^d	≤ 100 ppm/K
Voltage signal	-	0 to 10 V	0.2% of MR ^a	100 ppm/K
Current signal	-	0(4) to 20 mA	0.1% of MR ^a	100 ppm/K
Sensor lead resistance ^e	maximal 30 Ω per line with 3-wire circuit			
Lead calibration ^e	Not required for 3-wire circuit. With a 2-wire circuit, lead calibration can be executed at the respective input by means of an measured value correction with the aid of the "Offset" setting.			

^a MR: measuring range span

^b R_{Tot}: total resistance of the resistance transmitter/Resistance potentiometer

^c Customer-specific linearization can be used to enter a sensor characteristic line.

^d R_{max}: maximal resistance across the measuring range (400 Ω or 4000 Ω)

^e Specification does not apply for standard signals

23.2.2 Analysis input: pH/Redox/NH₃

Measurand	Measuring range	Temperature compensation	Measuring accuracy	Ambient temperature influence
pH-value (standard electrode)	-2 to +16 pH	-10 to +150 °C	$\leq 0.3\%$ of MR ^a	0.2%/10 K
pH-value (ISFET electrode)	-2 to +16 pH	through electrode ^b		
Redox voltage	-1500 to +1500 mV	None		
NH ₃ (ammonia)	0 to 20000 ppm	-10 to +150 °C		

^a MR: measuring range span

^b ISFET electrodes supply a temperature-compensated pH-measured value.

23 Technical data

23.2.3 Analysis input: CR (resistive conductivity)

Units	$\mu\text{S}/\text{cm}$ mS/cm $\text{k}\Omega \times \text{cm}$ $\text{M}\Omega \times \text{cm}$
Display ranges^a	0.0000 to 9.9999 00.000 to 99.999 000.00 to 999.99 0000.0 to 9999.9 00000 to 99999
Temperature compensation	TC-linear, natural water DIN EN 27888, natural water with expanded range, TDS ^b , ASTM D-1125-95 for neutral (NaCl), acid (HCl) and alkali (NaOH) impurities
Cell constant	0.01 to 10 cm^{-1}
Measuring range selection^c	4 configurable measuring ranges
Measuring accuracy	$\leq 0.6\%$ of MR ^d $0.3 \mu\text{S} \times \text{cell constant (C)}$
Ambient temperature influence	0.2%/10 K

^a The display range is scalable. The Comma format is freely configurable. In addition, an automatic Comma format can be set.

^b TDS (Total Dissolved Solids)

^c In the Configuration up to 4 different measuring ranges with separate display range limits, units, temperature compensation methods, and alarm functions can be configured. The respective active measuring range is selected via binary signals.

^d MR: measuring range span

23.2.4 Analysis input: Ci (conductivity, inductive)

Units	µs/cm ms/cm
Measuring/display ranges^a	0.0000 to 9.9999 00.000 to 99.999 000.00 to 999.99 0000.0 to 9999.9 00000 to 99999
Temperature compensation	TC linear ^b TC curve natural water natural water with expanded temperature range NaOH 0 to 12% NaOH 25 to 50% HNO ₃ 0 to 25 % HNO ₃ 36 to 82 % H ₂ SO ₄ 0 to 28 % H ₂ SO ₄ 36 to 85 % H ₂ SO ₄ 92 to 99% HCl 0 to 18 % HCl 22 to 44 %
Cell constant	4.00 to 8.00 cm ⁻¹
Measuring range selection^c	4 configurable measuring ranges
Measuring accuracy	for 0 to 999 µS/cm: 1.5% of the MRE ^d for 1 to 500 mS/cm: 1% of the MBE ^d for 500.1 to 2000 mS/cm: 1.5% of the MBE ^d
Ambient temperature influence	0.1 %/K

^a The display range is scalable. The Comma format is freely configurable. In addition, an automatic Comma format can be set.

^b TC: temperature coefficient

^c In the Configuration up to 4 different measuring ranges with separate display range limits, units, temperature compensation methods and alarm functions can be configured. The respective currently active measuring range is selected via binary signals.

^d MRE: Measuring range end value

23 Technical data

23.2.5 Temperature compensations

Compensation type	Compensation range
TC linear ^a	-50 to +250 °C
TC curve	-50 to +250 °C
TDS	-50 to +250 °C
natural water according to DIN EN 27888	0 to 36 °C
natural water with expanded temperature range ^b	0 to 100 °C
ASTM D-1125-95 (neutral, alkaline, and acidic impurities)	0 to 100 °C
NaOH 0 to 12 %	0 to 90 °C
NaOH 25 to 50 %	10 to 90 °C
HNO ₃ 0 to 25 %	0 to 80 °C
HNO ₃ 36 to 82 %	-20 to +65 °C
H ₂ SO ₄ 0 to 28 %	-17 to +104 °C
H ₂ SO ₄ 36 to 85 %	-17 to +115 °C
H ₂ SO ₄ 92 to 99 %	-17 to +115 °C
HCl 0 to 18 %	10 to 65 °C
HCl 22 to 44 %	-20 to +65 °C

^a TC: temperature coefficient

^b The temperature compensation "natural water with expanded temperature range" extends beyond the standardized temperature thresholds of DIN EN 27888.

23.2.6 Measuring circuit monitoring, optional boards

Input/Sensor	Underrange / overrange	Short circuit/ sensor break	open circuit	Special features
pH-value (glass electrode)	Yes	Configurable Impedance measurement ^a	Configurable Impedance measurement ^a	-
pH-value (ISFET)	Yes	No ^b	No ^b	-
Resistive conductivity	Yes	No ^b	Configurable	Only with 4-wire circuit ^a
Inductive conductivity	Yes	No ^b	No ^b	-
Universal input for connection of: voltage/current signal, RTD temperature probe	Yes	No ^b	No ^b	-
Universal input for connection of: resistance transmitter	No ^b	No ^b	No ^b	-

^a With impedance monitoring and detection of deposits, the sensor alarm is tripped in case of a fault. Monitoring via impedance measurement can also be activated.

The following points should be observed to ensure correct function:

Impedance measurements are possible only with glass-based sensors.

Sensors must be connected directly to an analysis input for pH/Redox/NH₃ on the device.

Impedance converters must not be installed in the measuring circuit.

The maximal admissible cable length between sensor and device is 10 m.

Liquid resistance has a direct impact on the measurement result. It is therefore advisable to activate the impedance measurement in liquids at a minimum conductivity of approx. 100 µS/cm.

^b Errors in the measuring circuit (short circuit or line break) lead to display errors (underrange or overrange or inadmissible value).

23 Technical data

23.3 Analog outputs of base unit and optional boards

Signal type	Signal range	Admissible load resistance	Accuracy	Ambient temperature influence
Voltage signal	0 to 10 V	> 500 Ω	$\leq 0.25 \%$	≤ 100 ppm / K
Current signal	0/4 to 20 mA	< 450 Ω	$\leq 0.25 \%$	≤ 100 ppm / K

23.4 Digital inputs base unit

Description	Input frequency ranges	Min. pulse duration		Signal type	Switching thresholds ^a	
		On	Off		On	Off
IN 1 ^b	≤ 1 Hz	300 ms	300 ms	Configurable as: potential-free contact, or ext. voltage supply (maximal 28 V)	> 8 V > 1.8 mA	< 5 V < 1.2 mA
IN 2 to 3 ^{b,c} Switching signal	≤ 1 Hz	30 μ s	30 μ s			
IN 2 to 3 ^{b,c} Flow	3 to 300 Hz 300 Hz to 10 kHz	30 μ s	30 μ s			

^a This specification is relevant only if the Ext. voltage supply is selected under the "Contact" point in the Configuration. Sensors and transmitters should be supplied from voltage supply outputs on the JUMO AQUIS touch S. An externally supplied voltage signal must not have a voltage over 28 V.

^b All digital inputs IN 1 to 3 are suitable for connecting proximity switches. Recommended types are: Wachendorff P2C2B1208NO3A2 and Balluff BES M12EG-PSC80F-BP03.

^c Binary inputs IN 2 and IN 3 can be used for impeller flow-through sensors (water meters) or magnetic-inductive flow-through meters (square-wave signal), for example. The input frequency depends on the configured measurement principle in the flow function.

23.5 Digital inputs optional boards

Max. number of retrofittable digital inputs	Max. pulse frequency	Min. pulse duration		Signal type
		On	Off	
max. 2 optional boards with 3 digital inputs each	1 Hz	300 ms	300 ms	Potential-free contact

23.6 Digital outputs, power supply unit board

Description	Switching output	Ampacity at resistive load	Contact life ^a
OUT 1	Relay, normally open contact	3 A at AC 250 V	150,000 switching cycles
OUT 2	Relay, normally open contact		
OUT 3	Relay changeover contact		

^a The maximal ampacity of the contacts must not be exceeded.

23.7 Digital outputs, optional boards

Optional card	Switching output	Ampacity at resistive load	Contact life ^a	Special features
Relay output, dual normally open contacts	2 normally open contacts ^b	3 A at AC 250 V	150,000 switching cycles	-
Relay output, single Changeover contact	1 changeover contact			-
Solid state relay triac	Switching output with triac (protected by varistor) ^c	1 A at AC 230 V	Wear-free	-
PhotoMOS® ^e solid state relay	Switching output with PhotoMOS® ^d	200 mA at DC 45 V and/or AC 30 V	Wear-free	not short-circuit-proof; max. voltage DC 45 V AC 30 V
Logic output 0/12 V	High/low signal	20 mA ^e	Wear-free	-
Logic output 0/22 V	High/low signal	30 mA ^e	Wear-free	-

^a The maximal ampacity of the contacts must not be exceeded.

^b Combining a mains voltage circuit with a protective low-voltage circuit on the "dual normally open contact" option is not admissible.

^c A varistor protects the triac against excessive voltages such as those that can occur during switching.

^d PhotoMOS® is a registered trademark of Panasonic.

^e Current limiting via the logic output of the device

23.8 Voltage supply outputs base unit

Description	Output voltage	Ampacity	Connection
DC 12 V/24 V voltage supply ^a (e.g. for external transmitters)	DC 12 V +15 / -25%	25 mA	Spring-cage terminals
	DC 24 V +5 / -5 %	42 mA	
DC ±5 V voltage supply (e.g. for ISFET pH-sensors)	DC +5 V +10 / 0 %	200 mA	
	-5 V DC ±15%	40 mA	

^a based on order code

23 Technical data

23.9 Voltage supply outputs, power supply unit board

Description	Output voltage	Total ampacity ^a	Connection
PWR OUT	AC 110 to 240 V +10/-15%; 48 to 63 Hz or AC/DC 20 to 30 V; 48 to 63 Hz	4 A	Spring-cage terminals

^a The sum total of the output currents for the two PWR OUT connections must not exceed the total ampacity.

23.10 Voltage supply outputs, optional board

Description	Output voltage	Ampacity	Connection
DC 24 V voltage supply for external transmitters ^a	DC 24 V +5 / -5 %	42 mA	screw terminals
DC ± 5 V voltage supply (e.g. for ISFET pH-sensors)	DC +5 V +10 / 0 % (between terminals 3 and 4)	150 mA	
	DC -5 V ± 15 % (between terminals 5 and 4)	30 mA	

^a An optional board for voltage supply outputs accommodates all the outputs listed in this table. A maximum of 1 such optional board can be integrated into a device.


23.11 Interfaces

23.11.1 Serial Interface RS422/485 (base unit and optional board)

Protocols	Data formats ^a	Device addresses	Baud rates in baud	Connection
Modbus slave Modbus digital sensors	8 - 1 - no parity 8 - 1 - odd parity 8 - 1 - even parity	1 to 254	9600 19200 38400	Base unit: Spring-cage terminals Option: Screw terminals

^a Specification in useful bit - stop bit - parity format. Therefore, the frame always comprises 8 useful bits and 1 stop bit. Only the parity is differentiated.

23.11.2 PROFIBUS-DP (optional board)

Protocol	Data formats ^a	Device addresses	Baud rates	Connection
DP-V0	Big Endian Little Endian	0 to 127	9.6 kBaud to 12 MBaud	D-sub socket 9-pole 

^a Big Endian corresponds to the Motorola[®] data format and Little Endian to Intel[®] data format.

23.11.3 Sampling rates for digital sensors


with up to 2 digital sensors with baud rate = 9600 and generally with baud rate > 9600 baud ^a	500 ms
at baud rate = 9600 baud and more than 2 digital sensors on the bus ^b	1 s

^a Baud rates above 9600 are supported only by JUMO tecLine sensors and JUMO sensors with JUMO digiLine electronics. JUMO ecoLine sensors support only a baud rate of 9600.

^b For JUMO ecoLine O-DO sensors, the sample rate can be adjusted (1 to 999 s).

23 Technical data

23.11.4 Ethernet optional board (10/100Base-T)

Function	Use	Application protocol/ program	Special features	Connection
Web server	Online visualization via web browser	HTTP	Editable via HTML Editor	RJ 45 socket 
E-mail/SMS text message ^a	E-mail dispatch via SMTP server Transmission as SMS text message	SMTP	5 e-mail templates can be stored, up to 3 recipients for each e-mail template	
Modbus TCP/IP	Process data exchange with Modbus users ^b	Modbus TCP/IP	TCP Port: 502	
Automatic IP-configuration	Network administration ^c	DHCP	-	
Setup via PC	Device settings via PC setup program	JUMO PC setup program (HTTP)	-	
Recording function ^d	Extract, archive, evaluate measurement data	JUMO PCC and PCA 3000	-	

^a The e-mail function allows the device, when triggered by internal and/or external binary signals, to send hard-programmed messages. This requires the data of an SMTP server (E-mail intermediate server) to be known. The e-mail function can be configured exclusively via the PC setup program.



^b Modbus TCP/IP enables Modbus users to communicate via a LAN, provided this is connected to the LAN (e.g. via gateways). To configure Modbus communication you will require the interface description for the JUMO AQUIS touch S.

^c Enlist the help of your network administrator or an IT specialist for the IP-configuration.

^d The recording function stores measurement data in a ring buffer inside the device. Further details appear on Page 415.

23 Technical data

23.11.5 USB interfaces base unit

Interface	Use	Support	Connection	Version
USB host interface (optional ^a)	Extract measurement data memory ^b , Read/write device settings, Save service data ^c Update the firmware	USB flash drive	USB port Type A 	USB 2.0
USB device interface	Device setting via PC setup program, Extract, archive, evaluate measurement data	JUMO PC setup program, JUMO PCC/PCA 3000 software	USB port Type Mini-B 	

^a Use requires the USB host socket (see Chapter 4.2 "Order details", page 25, Extra Code 269).

^b The recording function stores measurement data in a ring buffer inside the device.

^c Service data can be stored on a USB flash drive for diagnostic purposes.

23 Technical data

23.12 Electrical data

Voltage supply (switch-mode)	AC 110 to 240 V +10/-15%; 48 to 63 Hz or AC/DC 20 to 30 V; 48 to 63 Hz
electrical safety	According to EN 61010, part 1 overvoltage category III, pollution degree 2
Max. power consumption AC 110 to 240 V AC/DC 20 to 30 V	53.7 VA 26.2 VA
Data backup	Flash memory
Electrical connection	Spring-cage terminals and screw terminals Specifications for conductor cross-sections ⇒ Chapter 6.2.4 "Conductor cross-sections for base unit and power supply unit", page 48
electromagnetic compatibility (EMC): Interference emission Interference immunity	DIN EN 61326-1 Class A – only for industrial use – Industrial requirements

23.13 Screen Touchscreen

Type	TFT-touchscreen
Touchscreen sensors	Resistive (can also be operated wearing gloves)
Display protection	Plastic film for protection against damage and scratches
Size	5.5"
Resolution	320 × 240 pixel
Color depth	256 colors
Viewing angle	Horizontal: ±70° Vertical: -70 to +50°

23.14 Housing

geographic height for operation	maximum 2000 m above sea level	
Case type	Surface-mounted case made of plastic (ABS) for indoor use only	
Materials	Terminal compartment cover screws: 1.4567 stainless steel Mounting plate: 1.4301 stainless steel	
Dimensions	301.5 mm × 283.2 mm × 120.5 mm	
Ambient temperature	-5 to +50 °C on device version with voltage supply AC 110 to 240 V -5 to +45 °C on device version with voltage supply AC/DC 20 to 30 V	
Storage temperature	-30 to +70 °C	
Resistance to climatic conditions	Relative humidity < 92 % annual average, no condensation	
Operating position	any, with due consideration for the viewing angle of the screen	
Protection type	According to DIN EN 60529	
Closed case	IP67	
Open case	IP20	
Cable inlets		
Scope of delivery	Cable fittings:	
Standard version	6× M12 × 1.5 3× M16 × 1.5	
Full configuration kit (see accessories)	Cable fittings: 9× M12 × 1.5 2× M16 × 1.5 2× M20 × 1.5	
Weight without holder for wall mounting (fully configured)	3390 g	
Weight of holder for wall mounting	790 g	
Installation torques for cable fittings	0.7 Nm	for M12 × 1.5
	2 Nm	for M16 × 1.5
	2.7 Nm	for M20 × 1.5

23 Technical data

23.15 Functions

23.15.1 Controller channels

Number	4
Controller type	Two-state controller Three-state controllers Continuous controller Coarse/fine controller Modulating controllers proportional controller with integrated actuator driver
Controller structure	P, PI, PD, PID
Controller outputs	For each controller channel, 2 outputs configurable as: pulse length output, pulse frequency output (maximal 240 pulses per minute), continuous output
Disturbance feedforward control	multiplicative and/or additive ^a
Autotuning	step response method
Sampling rate	250 ms

^a Ena. variable disturbance permits consideration of influencing variables in the process environment beyond the actual value alone. This keeps the control response stable, even when fluctuations in such ambient conditions occur.

23.15.2 Recording function

	Data monitor	Recording function (also available)
Number of groups ^a	4	4
Number of input variables per group	4× analog 3× digital	4× analog 3× digital
Recording / Memory rate	1 to 3600 s	1 to 3600 s
Memory values	Current value Average value Minimum value Maximum value	Current value Average value Minimum value Maximum value
Size of the ring buffer ^b	sufficient for 150 entries ^c	sufficient for approx. 31 million entries ^c
History function ^d	No	Yes
Archiving/evaluation	No	Yes (via JUMO PCA3000 evaluation software)

^a A freely configurable set of input variables can be pooled in one group.

Each group has its own display screen. The group affiliation is considered for data storage to enable evaluation via PC.

^b The measurement data are stored in a ring buffer. When the ring buffer is full, the recording function starts to overwrite the measured-value history at the beginning of the ring buffer.

^c This information is based on 4 analog values and 3 binary values, and is provided for orientation. The total is for both groups.

^d The history function allows the user to scroll the diagram back in the recording time period. All measured data stored in the ring buffer can thus be viewed on the device.

23.15.3 Customized linearization

Number of grid points ^a	up to 40 value pairs
Interpolation ^b	Linear
Formula entry ^c	4th degree polynomial

^a An approximate characteristic line can be entered by inputting grid points (value pairs of the customer-specific characteristic line).

^b Linear interpolation means forming a slope function from 2 grid points.

^c As an alternative to entering support points, a customer-specific characteristic curve can also be entered as a formula in the form of a polynomial.

23 Technical data

23.16 Approvals / approval marks

c UL us	
Test facility	Underwriters Laboratories
Certificates / inspection numbers	E201387
Inspection basis	UL 61010-1 (3. Edition), CAN/CSA-C22.2 No. 61010-1 (3. Edition)
Valid for	Typ 202581/...

24.1 Troubleshooting and remedies for digital sensors

24.1.1 Possible faults on sensors with JUMO digiLine electronics

Fault symptom	Possible cause	Remedy
A sensor is not detected after being connected and is also not visible for manual linking (cf. Chapter "Sub-menu for linking", page 105).	The serial interface of the device concerned is configured incorrectly.	Check the following serial interface setting: Protocol: Modbus digital sensors
	More than 6 digital sensors were connected.	Ensure that no more than 6 digital sensors are connected to a JUMO AQUIS touch S.
	The voltage supply for powering the sensor electronics is inadequate.	Ensure compliance with the specifications in the tables for planning the cabling for digital sensors. ⇒ Chapter 24.2 "Planning the cabling for digital sensors", page 423

24 Annex

Fault symptom	Possible cause	Remedy
Sensors are not linked	<p>The JUMO AQUIS touch S cannot unambiguously assign the sensors to specific inputs for digital sensors. Possible causes:</p> <ul style="list-style-type: none"> Several sensors with JUMO digiLine electronics of the same kind that were not yet linked to the device were connected simultaneously. Several inputs were configured for digital sensors of the same kind and show the status "Installation". 	<p>Follow the instructions in the operating manual for startup of digital sensors.</p> <p>Sensors with JUMO digiLine electronics of the same kind must be put into operation individually. Sensors with JUMO digiLine electronics can only be linked to inputs for digital sensors if the configuration of the input matches the type of sensor.</p> <p>If "TAG check" is activated in the configuration of an input for digital sensors, the "Sensor TAG" must match the "TAG number" in the configuration of the JUMO digiLine electronics to be linked.</p>
	"TAG check" is activated in the configuration of the input for digital sensors concerned and the "Sensor TAG" does not match the "TAG number" in the configuration of the JUMO digiLine electronics to be linked.	⇒ Chapter 7.2 "Digital sensors", page 76
	No suitably configured input for digital sensors is available for the type of sensor (status "Installation").	⇒ Chapter 8.2.7 "Digital sensors", page 103
	The interface configuration of the JUMO digiLine electronics concerned does not match the interface settings of the JUMO AQUIS touch S (baud rate or data format)	Perform a manual bus scan (see Chapter "Submenu for linking", page 105).
	The data of JUMO digiLine electronics required for linking do not match any configured input for digital sensors, because a sensor with JUMO digiLine electronics was replaced or removed from the bus and incorrectly reconfigured via the JUMO DSM software.	<p>Try to link the sensor with JUMO digiLine electronics through a manual bus scan (cf. Chapter "Submenu for linking", page 105).</p> <p>If this fails, check the settings of the JUMO digiLine electronics and of the corresponding input for digital sensors. Identical type information must be set on both sides. When the TAG test is activated, the TAG number must be identical on both sides.</p>

Fault symptom	Possible cause	Remedy
Some of the connected sensors malfunction sporadically. (bus status appears as "Yellow" in the title bar of the user interface and in the "Alarm list") ^a	Poor contact in the bus cabling	Check for reliable contact at all plug connectors and terminals in the JUMO AQUIS touch S. Inspect the cabling for damage. The occurrence and clearing of bus faults is recorded in the "Event list". This allows you to use the entries to investigate sporadic bus faults.
Individual sensors malfunction continuously. ("Bus fault" is signaled in the title bar of the user interface and in the "Alarm list")	Poor contact in the bus cabling	Check for reliable contact at all plug connectors and terminals in the JUMO AQUIS touch S. Inspect the cabling for damage.
	Defect in the sensor electronics	Replace the sensor electronics.
All sensors connected to the bus simultaneously malfunction continuously. ("Bus fault" is signaled in the title bar of the user interface and in the "Alarm list")	The bus voltage supply has failed.	Diagnose the failure of the voltage supply with a multimeter and replace the faulty voltage source or correct the short-circuit in the voltage supply.

^a See Chapter 8.3.1 "Alarm list", page 109 if a "Bus fault" is signaled.

24 Annex

24.1.2 Possible faults on digital JUMO ecoLine and tecLine sensors

Fault symptom	Possible cause	Remedy
A sensor is not detected after being connected and is also not visible for manual linking (cf. Chapter "Submenu for linking", page 105).	The serial interface of the device concerned is configured incorrectly.	<p>Check the following serial interface setting:</p> <p>Protocol Modbus digital sensors</p> <p>Baud rate</p> <ul style="list-style-type: none"> • with JUMO ecoLine sensors: 9600 • only JUMO tecLine sensors and sensors with JUMO digiLine electronics: 9600, 19200 or 38400 <p>Data format</p> <ul style="list-style-type: none"> • with JUMO ecoLine sensors: 8 - 1 - no parity • only JUMO tecLine sensors and sensors with JUMO digiLine electronics: 8 - 1 - no parity 8 - 1 - odd parity 8 - 1 - even parity
	Two or more sensors of the same kind were connected.	<p>Follow the instructions in the operating manual for startup of digital sensors.</p> <p>Digital JUMO ecoLine and tecLine sensors must be put into operation individually.</p> <p>⇒ Chapter 7.2 "Digital sensors", page 76</p> <p>⇒ Chapter 8.2.7 "Digital sensors", page 103</p>
	Several digital JUMO ecoLine or tecLine were connected to the same device address, causing collisions during bus communication.	
	More than 6 digital sensors were connected.	<p>Ensure that no more than 6 digital sensors are connected to a JUMO AQUIS touch S.</p>
see previous page	The voltage supply for powering the sensor electronics is inadequate.	<p>Ensure compliance with the specifications in the tables for planning the cabling for digital sensors.</p> <p>⇒ Chapter 24.2 "Planning the cabling for digital sensors", page 423</p>

Fault symptom	Possible cause	Remedy
A sensor is not detected after being connected and is also not visible for manual linking (cf. Chapter "Sub-menu for linking", page 105).	The device address of the sensor is outside the range provided for the sensor type.	<p>The device address must be set to the base address for the particular sensor type using the JUMO DSM software. Then, the sensor must be put into operation at the JUMO AQUIS touch S (initial startup).</p> <p>Base addresses</p> <ul style="list-style-type: none"> • JUMO ecoLine O-DO (Type 202613): 10 • JUMO tecLine CI2 (Type 202630): 20 • JUMO tecLine TC (Type 202631): 30 • JUMO ecoLine NTU (Type 202670): 40 • JUMO tecLine O3 (Type 202634): 50 • JUMO tecLine H2O2 (Type 202636): 60 • JUMO tecLine PAA (Type 202636): 70 • JUMO tecLine ClO2 (Type 202634): 80 • JUMO tecLine BR2 (Type 202637): 90 • JUMO tecLine CI2 (Type 202638): 100
Sensors are not linked	No suitably configured input for digital sensors is available for the type of sensor (status "Installation").	Digital JUMO ecoLine and JUMO tecLine sensors can only be linked to inputs for digital sensors if the configuration of the input matches the type of sensor.
<p>Some of the connected sensors malfunction sporadically.</p> <p>("Bus fault" is signaled in the title bar of the user interface and in the "Alarm list")</p>	Poor contact in the bus cabling	Check for reliable contact at all plug connectors and terminals in the JUMO AQUIS touch S. Inspect the cabling for damage. The occurrence and clearing of bus faults is recorded in the "Event list". This allows you to use the entries to investigate sporadic bus faults.
<p>Individual sensors malfunction continuously.</p> <p>("Bus fault" is signaled in the title bar of the user interface and in the "Alarm list")</p>	<p>Poor contact in the bus cabling</p> <p>Defect in the sensor electronics</p>	<p>Check for reliable contact at all plug connectors and terminals in the JUMO AQUIS touch S. Inspect the cabling for damage.</p> <p>Replace the sensor electronics.</p>

24 Annex

Fault symptom	Possible cause	Remedy
All sensors connected to the bus simultaneously malfunction continuously. ("Bus fault" is signaled in the title bar of the user interface and in the "Alarm list")	The bus voltage supply has failed.	Diagnose the failure of the voltage supply with a multimeter and replace the faulty voltage source or correct the short-circuit in the voltage supply.

24.2 Planning the cabling for digital sensors

24.2.1 Introduction

JUMO offers a number of different digital sensors for the JUMO AQUIS touch S. In addition to the voltage outputs of the JUMO AQUIS touch S, there is also the possibility to supply the bus by means of a power supply unit in conjunction with the JUMO digiLine hub to ensure a stable voltage supply for all sensors on the JUMO digiLine bus. Planning correct installation of the various digital sensors from JUMO is discussed in detail in the following chapters.

24.2.2 Voltage supply to the bus with DC 5 V from a JUMO AQUIS touch S

The cable length information in this subchapter applies when supplying **JUMO ecoLine sensors as well as pH, redo, and temperature sensors with JUMO digiLine electronics** from a DC 5 V voltage supply output on the JUMO AQUIS touch S. In this case, stub lines and also be supplied from a JUMO digiLine hub or through use of JUMO Y-splitters. If a JUMO digiLine hub is used, the slide switch on the JUMO digiLine hub must be set to DC 5 V as input voltage. In this setting, the DC 5 V input voltage is passed through to the outputs of the JUMO digiLine hub.

24 Annex

Bus cabling in line topology

In the line topology, the bus line must be provided with terminating resistors at both ends wherever possible, in order to avoid transmission interference through reflections. If JUMO ecoLine sensors are used, however, terminating resistors must not be employed. You should therefore use terminating resistors only in a JUMO digiLine bus without JUMO ecoLine sensors. M12 terminating connectors are available from JUMO for the bus termination.

⇒ Chapter 4.4 "Accessories", page 29

Terminating resistors can be activated via DIP switch on the options board for serial interface RS422/485.

⇒ Chapter "Interfaces for data and bus communication - Optional boards", page 71

Sensor type	Max. length of bus line ^a	Max. length of stub lines ^b	Max. number of connectable sensors	Comment
JUMO digiLine pH/ORP/T	100 m	10 m	6	max. admissible voltage drop between DC 5 V supply and the last sensor: 1.0 V
JUMO ecoLine O-DO JUMO ecoLine NTU	100 m	10 m	6	Bus termination not admissible; max. admissible voltage drop between DC 5 V supply and the last sensor: 1.3 V
JUMO digiLine CR/Ci	Because of the energy requirement, installation of a JUMO digiLine hub with separate power supply the unit is required for connection of JUMO digiLine CR/Ci devices. The voltage supply from the JUMO AQUIS touch S is not sufficient in this case. ⇒ Chapter 24.2.5 "Voltage supply of the bus for JUMO digiLine CR/Ci", page 429			

^a The maximum length of the bus line depends on the number and type of connected sensors and on how they are distributed along the bus line. Due to the widely varying current consumptions of the different sensor types, it is difficult to state a general value that will apply for all installation situations. In case of doubt, it is advisable to carry out a voltage drop calculation during the planning phase (cf. Chapter 24.2.6 "Voltage drop calculation", page 430).

^b Stub line from a JUMO digiLine hub or Y-splitter up to a digital sensor.

Bus cabling in star topology

Bus terminations should not be used for star topology (with stub line). Transmission over stub lines is unproblematic. The use of numerous terminating resistors in a bus, however, can severely disrupt the signal.

Sensor type	Maximum length per branch	Max. number of connectable sensors	Comment
JUMO digiLine pH/ ORP/T	50 m	6	Bus termination is not permissible
JUMO ecoLine O-DO JUMO ecoLine NTU	50 m	6	Bus termination is not permissible
JUMO digiLine CR/Ci	Because of the energy requirement, installation of a JUMO digiLine hub with separate power supply the unit is required for connection of JUMO digiLine CR/Ci devices. The voltage supply from the JUMO AQUIS touch S is not sufficient in this case. ⇒ Chapter 24.2.5 "Voltage supply of the bus for JUMO digiLine CR/Ci", page 429		

24 Annex

24.2.3 Voltage supply to the bus with DC 5 V from a JUMO digiLine hub

The line length specifications in this subchapter apply when supplying **JUMO ecoLine sensors and sensors with JUMO digiLine electronics** with DC 5 V from a JUMO digiLine hub. In this case, the JUMO digiLine hub must be supplied with DC 24 V. The slide switch on the JUMO digiLine hub must be set to the position for DC 24 V as the input voltage. The electronics of the JUMO digiLine hub generate the bus supply voltage of DC 5 V internally and supply its outputs with this voltage.

Bus cabling in line topology

In the line topology, the bus line must be provided with terminating resistors at both ends wherever possible, in order to avoid transmission interference through reflections. If JUMO ecoLine sensors are used, however, terminating resistors must not be employed. You should therefore use terminating resistors only in a JUMO digiLine bus without JUMO ecoLine sensors. M12 terminating connectors are available from JUMO for the bus termination.

⇒ Chapter 4.4 "Accessories", page 29

Terminating resistors can be activated via DIP switch on the options board for serial interface RS422/485.

⇒ Chapter "Interfaces for data and bus communication - Optional boards", page 71

Sensor type	Max. length of bus line ^a	Max. length of stub lines ^b	Max. number of connectable sensors	Comment
JUMO digiLine pH/ORP/T	200 m	10 m	6	-
JUMO ecoLine O-DO JUMO ecoLine NTU	200 m	10 m	6	Bus termination is not permissible
JUMO digiLine CR/Ci	Because of the energy requirement, installation of a JUMO digiLine hub with separate power supply the unit is required for connection of JUMO digiLine CR/Ci devices. The voltage supply from the JUMO AQUIS touch S is not sufficient in this case. ⇒ Chapter 24.2.5 "Voltage supply of the bus for JUMO digiLine CR/Ci", page 429			

^a The maximum length of the bus line depends on the number and type of connected sensors and on how they are distributed along the bus line. Due to the widely varying current consumptions of the different sensor types, it is difficult to state a generate value that will apply for all installation situations. In case of doubt, it is advisable to carry out a voltage drop calculation during the planning phase (cf. Chapter 24.2.6 "Voltage drop calculation", page 430).

^b Stub line from a JUMO digiLine hub or Y-splitter up to a digital sensor.

Bus cabling in star topology

Bus terminations should not be used for star topology (with stub line). Transmission over stub lines is unproblematic. The use of numerous terminating resistors in a bus, however, can severely disrupt the signal.

Sensor type	Maximum length per branch	Max. number of connectable sensors	Comment
JUMO digiLine pH/ORP/T	50 m	6	-
JUMO ecoLine O-DO JUMO ecoLine NTU	50 m	6	Bus termination is not permissible
JUMO digiLine CR/Ci	Because of the energy requirement, installation of a JUMO digiLine hub with separate power supply the unit is required for connection of JUMO digiLine CR/Ci devices. The voltage supply from the JUMO AQUIS touch S is not sufficient in this case. ⇒ Chapter 24.2.5 "Voltage supply of the bus for JUMO digiLine CR/Ci", page 429		

24 Annex

24.2.4 Voltage supply to the bus with DC 24 V

The cable length information in this subchapter applies when supplying **digital JUMO tecLine sensors** with DC 24 V. In this case, stub lines can also be supplied from a JUMO digiLine hub or through use of JUMO Y-splitters. If a JUMO digiLine hub is used, the slide switch on the JUMO digiLine hub must be set to the correct position for the voltage supply being used. There are two possibilities:

- DC 24 V voltage supply from the voltage supply output on the JUMO AQUIS touch S via the bus input of the JUMO digiLine hub
- DC 24 V voltage supply through a separate power supply unit for the JUMO digiLine hub (available from JUMO, part no.: 00646871)

In both settings, the respective DC 24 V input voltage is fed through to all bus connections on the JUMO digiLine hub.

Bus cabling in line topology

In the line topology, the bus line must be provided with terminating resistors at both ends wherever possible, in order to avoid transmission interference through reflections. If JUMO ecoLine sensors are used, however, terminating resistors must not be employed. You should therefore use terminating resistors only in a JUMO digiLine bus without JUMO ecoLine sensors. M12 terminating connectors are available from JUMO for the bus termination.

⇒ Chapter 4.4 "Accessories", page 29

Terminating resistors can be activated via DIP switch on the options board for serial interface RS422/485.

⇒ Chapter "Interfaces for data and bus communication - Optional boards", page 71

Sensor type	Max. length of bus line ^a	Max. length of stub lines ^b	Max. number of connectable sensors	Comment
digital JUMO tecLine sensors (Types 20263x)	100 m	10 m	6	max. admissible voltage drop between DC 24 V supply and the last sensor: 1.5 V

^a The maximum length of the bus line depends on the number and type of connected sensors and on how they are distributed along the bus line. Due to the widely varying current consumptions of the different sensor types, it is difficult to state a generate value that will apply for all installation situations. In case of doubt, it is advisable to carry out a voltage drop calculation during the planning phase (cf. Chapter 24.2.6 "Voltage drop calculation", page 430).

^b Stub line from a JUMO digiLine hub or Y-splitter up to a digital sensor.

Bus cabling in star topology

Bus terminations should not be used for star topology (with stub line). Transmission over stub lines is unproblematic. The use of numerous terminating resistors in a bus, however, can severely disrupt the signal.

Sensor type	Maximum length per branch	Max. number of connectable sensors	Comment
digital JUMO tecLine sensors (Types 20263x)	50 m	6	Bus termination is not permissible

24.2.5 Voltage supply of the bus for JUMO digiLine CR/Ci

Because of their high energy requirement, conductivity sensors with JUMO digiLine electronics (JUMO digiLine CR/Ci, Types 20276x) may only be connected if a JUMO digiLine hub is used. Each hub must be supplied separately with DC 24 V. If necessary, separate power supply units and connecting cables with appropriately sized wires must be used. Only one JUMO digiLine electronics may be connected to each output of the hub. The maximum allowed length of the stub line between the hub and sensor with JUMO digiLine electronics is 10 m. If a longer length is needed, an additional hub must be used.

Sensor type	Max. length of bus line ^a	Max. length of stub lines ^b	Max. number of connectable sensors	Comment
JUMO digiLine pH/ORP/T	200 m	10 m	6	-
JUMO ecoLine O-DO JUMO ecoLine NTU	200 m	10 m	6	Bus termination is not permissible
JUMO digiLine CR/Ci	200 m	10 m	6	-

^a The maximum length of the bus line depends on the number and type of connected sensors and on how they are distributed along the bus line. Due to the widely varying current consumptions of the different sensor types, it is difficult to state a general value that will apply for all installation situations. In case of doubt, it is advisable to carry out a voltage drop calculation during the planning phase (cf. Chapter 24.2.6 "Voltage drop calculation", page 430).

^b Stub line from a JUMO digiLine hub or Y-splitter up to a digital sensor.


24 Annex

24.2.6 Voltage drop calculation

In the case of a JUMO digiLine bus with line topology (Y-adapter or JUMO digiLine hub with 5.3 V through a separate power supply unit) there is inevitably a voltage drop between the supply voltage feed-in and each sensor. The amount of the voltage drop depends on the sensor type, the number of sensors, the length of the bus, and the distribution of the sensors on the bus. Since each sensor requires a minimum voltage for proper operation, the voltage drop needs to be considered in the planning.

In the following description the calculation of the voltage drop is shown with the help of an example.

Bus structure

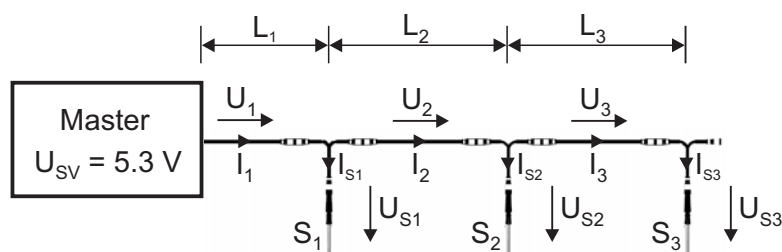

L_x	Length of line segment x (x = 1, 2, 3)
$U_{PS,}$	Supply voltage at the point of feed-in
U_x	Voltage drop at line segment x
I_x	Current through line segment x
S_x	Sensor x
I_{Sx}	Current consumption of sensor x
U_{Sx}	Supply voltage at sensor x

Step 1: Calculate the current in the individual line segments

For the calculation of the current flowing through a line segment, the partial currents of all sensors, which are supplied via this segment, are added. For the bus structure shown above this means:

$$I_1 = I_{S1} + I_{S2} + I_{S3}$$

$$I_2 = I_{S2} + I_{S3}$$

$$I_3 = I_{S3}$$

The current consumption of a sensor is shown in the following table; it applies for Modbus operation without bus termination and a sampling time of 1 second.

Sensor	Average value of current consumption	Peak value of current consumption
JUMO digiLine pH/ORP/T	approx. 17 mA	approx. 20 mA
JUMO ecoLine O-DO	approx. 4 mA	approx. 50 mA
JUMO ecoLine NTU	approx. 2 mA	approx. 60 mA

In the case of bus termination at both ends (120 ohm), the current consumption increases during communication by up to 55 mA.

When operating with JUMO digiLine protocol, collisions occur on the bus during bus scan; this can also lead to increased current consumption. However, this is usually not critical, since there is no measured value processing during the scan

and therefore the supply voltage of the sensor may be lower.

For sensors of type JUMO digiLine pH/ORP/T, the calculation must be performed with the peak values:

$$I_1 = I_{S1} + I_{S2} + I_{S3} = 20 \text{ mA} + 20 \text{ mA} + 20 \text{ mA} = 60 \text{ mA}$$

$$I_2 = I_{S2} + I_{S3} = 20 \text{ mA} + 20 \text{ mA} = 40 \text{ mA}$$

$$I_3 = I_{S3} = 20 \text{ mA}$$

For sensors of type ecoLine O-DO/NTU, the highest peak value is used once and the remaining sensors are considered with their average values. Example for 1 x O-DO and 2 x NTU:

$$I_1 = I_{S1} + I_{S2} + I_{S3} = 4 \text{ mA} + 2 \text{ mA} + 60 \text{ mA} = 66 \text{ mA}$$

$$I_2 = I_{S2} + I_{S3} = 2 \text{ mA} + 60 \text{ mA} = 62 \text{ mA}$$

$$I_3 = I_{S3} = 60 \text{ mA}$$

For further calculation it is assumed that the following sensors are used in the bus structure shown above:

Sensor 1: JUMO digiLine pH (use peak value)

Sensor 2: ecoLine O-DO (use average value)

Sensor 3: ecoLine NTU (use peak value)

Thus, the following currents result:

$$I_1 = I_{S1} + I_{S2} + I_{S3} = 20 \text{ mA} + 4 \text{ mA} + 60 \text{ mA} = 84 \text{ mA} = \mathbf{0.084 \text{ A}}$$

$$I_2 = I_{S2} + I_{S3} = 4 \text{ mA} + 60 \text{ mA} = 64 \text{ mA} = \mathbf{0.064 \text{ A}}$$

$$I_3 = I_{S3} = 60 \text{ mA} = \mathbf{0.06 \text{ A}}$$

Step 2: Calculate the voltage drop on the individual line segments

The cable lengths of the line segments are **20 m** each.

The voltage drop on a line segment is calculated in accordance with the following formula:

$$U_x = \rho \times 2 \times L_x \times I_x / A; \text{ where } \rho = 1/56 \text{ } \Omega\text{mm}^2/\text{m} \text{ and } A = 0.34 \text{ mm}^2$$

In the above example this means:

$$U_1 = \rho \times 2 \times L_1 \times I_1 / A = 1/56 \text{ } \Omega\text{mm}^2/\text{m} \times 2 \times \mathbf{20 \text{ m}} \times \mathbf{0.084 \text{ A}} / 0.34 \text{ mm}^2 = 0.177 \text{ V}$$

Shown in simplified form:

$$U_1 = 1/56 \text{ } \Omega \times 2 \times \mathbf{20} \times \mathbf{0.084 \text{ A}} / 0.34 = \mathbf{0.177 \text{ V}}$$

$$U_2 = 1/56 \text{ } \Omega \times 2 \times \mathbf{20} \times \mathbf{0.064 \text{ A}} / 0.34 = \mathbf{0.135 \text{ V}}$$

$$U_3 = 1/56 \text{ } \Omega \times 2 \times \mathbf{20} \times \mathbf{0.06 \text{ A}} / 0.34 = \mathbf{0.126 \text{ V}}$$

Step 3: Calculate the voltage at the respective sensor

The value of the supply voltage at the respective sensor is given by the supply voltage at the point of feed-in minus the sum of all the voltages which drop on the line segments that are located between the point of feed-in and the sensor.

In the above example this means:

$$U_{S1} = U_{SV} - U_1 = 5.3 \text{ V} - 0.177 \text{ V} = 5.123 \text{ V} \approx \mathbf{5.1 \text{ V}}$$

$$U_{S2} = U_{SV} - U_1 - U_2 = 5.3 \text{ V} - 0.177 \text{ V} - 0.135 \text{ V} = 4.988 \text{ V} \approx \mathbf{5.0 \text{ V}}$$

$$U_{S3} = U_{SV} - U_1 - U_2 - U_3 = 5.3 \text{ V} - 0.177 \text{ V} - 0.135 \text{ V} - 0.126 \text{ V} = 4.862 \text{ V} \approx \mathbf{4.9 \text{ V}}$$

The required minimum voltage of the sensors is shown in the following table.

Sensor	Minimum voltage
JUMO digiLine pH/ORP/T	4.2 V
JUMO ecoLine O-DO	5 V
JUMO ecoLine NTU	5 V

24 Annex

The voltage at sensor 1 (JUMO digiLine pH) is well above the minimum value (4.2 V). The voltage at sensor 2 (ecoLine O-DO) roughly corresponds to the minimum value (5 V). For sensor 3 (ecoLine NTU), the voltage is not enough.


**NOTE**

For the operation of JUMO ecoLine sensors, it is generally recommended to use JUMO digiLine hubs and to generate the DC 5.3 V supply voltage within the JUMO digiLine hub.

**NOTE**

The voltage drop calculation shown here does not apply for the use of JUMO tecLine sensors (types 20263x).

24.3 China RoHS

部件名称	有毒有害物质或元素 Hazardous substances						
							
Product group: 202580/81	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
外壳 Housing (Gehäuse)	O	O	O	O	O	O	
过程连接 Process connection (Prozessanschluss)	O	O	O	O	O	O	
-螺母 Nut (Mutter)	O	O	O	O	O	O	
螺钉 Screw (Schraube)	O	O	O	O	O	O	
<p>本表格依据 SJ/T 11364-2014的规定编制。 (This table is prepared in accordance with the provisions of SJ/T 11364-2014.) O : 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。 (O: Indicates that said hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572.) X : 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。 (X: Indicates that said hazardous substance contained in one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.)</p>							



JUMO GmbH & Co. KG

Street address:
Moritz-Juchheim-Straße 1
36039 Fulda, Germany
Delivery address:
Mackenrodtstraße 14
36039 Fulda, Germany
Postal address:
36035 Fulda, Germany
Phone: +49 661 6003-0
Fax: +49 661 6003-607
Email: mail@jumo.net
Internet: www.jumo.net

JUMO Instrument Co. Ltd.

JUMO House
Temple Bank, Riverway
Harlow, Essex, CM20 2DY, UK
Phone: +44 1279 63 55 33
Fax: +44 1279 62 50 29
Email: sales@jumo.co.uk
Internet: www.jumo.co.uk

JUMO Process Control, Inc.

6733 Myers Road
East Syracuse, NY 13057, USA
Phone: +1 315 437 5866
Fax: +1 315 437 5860
Email: info.us@jumo.net
Internet: www.jumousa.com

